# Cool-A-Zone CoolBox C35 User Manual

## **COOLBOX SPECIFICATIONS**

- 1. The CoolBox is not a toy.
- 2. If the CoolBox is tipped over when the water tank is full, water will spill out.
- 3. Place the CoolBox on a flat surface.
- 4. The water tank, dust screen and cooling pad should be cleaned regularly to avoid peculiar smells and prevent water pump damage.
- 5. To prevent overflow, do not fill the water tank past the maximum fill line.
- 6. When the water tank is out of water the snowflake graphic will blink and you will hear a beeping noise.
- 7. Keep away from fire sources.
- 8. Unplug the power adapter before maintenance.

Туре	Evaporative
Cooling Capacity	175 sq. ft.
Max Air Delivery	353 CFM
Fan Type	Axial
Water Tank Capacity	3.5 qt.
Dimensions	14 x 8 x 14.5 in.
Electrical	16W - Adapter
Weight	5.9 lbs.
Color	Grey

## PREPARATION BEFORE USE

After opening the package, take out the CoolBox, open the clips on both sides of the CoolBox, lift the upper part of the CoolBox and set aside. Reach into the water tank to take out the power adapter. Install the upper part of the CoolBox, and close the clips.









#### FILLING THE WATER TANK

Open the top water hatch and pour water in the CoolBox, being sure not to exceed the maximum water level line.





-1- -2-

#### USING THE COOLBOX CONTROL PANEL

- 1. On/Off Button: Turns the unit ON and OFF
- 2. **Cool Button:** Switches the CoolBox to COOL mode. When COOL mode is on, it will activate the pump and water will be used to evaporatively cool, where as when the COOL mode is OFF, the CoolBox will deactivate the pump and circulate the ambient air. When the water tank is out of water and the COOL button is turned on, the snowflake graphic will blink and you will hear a beeping noise.
- 3. **Airflow + Button:** Increases the fan speed. There are a total of 9 speeds.
- 4. **Airflow Button:** Decreases the fan speed.
- 5. **Natural Wind Button:** Fan speed transitions automatically through medium(6) and low(1) fan speeds to create a natural airflow.
- 6. **Timer Button:** Activates the CoolBox TIMER feature, this will allow for an automatic activation or shutdown of the unit. The timer can only be set in hourly increments between 1-12 hours.
- 7. **Show Button:** Turns the control panel lights ON or OFF.

#### **TROUBLESHOOTING**

Before performing any internal maintenance, ensure your CoolBox unit is powered OFF and UNPLUGGED.

As a general rule of thumb, if your CoolBox is not functioning unplug the unit and wait one minute before attempting any of the solutions below.

- 1. The CoolBox is not cooling:
  - a. Check to see if there is water in the water tank.
  - b. Check to see if the cool button is on. You will see a snowflake graphic on the control panel.
  - c. If there is water in the water tank and the snowflake graphic is displayed, may indicate a damaged water pump or control board
- 2. There is an odor coming from the CoolBox:
  - a. The odor can be caused by a dirty water tank or dirty honeycomb pad. To eliminate the smell, clean the water tank and honeycomb pad.
- 3. The water tank is overflowing:
  - a. The water tank can not be filled past the maximum water level line



#### **ROUTINE MAINTENANCE**

We recommend that you clean your CoolBox unit every two weeks or as needed. Ensure your CoolBox is unplugged and powered off when cleaning and performing maintenance. We recommend draining the tank after each use as dirty water can cause damage to the pump. When storing your CoolBox, ensure to drain the tank, remove the filter, dry them, and cover the unit until next use.







- 1. Cleaning the water tank: Open the clips on both sides of the CoolBox and remove the water tank. Remove the water tank cover. Clean the water tank and cover by hand. It is not dishwasher safe.
- 2. Cleaning the dust screen: Remove the 4 screws from the back panel. Then remove the panel and clean the dust screen with water and a microfiber cloth.
- 3. Cleaning the honeycomb pad: Remove the 4 screws from the back panel. Then remove the back panel and the honeycomb pad. Clean the honeycomb pad with a water hose sprayer and let dry.
- 4. Cleaning the outside of the CoolBox: We recommend soap and water or a mild cleaner with a microfiber cloth. Avoid abrasive cleaners or alcoholbased chemical cleaning agents.



Cool-A-Zone 855-386-2665 www.coolazone.com 5310 Glenmont Drive, Houston TX 77081