




Air Cooler

Model: C75 MINI

Cooling Capacity: 533 sq. ft.
Maximum Air Delivery: 960 CFM
Fan Type: Centrifugal
Water Reservoir: 6.26 gallons
Width: 16 in.
Height: 33.8 in.
Depth: 15 in.
Unit Weight: 20 lbs
Electrical: 110 Volt - 2 Amps

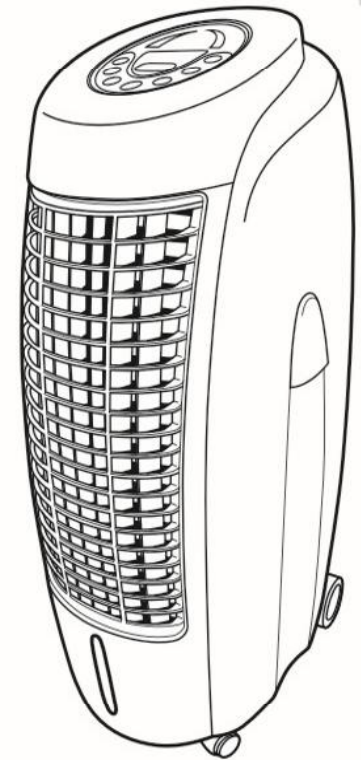

Instruction Manual

Please read this manual carefully before operating this product.
Keep this manual handy for further reference.

SAFETY INSTRUCTION

1. Non-specialized personnel or unauthorized repair personnel shall not repair or modify the machine.
2. It is forbidden to operate with wet hands to avoid electric shock.
3. Any power cord, which suffers from aging and knotting and whose plug is damaged, should be stopped its use immediately, and must be repaired by a professional manufacturer or equally qualified personnel.
4. No cleaning, maintenance or movement of the unit is allowed if it does not switch off.
5. If the unit is not in use for a long time, unplug the power cord.
6. To prevent accidental injury or damage to the unit, please do not insert any foreign matter into the air inlet and outlet, because the unit incorporates a high-speed wind rotor.
7. It is prohibited to use this unit in environments with flammable and explosive gases and direct sunlight for a long period shall be avoided.
8. Do not place this unit in an inclined or other uneven place to prevent the unit from falling and causing damage to the unit or internal parts.
9. This machine is suitable for indoor use instead of outdoor use.
10. At any time the water level in the tank shall not exceed "MAX" (maximum) mark, and during humidification, the total water level in the tank shall be controlled, and shall not be below "MIN" (minimum) mark.
11. After the water tank is fill with water, do not tilt or collide with the unit when placing or moving it. To move the unit, please push it slowly from the side to prevent water overflow.
12. In using the unit, prohibit overturning to avoid any accident. If the unit topples over accidentally, and it contains water, unplug the power cord immediately.
13. Do not place other items on the unit, and covering the outlet is strictly prohibited.
14. When washing the unit appearance, use a damp cloth (or add a little cleaning agent) to wipe, and never use corrosive cleaning agent or solvent for cleaning. Never rinse the unit with water.

TROUBLESHOOTING

In case the product cannot be operated normally after installation, checks shall be made for items described bellow:

1. Power cable unplugged or faulty contact.
2. Honeycomb filter assembly not properly installed.
3. Power Switch on the product or in the display panel not switched on.

MAINTENANCE



Make sure power supply is disconnected before cleaning the product.



Never wash the unit in water. For cleaning, remove components (water tank, honeycomb filter, etc.) and clean them with water and soft brush. Allow them to air-dry before re-assembling.



It is recommended to clean the filtration mesh frequently.



Never clean the product with any abrasive tool or solvent. Clean with detergent and wipe dry with cloth immediately.



Never dismantle the product or attempt to make any modification. Regular check and cleaning of the product is recommended for prolonging its lifespan.



For best results allow the Honeycomb Cooling Media to dry after each use by turning off the cool function 15 minutes before turning the unit off.

STORAGE



FOR PROPER STORAGE: Make sure the "honeycomb filter" is completely dry. Place the air cooler in a low humidity environment.

> Control Panel



- Press [ON/OFF] button to turn on the unit. The cooler will start automatically. It will start at [Mid] for 3 seconds and then revert to work under the memorized status. For first time use, it will start at [Mid] for 3 seconds and then resume to [Low]. Press this button again to off the cooler
- Press [SPEED] button to adjust 3 speeds of air flow (Low >Mid >high).
- Press [COOL] button once to start the evaporative cooling function. The water pump will operate and you will feel the cooler air after the Honeycomb Cooling Media is completely wet. Press this button again to cancel.
- Press [MODE] button to switch between Normal or Sleep Functions.
- Press [left-right SWING] button to activate or deactivate left-right oscillation ↔
- Press [up-down SWING] button to activate or deactivate up-down oscillation ↑↓
- When the air cooler is operating, Press [TIMER] button to set between 1-24 hour timer with hourly incremental intervals. Press this button again to cancel.
- Press [ION] button to activate or deactivate Negative Ion Function.

Note:

- When using humidifying, water level in the water tank must remain under MAX indication; refill water if level gets lower than MIN indication.
- If water level in the tank is below minimum mark, don't use humidification function.
- When the tank water level is lower than the minimum mark, the unit will make buzzing sound, then the water pump stop running, you need add water in order to run humidifying function.
- When the tank water level exceed the MAX mark, the unit will make buzzing sound, to prevent the water from overflow.

- Do not have the air inlet and outlet of the unit close to walls, curtains and other objects, or they may block the airflow and affect air supply.
- When the unit is operating, do not knock at or shock the unit body or it may lead to automatic shut down.
- In summer, the water in the tank may easily deteriorate and generate odor, please change to clean water regularly.
- Do not place the unit directly below the power outlet.
- Do not use the unit around the tub, sprinkler or swimming pool.
- Product repair must be carried out in a designated agency.
- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Indoor use only.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the unit by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the unit.
- When the unit is not in use and before cleaning, unplug the appliance from the outlet.
- Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
- Unplug the appliance during water filling and cleaning.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the main supply.
- Use a soft cloth moist with mild soap to clean, and then use a dry cloth to wipe the unit till dry.

30.


Correct Disposal of product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.


Identification Of Parts

> Name of components

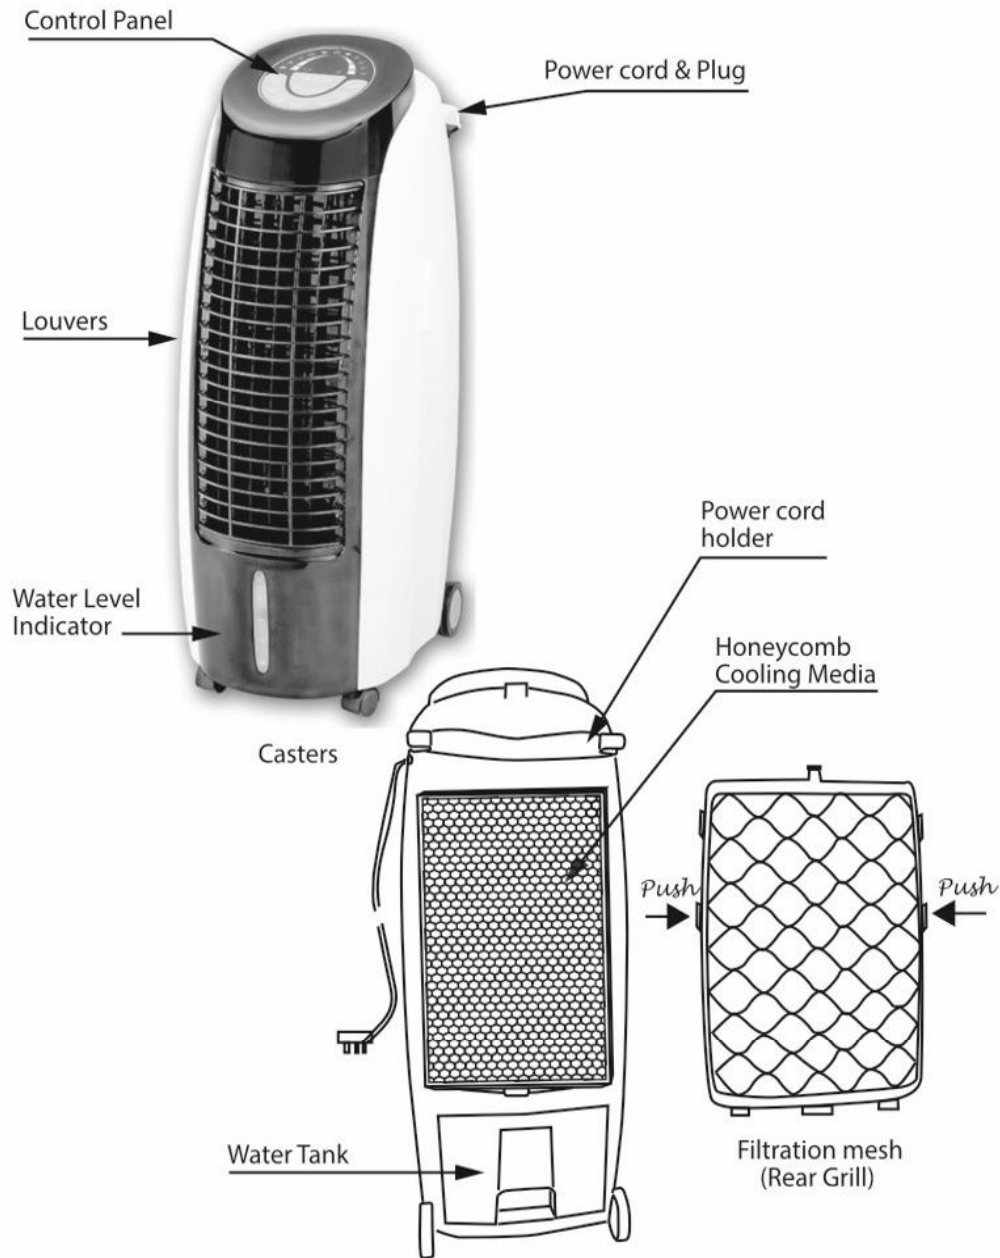

Operating The Unit

> Remote controller

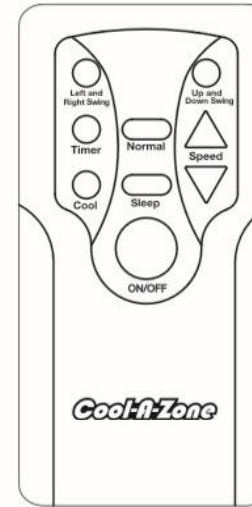

Note:

1. Install the AAA(2x1.5V) battery with correct polarity(+/-) markings shown inside the battery compartment
2. Always point the remote control signal transmitter towards the unit when operating. Make sure that the signal path is not obstructed.
3. Remove the batteries if the unit is not going to be used for an extended period of time.
3. Do not drop the remote control.

ADDING WATER

- Pull the water tank about 10cm outwards, then add water.(Fig. 2)
- Water level must be between MIN and MAX line. (Fig. 3)
- Dirt and dust may occur in water tank, it is recommended to change the water frequently.

