

Quick Start Guide

WINDSHEAR 3200 DRYER/98774

1. Assembly

There is no assembly required. The unit is ready to use right out of the box.

2. Operating Instructions

1. Remove the unit from the box, unwrap the cord, and place it in the desired position. (A, B, or C



2. Plug the cord into an outlet

3. Select the desired speed. (I, II,III)



3. Additional Parts Required

There are no additional parts required for the unit.