## **Cleaning Gravity Feed Transfer Chute**

If your Gravity Feed Smoker is not getting to temperature or slow to get to temperature the transfer chute could be blocked, not allowing heat and smoke to enter the cook chamber. This procedure is used to clean the transfer chute on the G9, G20 and G33. The G33 is shown.

- 1. The smoker must be cold and not in operation to clean the transfer chute.
- 2. Locate the thumb screw on the bottom of the transfer chute near the inside wall of the smoker.





3. Loosen the thumb screw and remove the transfer chute.



3. Empty ash out of the transfer chute and clean any ash out of the tube sticking into the cook chamber from the fire box. Store and dispose of ash properly.



4. Reinstall transfer chute and tighten thumb screw.



