

TRACKER

SAFE

**OWNER USE
AND
CARE MANUAL**

MODEL:

DDPS-01C

Tracker Safe LLC
6317 NE 63rd Street
Vancouver, WA 98661
(360) 213-0363
www.TrackerSafe.com

TABLE OF CONTENTS

What's Included with Your Safe.....	Page 2
Safe Identification.....	Page 3
Setting Up the Safe.....	Page 4-5
Operating the Keypad.....	Page 6
Programing Your Code/Changing Your Code.....	Page 7
Locking the Safe.....	Page 8
Sound ON / OFF.....	Page 8
Tampering Lockout Period.....	Page 8
Low Battery Warning.....	Page 9
Changing the Batteries.....	Page 9
Mounting the Safe.....	Page 10-11
Warranty.....	Page 12
Warranty Registration Form.....	Page 13

WHAT'S INCLUDED WITH YOUR SAFE

- (Qty 2) Keys
- (Qty 1) Mounting Bracket
- (Qty 3) Safe-Bracket Screws
- (Qty 4) Mounting Bracket Screws

Fill this out for future reference.

(Do not store manual in the safe)

Serial Number:

Key Number: *(if applicable)*

Combination:

Original Receipt: *(Attach Here)*

Tracker Safe LLC
6317 NE 63rd Street
Vancouver, WA 98661
(360) 213-0363
www.TrackerSafe.com

SETTING UP THE SAFE

Opening the safe with a key:

- 1) Locate the supplied keys from the packaging and set the safe on a flat surface on its back with the drawer facing up.
- 2) Insert the key into the lock and turn the key clockwise (to the right) until it stops (about a quarter turn). Do not force the key to turn. You may damage the key. (See Figure 1)
- 3) With the key inserted and turned, pull gently on the drawer. The drawer will pivot and then stop on the bumper spring.
- 4) Now that you see how the drawer opens, you can remove it to get to the battery compartment. (*the drawer must be removed to access the battery compartment*)

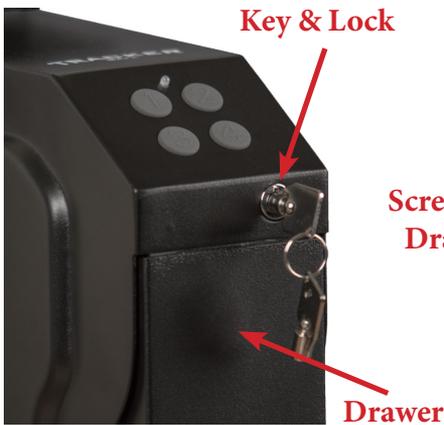


Figure 1

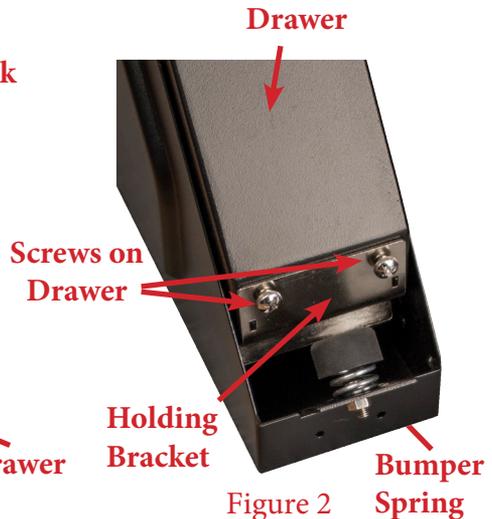


Figure 2

Removing the Drawer:

- 5) Locate the two (2) screws on the bottom of the drawer and remove them with a phillips head screwdriver. Save screws for re-assembly. (See Figure 2)
- 6) Remove the holding bracket. Set aside.
- 7) Follow steps 2-3 to open the drawer with the key again. Then pull the drawer up and away to remove it. Set it aside.

SETTING UP THE SAFE

8) The battery compartment is located at the top of the safe on the underside. Gently push the cover's clip to the back of the safe and pull the cover down and away. (See Figure 3 below)



Figure 3



Figure 4

9) Pull on the ribbon to remove the battery holder.
(See Figure 4 above)

10) Insert four (4) AA **alkaline** batteries with a “use date” of at least five (5) years in the future. Be mindful of the battery orientation.

(Recommended battery brands: Duracell™, Energizer™, Eveready™)

10) Insert the battery holder back into the battery compartment.

11) Re-install the battery cover by inserting the cover's tabs in the slots and rotating it into place until the clip inserts into its slot.

12) Re-install the drawer or leave it un-installed to mount the safe. See “Mounting the Safe” on page 10 and 11. You will need to remove the drawer to mount the safe on the mounting bracket.

The factory code is 1-2-3-4

BUTTON PRESS: Make sure you get an LED light flash after every button press.

WAKE UP BUTTON PRESS: *Please read!*

The first button you press wakes up the keypad. It does not matter which button you press first. It could be any of the four (4) buttons. After you press and release a button then you may enter the code to open the safe. For example, if I were to open the safe and the code was the factory code, I would press and release “button 1” once to wake up the keypad, then I would press and release “button 1” again, then press and release “button 2”, then press and release “button 3”, and then press and release “button 4”. The safe would then open. You could also use button 2, 3, or 4 for the wake up button press. You should factor this wake up button press into your personal code so that it may become part of the habit of opening your safe. (See Figure 4)

Valid Entry: *Please read!*

Each time you press and release a button(s) it is called an entry. The safe may have three (3) to six (6) entries for the user code.

Multiple Button Entry: *Please read!*

You may use multiple buttons at the same time as a single entry. For example, you may press and release the “button 1” and “button 2” at the same time.



Figure 4

PROGRAMMING YOUR CODE

CHANGING YOUR CODE

Open the safe with the key or the factory code. Make sure batteries are installed. (See page 4 and 5 *Opening Your Safe for the First Time*)

1) Press and Hold the “LEARN” Button for three (3) seconds. The green light will blink twice and there will be two (2) audible “beeps” and the light will turn red. Release the button. (See Figure 5 & 6)

2) Enter New Code (Three (3) to Six (6) entries).

3) Press and Hold the “LEARN” Button again for three (3) seconds. The red light will flash and you will hear two (2) audible “beeps”. Then release the button.

4) Enter your New Code again to confirm it.

5) Then Press and Hold the “LEARN” Button a third time for three (3) seconds. The light will blink green five (5) times and you will hear five (5) audible “beeps”. This confirms that the new code has been accepted.

If the red light blinks four (4) times with four (4) audible “beeps” then there was an error in changing the code. The old code is still active. Start over at step one (1) again.



Figure 5 - Front of Safe



Figure 6 - Underside

LOCKING THE SAFE

- 1) Close the drawer and press firmly until you hear a “Click”.
- 2) Check to make sure it is locked by pulling down on the drawer.

SOUND ON/OFF

Turn Sound OFF: Press and hold the “MUTE” button for FIVE (5) seconds. (See Figure 6 on page 7)

Turn Sound ON: Press and hold the “MUTE” button for FIVE (5) seconds. (See Figure 6 on page 7)

TAMPERING LOCKOUT PERIOD

Tampering protection:

If SIX (6) incorrect codes are attempted in a row, the safe will lock out for a period of FIVE (5) minutes in which no codes may be entered. If a button is pressed during the tampering lock out period the safe will “beep” two (2) times.

LOW BATTERY WARNING

The safe's red light will flash THREE (3) times and “beep” THREE (3) times when the keypad is operated to indicate a low battery.

CHANGING THE BATTERIES

Please refer to page 4: Removing the Drawer

At least once a year, replace the four (4) AA alkaline batteries with batteries that have a “use date” of at least 5 years in the future.

(Recommended battery brands: Duracell™, Energizer™, Eveready™)

MOUNTING THE SAFE

Mounting the Safe:

*****ATTENTION**:*** *The safe must be mounted in the vertical position with the bracket attached to the back of the safe or on either side (left or right). The drawer needs gravity to fully release.*

1) Choose a location for the safe and the bracket. Make sure that the safe's drawer has enough clearance to drop open.

2) Fasten the mounting bracket to the desired location using the mounting holes in the bracket. The screws provided are for wood surfaces. (See Figure 5 for hole locations)

(If you are mounting to a different material then please purchase the appropriate hardware from your local hardware store.)

3) Remove the drawer from the safe. See page 4 for the process.

4) Insert the two (2) bracket hooks through the safe's two (2) vertically cut holes. The safe should be able to hang on the hooks. (See Figures 5 and 6)

5) Locate the three (3) thumb screw holes inside the safe that line up with the bracket holes.


6) From inside the safe, insert one of the three thumb screws into one of the holes that line up with the bracket holes. Turn until tight making sure that the screw is going into the mounting bracket. Repeat for the other two screws.

7) Re-install the drawer and the drawer bracket and drawer screws.

8) Test the safe by opening and closing it several times to make sure it is functioning the way you would like.


MOUNTING THE SAFE

Mounting
Holes

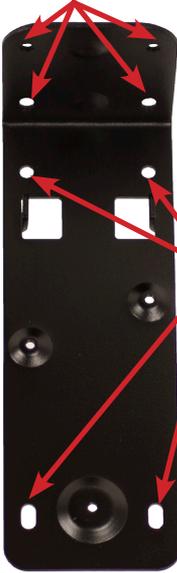

Mounting
Holes

Hooks

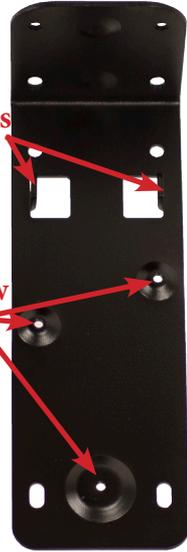

Thumb Screw
Holes

Figure 5 - Bracket

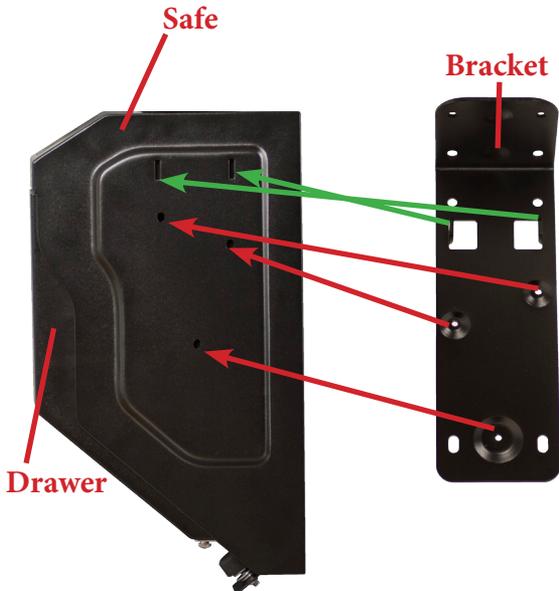


Figure 6 - Safe & Bracket Alignment

WARRANTY

LIMITED WARRANTY

Tracker Safe hereby warrants to the original purchaser that each new safe will be free from defects in materials and craftsmanship for one (1) year. This warranty applies only to safes located in the United States and that have been used for Residential use only.

Safe Contents: This warranty only applies to the Tracker Safe itself; the warranty does not extend to the personal property stored in the safe.

Tracker Safe's obligation under this Limited Warranty is contingent upon proper use, installation, and maintenance of the safe and does not apply to the safe or parts that have been misused, neglected, or exposed to unreasonable wear and tear, or exposed to unusual or extreme environments. Modifying or changing the safe in ways that alter or effect the safe's intended operation or use will void this warranty. The decision to repair a safe in purchaser's home, at the factory, or to replace the safe, is solely that of Tracker Safe. If the safe is to be repaired at the factory or replaced, Tracker Safe will pay for the freight back to the factory. The purchaser is responsible for packaging the safe at their own expense. Tracker Safe does not cover any costs to package, remove or install the safe.

To receive support under Tracker Safe's Limited Warranty the purchaser must provide the following:

- 1) Proof of Purchase
- 2) Warranty Registration Form

Warranty Registration Form: The warranty registration form is located in the Tracker Safe Owner Use and Care Manual that came with the safe. To validate this warranty, the original purchaser must fill out the warranty registration form and mail it to Tracker Safe within sixty (60) days of purchase (or register online at trackersafe.com).

The above warranty is given in place of all other warranties and assurances, whether expressed or implied, including warranties to fitness for purpose, quality, or merchantability. Tracker Safe accepts no liability, under any circumstances, for any incidental or consequential damage or loss suffered by anyone, or to any property, as a result of using or being unable to use the safe.

Any claims arising from this limited warranty shall be resolved in the State of Washington and Washington law will apply to any dispute.

**TRACKER SAFE
WARRANTY REGISTRATION FORM**

Please provide us with a copy of your receipt along with this registration form within sixty (60) days from original purchase date. *Or Register online at TrackerSafe.com*

Name: _____

Address: _____

City: _____

State: _____ Zip: _____

Phone: _____

Email: _____

Date of Purchase: _____

Model Number: _____

Safe Serial Number: : _____

Purchased From: _____

Comments:

Mail to:
Tracker Safe LLC
6317 NE 63rd Street
Vancouver, WA 98661