

Height Adjustable & Reversible Writing Board




Kitchen helper



Green writing board

Activity white writing board

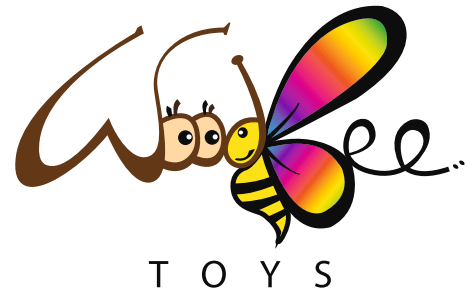


Assembly Instruction Manual



Study desk


4-in-1 Learning Tower

Assembly Instruction Manual

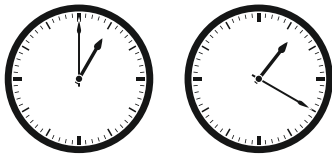


Assembly time : Approx 20 mins.


List of Items

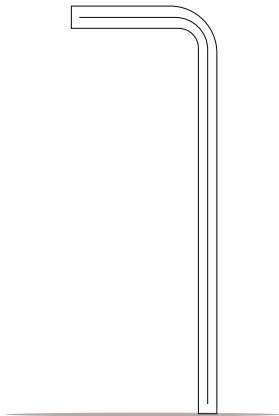


(a)
1 No.
Allen key

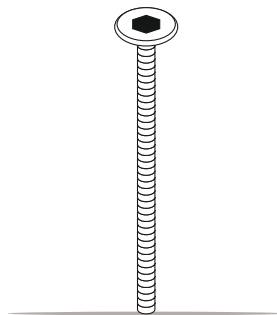

(b)
28 Nos.
Allen bolts

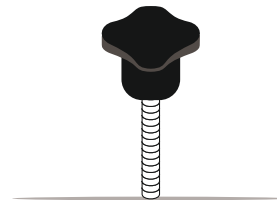

(c)
2 Nos.
Knob Screw

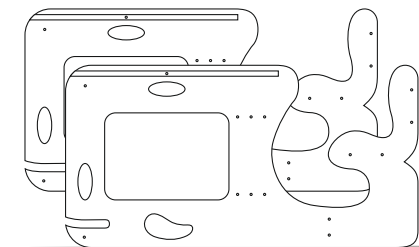


(I)
(2 Nos.)
Main Panels




(II)
(1 No.)
Bottom
panel



 
(III)
(2 Nos.)
Back support
panel and
seat panel



(IV)
(1 No.)
Kitchen
helper
panel

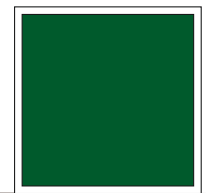

(V)
(1 No.)
Reversible
writing
board

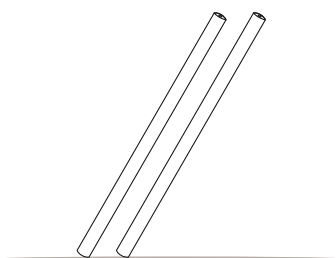

(VI)
2 Nos.
Beech Wood Rods

Note :


- Arrange the panels from shortest width to longest width as shown above.
- Please ensure availability of all materials listed before starting assembly.

4-in-1 Learning Tower

Assembly Instruction Manual



Step 1

Attach the bottom panel (II) to the main frame (I) by using the allen bolts as shown in the picture.

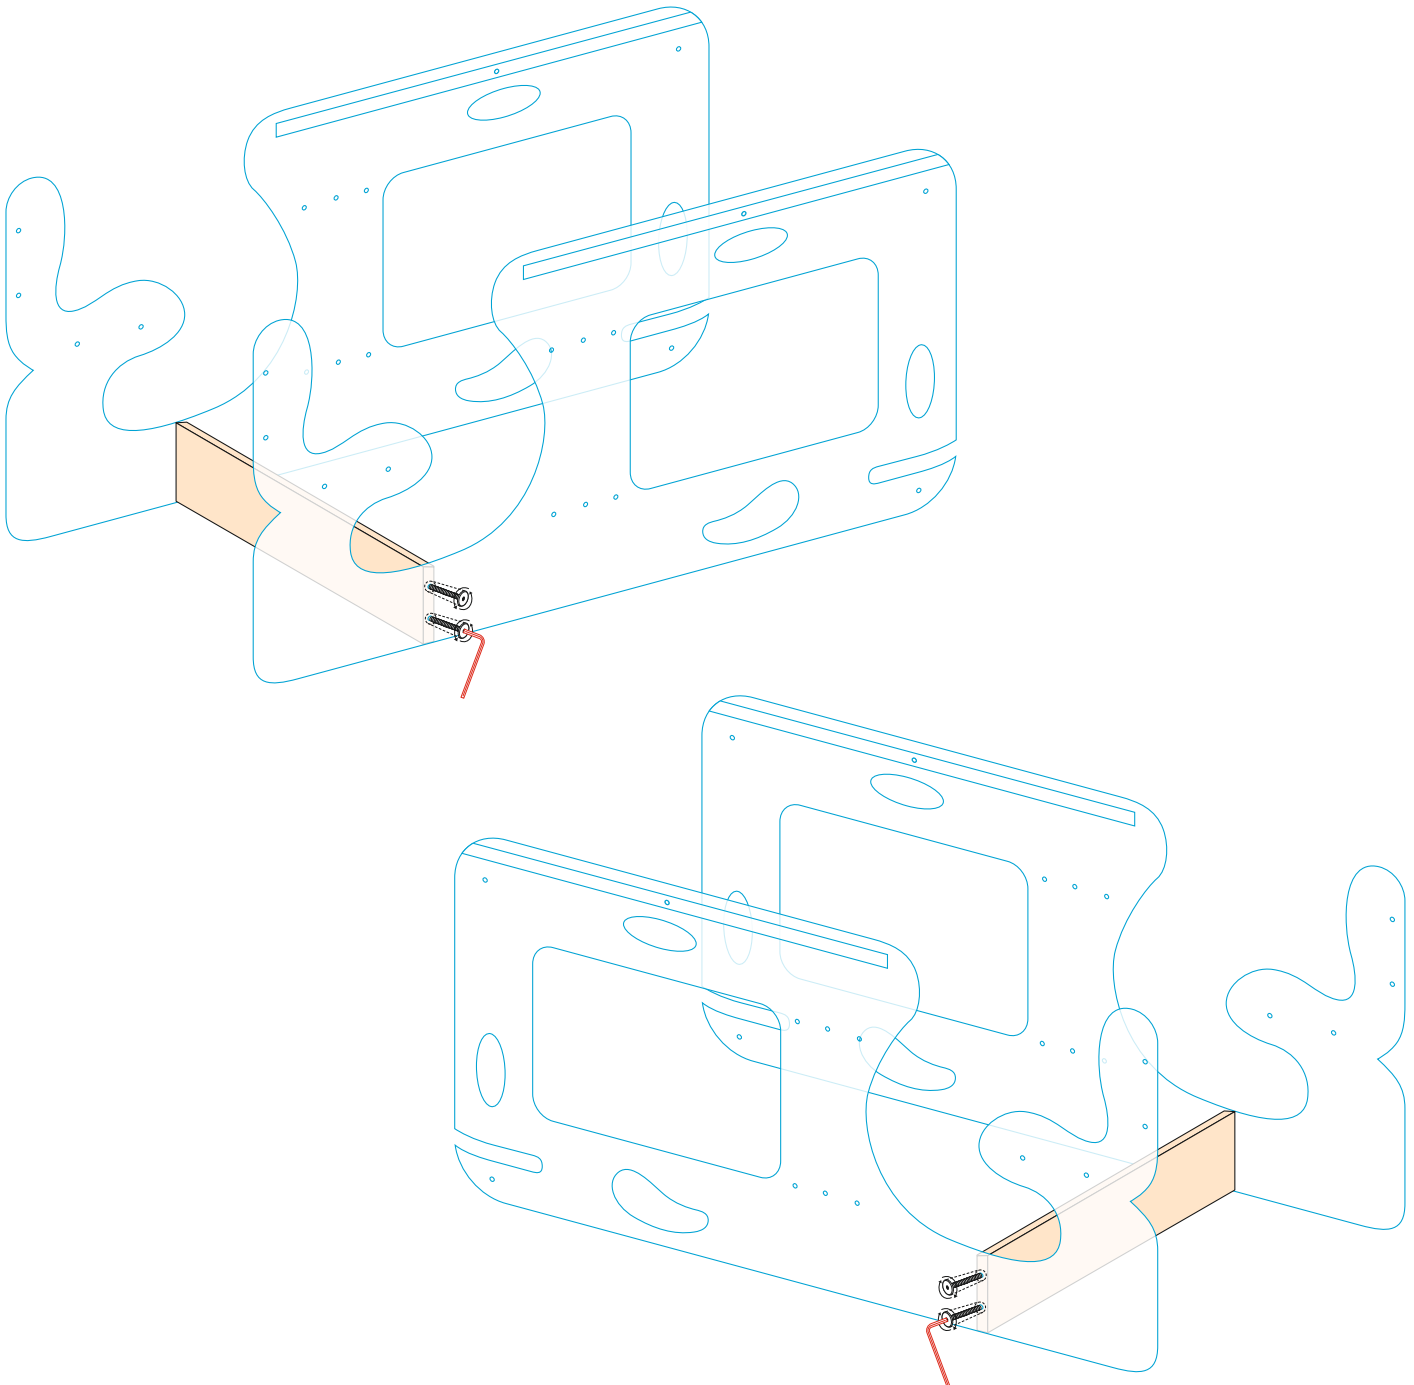



Step 2

Connect the back support panel and seat panel (III) with the allen bolts as shown in the picture to the main frame structure (I) as you did in step 1.

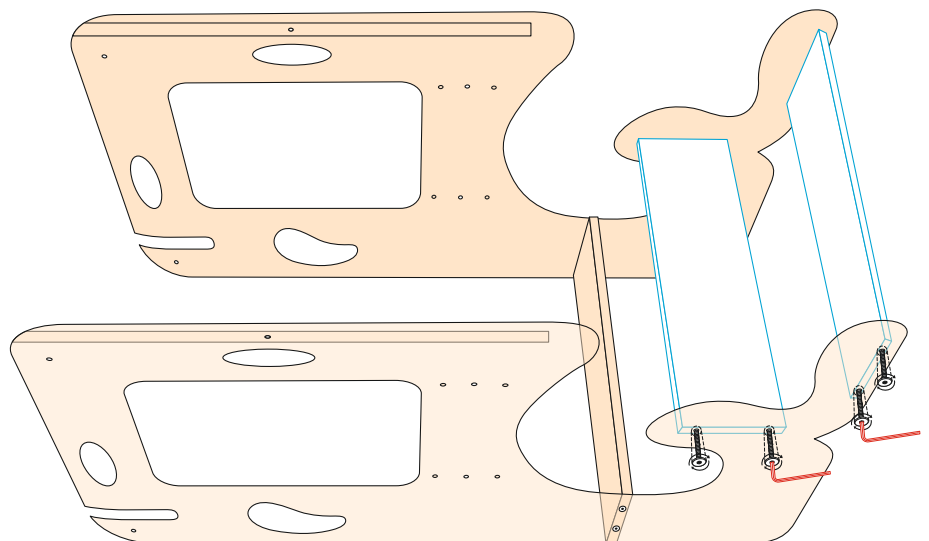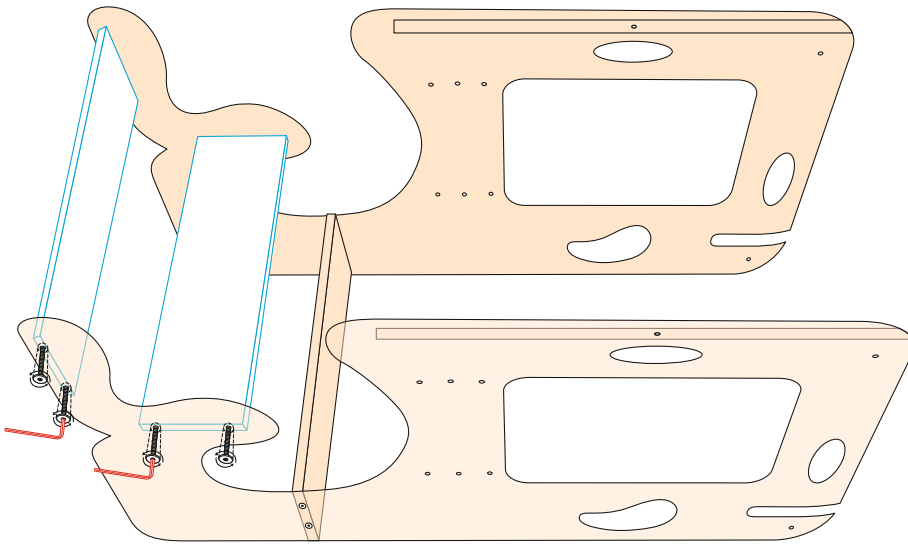

Step 3

Attach the Kitchen helper panel (II) to the main frame structure as shown in step 1 & 2 using allen bolts as shown in the picture.

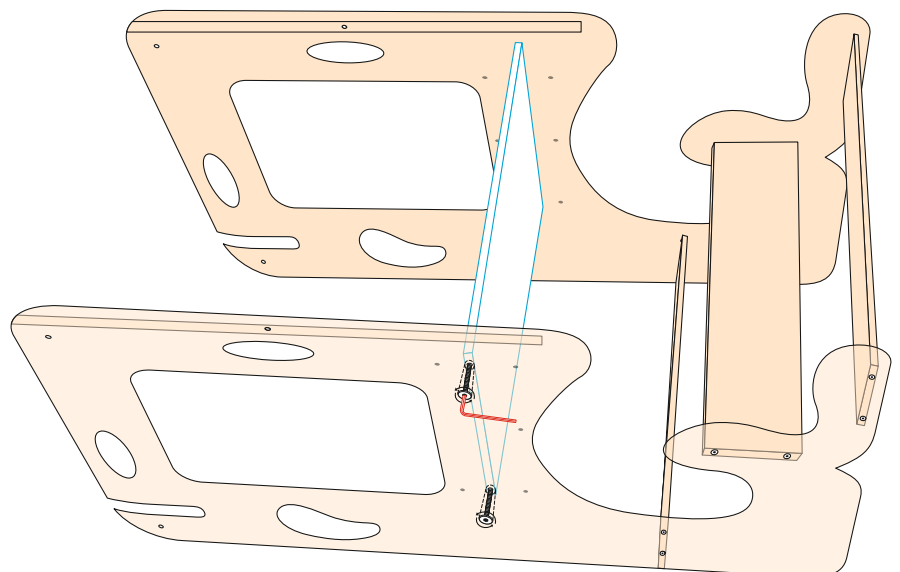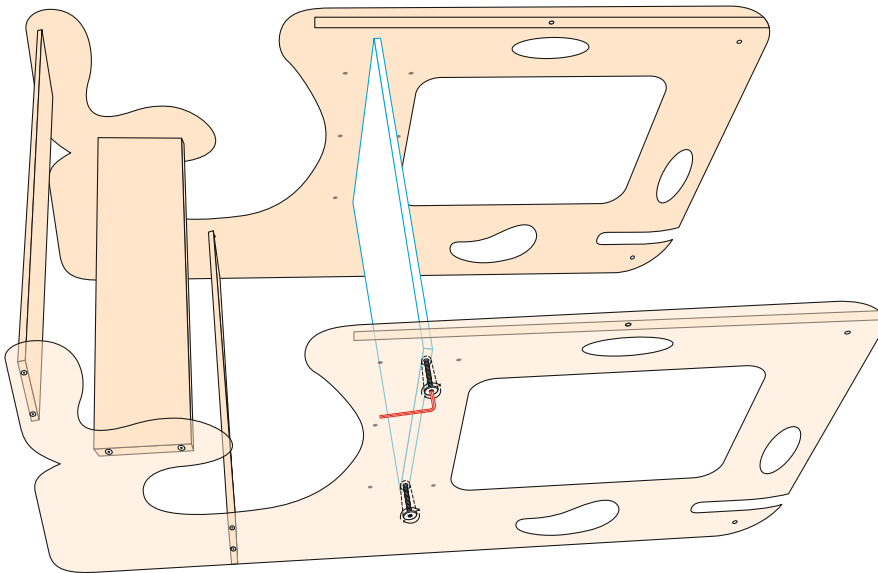

Step 4

Use the allen bolts shown in the picture to attach the two beech wood rods (VI). Insert reversible writing board (V) to the main structure and use the knob screw (c) to screw on the middle hole of activity board as shown in the picture.

