



HADEN

ESTD. ENGLAND 1958



INSTRUCTION MANUAL



PRODUCT CODE: 196842

STOKE KETTLE



How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us
01909 544 570



Email us
info@haden.com




Write to us
**Team Haden, Sabichi Homewares
Ltd, Priorswell Rd, Worksop, S80 2BY**



Visit us
www.haden.com

COMPONENTS

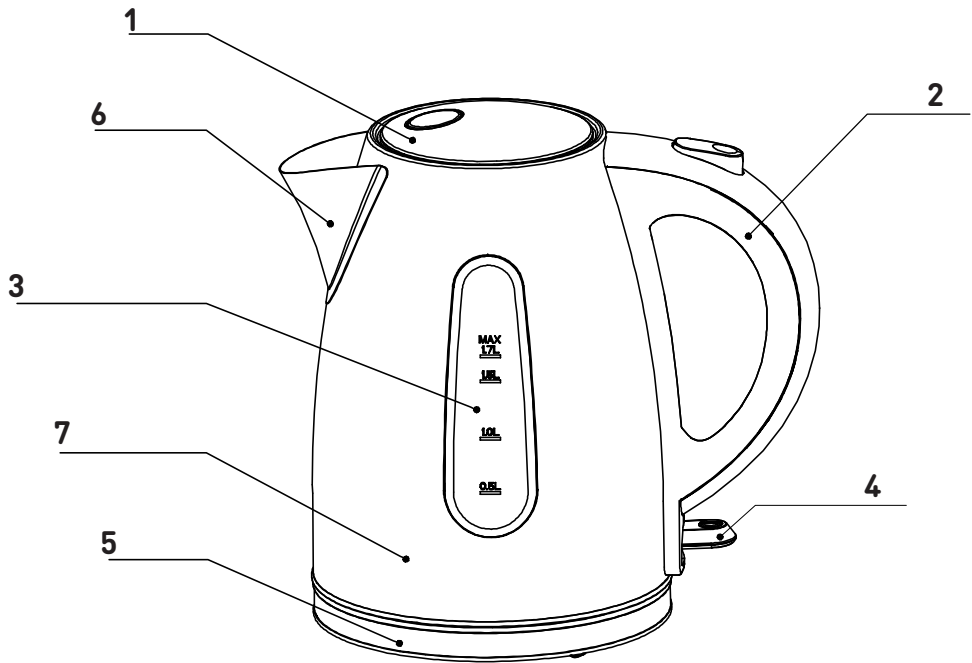

1. Lid
2. Handle
3. Water Level Indicator
4. On/Off Switch (With Power On Indicator Light)
5. Base
6. Spout
7. Housing

IMPORTANT SAFEGUARDS

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
- Do not let the cord hang over the edge of a table, counter, or touch a hot surface.
- Do not place on, near a hot gas or electric burner, or in a heated oven.
- Do not operate the appliance without anything in it to avoid damaging the heat elements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful of refilling when the kettle is hot.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance

in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- This appliance is only for indoor use
- Do not touch the hot surface. Use the handle or the button.
- The attached base cannot be used for anything other than its intended use
- Extreme caution must be used when moving an appliance containing hot water.
- The appliance is not a toy. Do not let children play with it.
- The kettle is for household use only. Do not use outdoors.
- The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- To disconnect, turn switch to "off," then remove plug from wall outlet.
- If the supply cord is damaged, it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance for anything other than its intended use.
- The kettle can only be used with the base provided.
- If the kettle is overfilled, boiling water may spill out.
- Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the boiling process.
- Avoid spillage on the base.
- This appliance is intended to be used in household and similar applications such as:
 - a. Staff kitchen areas in shops, offices and other working environments;
 - b. Farm houses;
 - c. By clients in hotels, motels and other residential type environments;
 - d. Bed and breakfast type environments.
- The heating element surface is subject to residual heat after use.

BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water, repeat this step twice. Wipe the surface with a damp cloth once cooled.

1. Place the kettle on the flat surface.

2. To fill the kettle, remove it from the power base and open the lid by pressing down lid release button, then fill the kettle with the desired amount of water and close the lid. The water level must be within the Min and the Max level. Too little water will cause the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.

4. Connect the plug into a power outlet. Press down the switch and the indicator will light up, and then the kettle starts to boil the water. The kettle will switch off automatically once the water has boiled. If necessary, it will take you 30 seconds to wait before pressing the switch again to re-boil the water. You may shut off the power by lifting the switch up or directly lift the kettle from the power base at any moment to stop the boiling process.

NOTE: Ensure that the switch is free of obstructions and the lid is firmly closed during operation.

5. Lift the kettle from the power base and then pour the water.

NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scalding, besides, don't open the lid while the water in the kettle is hot.

6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

NOTE: Always disconnect the power supply when not in use.

AUTOMATIC SAFETY CUT OFF

An automatic safety is fitted to the kettle for protection against boil dry overheating. It will operate if the kettle is switch ON when there is insufficient water inside the kettle (i.e. the kettle is not above the MIN marking). If this should occur, switch the kettle OFF and remove the power cord from the power outlet. Allow cooling for 10 minutes then refilling with cold water and reconnecting to the power outlet.

CLEANING & MAINTENANCE

Be sure the product is turned OFF and DISCONNECTED from the power outlet. Let the product cool after use before cleaning. Clean the exterior of the product by wiping with a slightly dampened (not wet) soft cloth. Remove stubborn spots with a cloth moistened (not wet) with soapy water or a mild, non- abrasive cleaner. Avoid the use of scouring pads, harsh detergents, solvents, polish, abrasive or aerosol cleaners as they may damage surfaces of the product. Dry with a clean, soft cloth before storage, or reconnecting to the power outlet. From time to time, depending on the nature of your water supply, you may need to clean the inside of the kettle. This can be done in the following manner:

Half fill the kettle with normal cold tap water.

Add 30 ml of white vinegar to the water in the kettle.

Boil the mixture and allow to stand for 1 to 2 minutes, then re-boil the mixtures and re-boil once more.

NOTE: In extreme cases this process may need to be repeated.

IMPORTANT: Empty the mixture and thoroughly rinse several times before normal use.

WARNING: The use of descalers containing phosphoric acid, sulphamic acid, or their equivalents must not be used as they may damage your kettle.

CLEANING THE FILTER

The following steps are applicable only when the kettle is switched OFF, removed from the power outlet and the kettle including water are cool.

- 1) Open the lid and lift the filter out from its location in the body of the product.
- 2) Wash the filter in warm soapy water. Rinse and dry with a clean, soft cloth.
- 3) Insert the filter back into the body making sure it is correctly located.

TECHNICAL DETAILS

AC: 220V~240V

50-60Hz

Power: 2520-3000W

WASTE DISPOSAL

According to Waste of Electrical and Electronic Equipment (WEEE directive, WEEE should be separately collected and treated. If at any time in the future you need to dispose of this product please do NOT do so with household waste.

Please send this product to WEEE collection points where



WASTE DISPOSAL

This product is guaranteed for two years from the date of original purchase. Proof of purchase will be required. The guarantee is subject to the following provisions:

The guarantee does not cover accidental damage, misuse, unit parts, knobs or consumable items.

The product must be correctly stored and operated in accordance with the instructions contained in this manual.

It must be used solely for domestic purposes.

The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.

Specifications are subject to change without prior notice.

The manufacturer disclaims any liability for incidental or consequential damages.

The guarantee is in addition to, and does not affect your statutory or legal rights.



ESTD. ENGLAND 1958