


 **HADEN**  
ESTD. ENGLAND 1958



## INSTRUCTION MANUAL

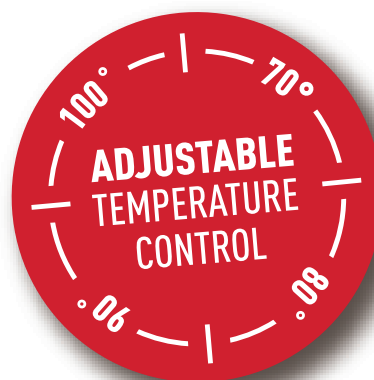

PRODUCT CODE: 197207

# RICHMOND KETTLE



ESTD. ENGLAND 1958

## How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us  
**01909 544 570**



Email us  
**info@haden.com**




Write to us  
**Team Haden, Sabichi Homewares  
Ltd, Priorswell Rd, Worksop, S80 2BY**



Visit us  
**www.haden.com**

# COMPONENTS

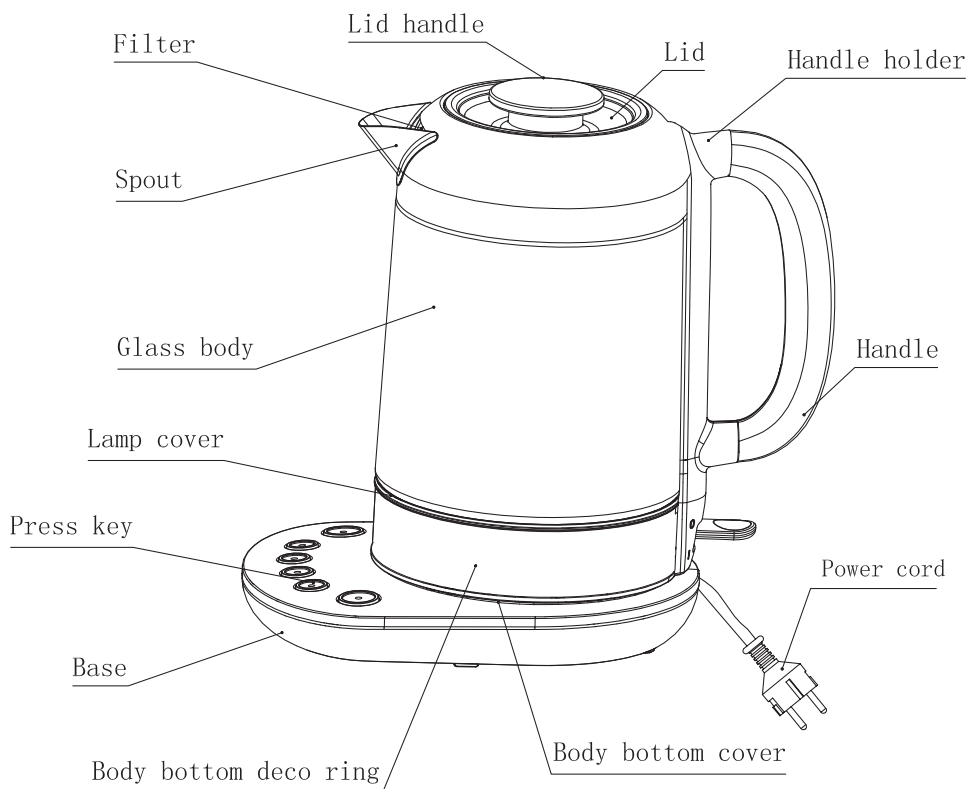

# SAFETY INSTRUCTIONS

**When using electrical appliances, the following basic safety precautions should always be taken.**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its mains cord out of the reach of children younger than 8 when the appliance is switched on or is cooling down.
- While the water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the jug kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
- To protect against electric shock, do not immerse the cord, plug, or any part of the kettle in water or other liquid.
- Before switching the kettle on, ensure the water level is between the Min and Max lines and that the lid is completely closed.
- If the kettle boils dry, allow 15 minutes to cool before refilling with cold water. The safety cut out will automatically reset during this time.
- The kettle will switch off automatically when the water has boiled. You may switch the kettle off before the boiling process is complete by using the on/off switch.

- After the kettle has switched off automatically, (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched on again.
- Always take care when pouring boiling water and never tip the kettle excessively.
- Should you need to refill the kettle after it has boiled, allow the kettle to cool sufficiently before opening the lid.
- Place the kettle on a stable flat heat resistant surface.
- Ensure that the kettle is switched off before removing it from its stand.
- Prevent children from pulling on the mains cord or knocking the kettle
- Ensure that the mains lead does not overhang the worktop or come into contact with hot surfaces and gas rings.
- Before cleaning the kettle disconnect from the power supply and wait until it has cooled down.
- Only use the cord supplied with this kettle. If a replacement is required, only approved components may be used.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill the water over the maximum water level. Doing so may cause the kettle to splash during the boiling cycle.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person.
- Never leave the appliance unattended when in use.
- This appliance is intended for household use only
- Please ensure the wall outlet in your house is well earthed.
- Please note that the metal housing on this kettle can get "HOT" during use. Always pick up the kettle using the handle.

 
# USING YOUR KETTLE


If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water, repeat this step twice.

Wipe the surface with a damp cloth once cooled.

1. Place the kettle on the flat surface.
2. To fill the kettle, remove it from the power base and open the lid by pulling on lid, once fill with the desired amount of water pop the lid back on. The water level must be within the Min and the Max level. Too little water will cause the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet.
5. Once powered all 6 buttons will flash blue for 1 – 2 seconds.
6. To boil the kettle press the  button. The default temperature is 100oC which will light up at the same time and the kettle will start to boil.

To change temperature, select one of the other options 70 oC, 80 oC or 90 oC after pressing the  button. The kettle will then heat the water to the selected temperature.

NOTE: Ensure that the lid is firmly closed during operation.

1. Lift the kettle from the power base and then pour the water.

NOTE: Be careful when pouring the water from your kettle as boiling water may result in scalding, besides, don't open the lid while the water in the kettle is hot.

2. The kettle may be stored on the power base when not in use.

NOTE: Always disconnect the power supply when not in use

# BREWING THE PERFECT TEA

Different teas require different temperatures. That is, if you want the perfect flavour. This is why we've developed the Richmond kettle, the must-have kettle for tea lovers. With temperature controls on the base and a keep warm function that maintains the temperature for 30 minutes, this kettle is ideal for any hot drink and ensures perfect results every time. See our infographic below for advice on temperature and steeping time for various teas.



**WHITE**  
70-80°C / 1-3 min



**GREEN**  
70-85°C / 1-3 min



**ROOIBOS**  
90-100°C / 5-6 min



**HERBAL**  
85-100°C / 4-5 min



**YELLOW**  
70-85°C / 1-2 min



**OOLONG**  
70-80°C / 2-3 min



**BLACK**  
85-100°C / 3-5 min



**PU-ERH**  
85-100°C / 2-5 min

## KEEP WARM FUNCTION

This handy keep warm function will make sure water stays hot for up to 30 minutes too, so you can enjoy a second helping. Just press the Keep Warm button once the kettle has reached the desired temperature.

## **AUTOMATIC SAFETY CUT OFF**

An automatic safety cut off is fitted to the kettle for your protection. This is to protect against dry boiling. It will operate if the kettle is switched ON when there is insufficient water inside the kettle. If this should occur, switch the kettle OFF and removed the power cord from the power outlet. Allow cooling for 10minutes then refill with cold water before plugging back in to the power outlet.

## **CLEANING & MAINTENANCE**

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning. Clean the exterior of the product by wiping with a slightly dampened (not wet) soft cloth. Remove stubborn spots with a cloth moistened (not wet) with a soapy water or a mild, non-abrasive cleaner. Avoid the use of scouring pads, harsh detergents, solvents, polish abrasive or aerosol cleaners as they may damage the surface of the product. Dry with a clean, soft cloth before storage, or reconnecting to the power.

## **DESCALING**

Regularly removing deposits of lime scale from inside the kettle will prolong your kettle's life, ensuring maximum performance and energy savings. The kettle can be descaled using commonly available descaling products. In this case, leave the product to act, then rinse thoroughly.

Then boil at least two full kettles of water, disposing of the boiling water safely, to remove any residue of the product before use.



Alternatively, you can use common household vinegar:

1. Fill the kettle with 4 cups of cold tap water and bring to a boil.
2. Add 2 cups of white vinegar.
3. Leave stand for at least 1 hour or overnight to act.
4. Empty the kettle.
5. Fill the kettle with water and boil it. Empty the kettle, disposing of the water safely. Repeat this operation at least twice.

After descaling, ensure that the electrical connections are completely dry before reusing the kettle.

## **CLEANING THE FILTER**

Ensure the kettle is switched off and cool before removal.

1. Open the lid and lift the filter out from its holder
2. Wash the filter with warm soapy water. Rinse and dry with a clean, soft cloth
3. Insert the filter back into the body making sure it is correctly located.

# TECHNICAL DETAILS

<b>Model</b>	Richmond
<b>Rated Voltage</b>	220-240V~50-60Hz
<b>Rated Power</b>	3000W
<b>Capacity</b>	1.7 Litre
<b>Protection</b>	Class I

## WASTE DISPOSAL

According to Waste of Electrical and Electronic Equipment (WEEE directive, WEEE should be separately collected and treated. If at any time in the future you need to dispose of this product please do NOT do so with household waste. Please send this product to WEEE collection points where



# WARRANTY

This product is guaranteed for two years from the date of original purchase. Proof of purchase will be required.

The guarantee is subject to the following provisions:

- Doesn't cover accidental damage, misuse, unit parts, knobs or consumable items.
- The product must be correctly stored and operated in accordance with the instructions contained in this manual.
- Product must be used solely for domestic purposes

The guarantee will be rendered invalid if the product is re-sold or if damaged by an inexpert repair.

Specifications are subject to change without prior notice. The manufacturer disclaims any liability for incidental or consequential damages.

The guarantee is in addition to, and does not affect your statutory or legal rights.



ESTD. ENGLAND 1958