



HADEN

ESTD. ENGLAND 1958



INSTRUCTION MANUAL



PRODUCT CODE: 207180 207203

STARBECK KETTLE



How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us
01909 544 570



Email us
info@haden.com



Write to us
**Team Haden, Sabichi Homewares
Ltd, Priorswell Rd, Worksop, S80 2BY**



Visit us
www.haden.com

COMPONENTS



- 1. Lid
- 2. Handle
- 3. Water window
- 4. ON/OFF switch
- 5. Power base
- 6. Main body
- 7. Water spout

IMPORTANT SAFEGUARDS

When using this appliance the following basic safety precautions should always be taken.

- Please read these instructions carefully before using the water kettle for the first time.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the kettle is overfilled, boiling water may be ejected.
- Kettle is only to be used with the stand provided.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Do not operate the kettle if damaged, after an appliance malfunctions or it has been damaged in any manner, return to the customer service department for repair, because special purpose tools are required.

- Avoid spillage on the connector.
- Heating element surface is subject to residual heat after use.
- Use the kettle according to this instruction, any misuse may cause electric shock or other hazards.
- This appliance is not intended to heating liquid other than water.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the water kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
- The kettle will switch off automatically when the water has boiled. If you want to stop the heating process before the kettle automatically switches off, press the ON/OFF switch up.
- After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched on again.
- Always fill the kettle with water before switching it on.
- Place the kettle on a stable flat surface.
- Do not use this appliance outdoors.
- Ensure that the kettle is switched off before removing it from its base.
- Do not remove the kettle from its base during operation.
- Never immerse the kettle or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.
- Prevent children from pulling on the mains cord or knocking the kettle over.
- Ensure that the mains lead does not overhang the worktop surface.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill in water more than the maximum acceptable water level.
- Never use the kettle with the lid open.
- Do not open the lid when steam is coming out of the spout.
- Before cleaning the kettle disconnect from the power supply and wait until it was cooled down.

SAVE THESE INSTRUCTIONS

HOW TO USE YOUR KETTLE

BEFORE USING YOUR KETTLE

- Remove all packing materials, any stickers from the kettle and power base.
- Remove the filter and wash with water.
- Fill the kettle to 'MAX' level and boil. The boiled water should be discarded and the kettle rinsed out with cold water. Repeat the boil and rinse steps for at least twice to remove any manufacturing dust, etc.
- After the kettle has been rinsed out, re-fit the filter and the kettle is ready to use.

FILLING THE KETTLE

- Remove the kettle from the base.
- Open the lid by pulling the lid knob straight up.
- Make sure the removable filter is in place.
- Do not fill with less than the **MIN** water level to prevent the kettle running dry while operating; misuse of this kind will shorten the life of the element. Do not fill with more than the **MAX** level.
If the kettle is overfilled, there is a risk that boiling water may be ejected causing burns.
- Close the lid by pushing it down until it clicks into place.

SWITCHING ON

- Plug the power base into the wall socket.
- Place the kettle on the power base.
- Press the ON/OFF switch down. The switch will light up, and the kettle will start to heat up.
- The kettle will automatically switch off once the water has boiled. The switch will return to the "OFF" position and the light will go out.
- To turn the kettle off before the water boils, move the ON/OFF switch up to the OFF position, or simply lift the kettle from its base it will switch off and the switch will return to the OFF position automatically.

SAFETY CUT OUT

This kettle is fitted with an automatic safety cut out to protect against boil dry overheating. It will operate if the kettle is switch ON with too little or no water inside the kettle. If this cut-out operates, disconnect the kettle from the mains supply and leave to cool down for 15 mins before refilling with cold water (otherwise the element could be damaged).

CLEANING & MAINTENANCE

CLEANING

- Before cleaning, be sure the base is unplugged and the kettle has cooled completely.
- Empty any remaining water from the kettle.
- Clean the exterior surface of the kettle with a clean, damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.
- Do not use abrasive cleansers or scouring agents of any kind inside or on the exterior of the kettle.
- Only use the dry cloth to wipe the base of the kettle
- Ensure that all connectors and sockets are kept dry.
- To clean the filter, empty the kettle and allow to cool, open the lid, lift out the filter, rinse the filter under warm water and brush off any impurities.
- Refitting is the reverse of removal.

**Do not immerse the kettle or power base in water.
Do not use harsh or abrasive cleaners or solvents.**

DESCALING

When the water is heated, the minerals in the water solidify creating limescale which makes the water appear cloudy. As soon as you notice a film forming on the water, or, when cleaning the filter, if you notice a film on the walls or the element, descale the kettle and its filter.

Limescale build-up will cause the element to overheat, reducing its working life. It may also cause the safety cut out to operate prematurely, switching the kettle off before the water boils.

To minimize scale build-up:

- Half fill the kettle with tap water and add the juice of 1 lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes.
- Re-boil the mixture and allow it to stand a further 15 minutes.
- Re-boil this mixture a third time then rinse the kettle well.

TECHNICAL DETAILS

Product Code: 207180 207203
Voltage: 220-240V ~ 50/60Hz
Power: 2550 - 3000W
Capacity: 1.7L



Sabichi Homewares Ltd
5 Wadsworth Road, Perivale, Middlesex UB6 7JD
20 Harcourt Street, Dublin D02 H364

WASTE ELECTRICAL RECYCLING



This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste.

The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- to recycle waste electrical products using the best available recovery and recycling techniques.
- to minimise the impact to on the environment
- to treat any hazardous substances
- to avoid increasing landfill

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where to drop off your waste product for recycling please contact your local authority.

WARRANTY (UK & IRELAND ONLY)

This product is guaranteed for 2 years from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion. Proof of purchase will be required.

This warranty applies only to:

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK and Ireland.

This warranty does not cover:

- Cosmetic damage.
- Normal wear and tear or consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed serial numbers.

Haden disclaims any liability for incidental or consequential loss or damages.

In the event of a problem:

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting Haden please provide:

- Product model number and serial number. Model & serial numbers can be found on the product rating label.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

Help Line: 01909 544 570
Opening Hours: Monday - Friday 9.30am – 5pm
Email: info@haden.com



ESTD. ENGLAND 1958