

INSTRUCTION MANUAL



PRODUCT CODE: 207197 207210

STARBECK TOASTER



How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us
01909 544 570



Email us
info@haden.com




Write to us
**Team Haden, Sabichi Homewares Ltd,
Priorswell Rd, Worksop, S80 2BY**



Visit us
www.haden.com

COMPONENTS

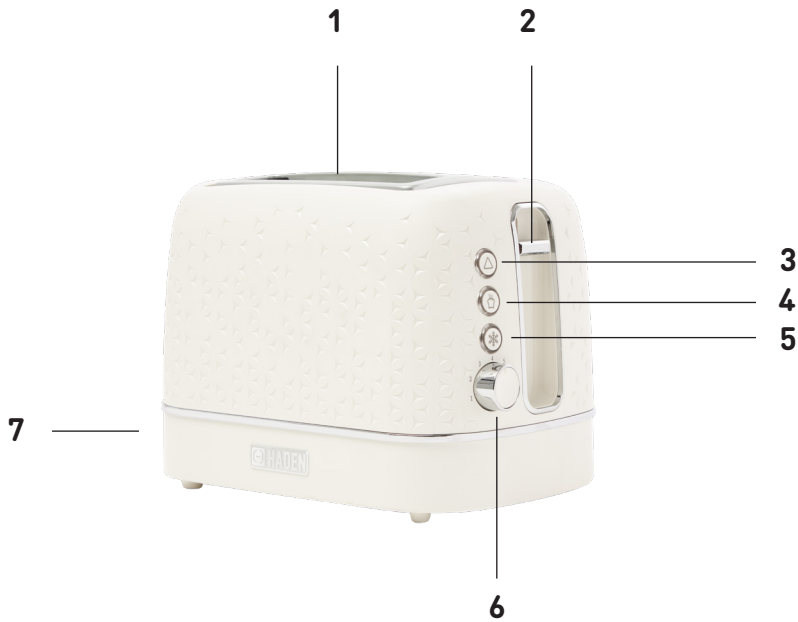

- 1. Toasting Slots
- 2. Carriage Control Lever
- 3. Cancel Button
- 4. Reheat Button

- 5. Defrost Button
- 6. Browning Control
- 7. Crumb Tray

SAFETY INSTRUCTIONS

When using electrical Toasters, the following basic safety precautions should always be taken.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the section "Care and Cleaning".
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- To protect against electrical hazard do not immerse any part of the appliance or cord in water or any other liquid.
- Close supervision is necessary when the appliance is near children.

- Do not leave the appliance unattended when in use.
- Always use the appliance on a dry, level surface.
- Do not use this appliance outdoors.
- Always unplug from the plug socket when not in use and before cleaning.
- Do not operate the appliance if damaged, after an appliance malfunctions or it has been damaged in any manner, return to the customer service department for repair, because special purpose tools are required.
- In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged don't use the appliance.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow the unit to cool before wrapping the cord around base for storage.
- Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has fully cooled down.
- Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
- Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
- When using this appliance, allow adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem - an insulated heat pad is recommended.
- Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- Do not use this appliance with any foodstuff product containing sugar content or with products containing jam or preserves.
- The temperature of accessible surfaces may be high when the appliance is operating.

USING YOUR TOASTER

FOR THE FIRST USE

Before first use of the product, put the toaster in a properly ventilated room and select the brown setting number 3 as below. Let the toaster complete three toasting cycles without bread in it and each cycle should be rested for 3 minutes. This burns off any dust and prevents unpleasant smells.

Toasting

1. Place the toaster upright on a firm, level, heat-resistant surface, clear of curtains and other combustible materials.
2. Plug the power cord into the socket.
3. Ensure the crumb tray is in place before using.
4. Insert regular bread slices into the bread slots, maximum of 2 slices can be toasted at a time.
5. Set the browning control to your desired setting. There are 7 positions, "1" is for lightest and the "7" is for darkest toasting. Depending on the thickness of the bread, it can be toasted to a golden colour in the middle position.
6. Press the carriage handle down vertically until it clicks into position. The light indicator for the **Cancel** function will be illuminated, and the appliance will begin toasting.
7. Once the bread has been toasted to the desired setting, the carriage handle will automatically pop up.

NOTE: During toasting, you may also observe the toasting colour. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, never lift carriage handle to cancel toasting.

Defrost button

To toast frozen bread, place the bread into the bread slots and select the desired browning setting. Press the carriage control lever down until it clicks into place then press the **Defrost** button.

Reheat button

The toaster allows you to reheat toast without additional toasting. To reheat, place toast into bread slots, lower the carriage control lever until it clicks into place and press the **Reheat** button.

Only reheat plain, unbuttered toast.

Cancel button

Press the **Cancel** button at anytime to stop the toasting cycle and pop up the toast.

CAUTION

1. Remove all protective wrappings and stickers prior to toasting.
2. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter or garlic bread.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. In order to achieve uniform colour we recommend that you should wait a minimum of 30 seconds between each toasting.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance and let it cool down completely.
2. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.
3. Do not immerse the unit in water.
4. To clean the interior, turn the toaster upside down over the sink and shake crumbs free.
5. Don't use harsh or abrasive cleaning agents or solvents.
6. Remove the crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
7. The power cord may be wound under the bottom of toaster when not in use or during storage.

Crumbs

Remove crumbs frequently, as they could cause a fire hazard. Unplug the toaster and let it cool down fully. Remove and empty the crumb tray. Wipe it with a damp cloth, dry it, then slide it back into the toaster. Don't use the toaster unless the crumb tray is in place and closed.

TECHNICAL DETAILS


Product Code 207197 207210
Rated Voltage 220V-240V~ 50-60Hz
Rated Power 860 - 1050W



Sabichi Homewares Ltd
5 Wadsworth Road, Perivale, Middlesex UB6 7JD
20 Harcourt Street, Dublin D02 H364

WASTE ELECTRICAL RECYCLING

This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste.

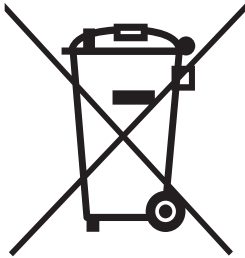

The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- To recycle waste electrical products using the best available recovery and recycling techniques.
- To minimise the impact to on the environment
- To treat any hazardous substances
- To avoid increasing landfill

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where to drop off your waste product for recycling please contact you local authority.

WARRANTY (UK & IRELAND ONLY)

This product is guaranteed for 2 years from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion. Proof of purchase will be required.

This warranty applies only to:

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK and Ireland.

This warranty does not cover:

- Cosmetic damage.
- Normal wear and tear or consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed serial numbers.

Haden disclaims any liability for incidental or consequential loss or damages.

In the event of a problem:

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting Haden please provide:

- Product model number and serial number. Model & serial numbers can be found on the product rating label.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

Help Line: 01909 544 570
Opening Hours: Monday - Friday 9.30am – 5pm
Email: info@haden.com



ESTD. ENGLAND 1958