



# HADEN

ESTD. ENGLAND 1958



## INSTRUCTION MANUAL



PRODUCT CODE: 203922 203939 203946 205360

## HERITAGE KETTLE



ESTD. ENGLAND 1958

## How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us  
**01909 544 570**



Email us  
**info@haden.com**



Write to us  
**Team Haden, Sabichi Homewares  
Ltd, Priorswell Rd, Worksop, S80 2BY**



Visit us  
**www.haden.com**

# COMPONENTS



1. Lid
2. Handle
3. Water Level Indicator
4. On/Off Switch
5. Base
6. Spout
7. Housing

# IMPORTANT SAFEGUARDS

**When using this appliance the following basic safety precautions should always be taken.**

- Read all Instructions prior to first use.
- Do not touch hot surfaces.
- Use handles or knobs when holding the appliance.
- This kettle can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the kettle in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the kettle.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the kettle and its mains cord out of the reach of children younger than 8 when the kettle is switched on or is cooling down.
- While the water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
- Ensure that the lid is closed before switching the kettle on, otherwise it may not automatically switch off.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the jug kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
- To protect against electric shock, do not immerse the cord, plug, or any part of the kettle in water or other liquid.
- Before switching the kettle on, ensure the water level is between the Min and Max lines and that the lid is completely closed.
- If the kettle boils dry, allow 15 minutes to cool before refilling with cold water. The safety cut out will automatically reset during this time.

- The kettle will switch off automatically when the water has boiled. You may switch the kettle off before the boiling process is complete by using the on/off switch.
- After the kettle has switched off automatically, (or has been switched off manually) it may need time to cool down. After 15-20 seconds, the kettle can be switched on again.
- Always take care when pouring boiling water and never tip the kettle excessively.
- Should you need to refill the kettle after it has boiled, allow the kettle to cool sufficiently before opening the lid.
- Do not open the lid while the water is boiling.
- Place the kettle on a stable flat heat resistant surface.
- Ensure that the kettle is switched off before removing it from its stand.
- Prevent children from pulling on the mains cord or knocking the kettle.
- Ensure that the mains lead, kettle or power does not overhang the worktop or come into contact with hot surfaces hotplate, hot hob or burners.
- Before cleaning the kettle disconnect from the power supply and wait until it has cooled down.
- Do not use the kettle for any purpose other than heating water.
- Only use the cord supplied with this kettle.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill the water over the maximum water level. Doing so may cause the kettle to splash during the boiling cycle.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person.
- Never leave the kettle unattended when in use.
- This kettle is intended for household use only.

## **SAVE THESE INSTRUCTIONS**

# HOW TO USE YOUR KETTLE

This appliance is for household use only.

## BEFORE USING YOUR KETTLE

- Remove all packing materials, any stickers and the plastic band around the power plug.
- Wash all parts as instructed in CARE AND CLEANING section.
- Select a level surface where this unit is to be used allowing enough space for steam to escape without damage to counters, cabinets and walls.
- Fill kettle to maximum fill line with cold water. Bring to boil, discard and repeat. Kettle is now ready for use.

Note: The kettle only operates when placed on the base with the ON/OFF (I/O) button in the ON (I) position. The kettle automatically shuts off when water has boiled or there is no water in the kettle.

## IMPORTANT

- Do NOT fill the kettle with any substance other than water. Heat water only.
- Do NOT operate the kettle without water.
- Do NOT operate the kettle without the filter in place.
- Do NOT overfill the kettle. (Keep water level below the max fill line on the water window.)

## FILLING THE KETTLE

1. Remove the kettle from the base.
2. Pull lid handle up to remove the lid.
3. Make sure the removable filter is in place.
4. To install: put filter in kettle, aligning the filter circle with the inside/back of the pour spout.

5. Fill with desired amount of cold tap water. Use the water window on the outside of the kettle as a guide for 4 cups up to 1.7 liters (7 cups).
6. Put the lid back on the kettle.
7. Unwind cord from base.
8. Place the kettle securely on the base.

## **BOILING WATER**

1. Plug cord on the base into standard electrical outlet.
2. Press the On/Off (I/O) switch to the On (I) position. The power indicator light turns on and the water begins to heat.
3. When water boils, the kettle and the power indicator light will automatically turn off. Note: You can also turn the appliance off at any time by lifting the ON/OFF (I/O) switch to the OFF (O) position.

**Warning:** Kettle filled with boiling water is hot. Use only the handle to pick it up.

When taking kettle to the table, carry kettle with caution to avoid spilling. Set it on a trivet or hot pad to protect the table surface or tablecloth.

**Important:** Hold kettle handle firmly when pouring, especially when filled to the max fill line. Do not pour too fast.  
Unplug the kettle when not in use.

**Note:** This kettle has a boil dry protection feature that automatically turns the kettle and power indicator light off when water has boiled or if there is no water in the kettle.

## BUILT-IN SCALE PROTECTION

Note: Limescale forms over time in the kettle when water is heated. Though harmless, it may be bothersome. The kettle has a removable filter behind the pour spout to prevent particles from pouring into your beverage.

**Always have the removable filter in place just behind the spout when using the kettle.**

## CARE & CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

### CLEANING

1. Before cleaning, be sure the base is unplugged and the kettle has cooled completely. Empty any remaining water from the kettle.
2. Pull out the removable filter for cleaning. Wash the filter in hot, soapy water and rinse or place it in the utensil holder of the dishwasher.
3. Wash the inside of the kettle with hot, soapy water and rinse.

**Important:** Never immerse the kettle in water or other liquids or place in a dishwasher.

4. Wipe exterior of the kettle and base with a damp cloth or sponge and dry.

**Note:** The heating element at the bottom of the interior may discolor over time. This will not affect performance. Do not use abrasive soaps, cleansers, or scouring pads on the kettle.

**Note:** Over time, the kettle may heat up but will not boil. When this happens, it is time for descaling.



## **TO DESCALE**

1. Fill kettle with 4 cups cold tap water and bring to a boil. Add 2 cups white vinegar, let stand for at least 1 hour or overnight and discard.
2. Fill kettle to maximum fill line with cold water. Bring to boil, discard and repeat. Kettle is now ready for use.

# TECHNICAL DETAILS

**Product Code:** 203922 203939 203946 205360  
**Voltage:** 220-240V ~ 50/60Hz  
**Power:** 2520 - 3000W  
**Capacity:** 1.7L



Sabichi Homewares Ltd  
5 Wadsworth Road, Perivale, Middlesex UB6 7JD  
20 Harcourt Street, Dublin D02 H364

## WASTE ELECTRICAL RECYCLING



This symbol indicates the product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste. The Waste Electrical and Electronic (WEEE) Directive has been introduced across the EU:

- to recycle waste electrical products using the best available recovery and recycling techniques.
- to minimise the impact to on the environment
- to treat any hazardous substances
- to avoid increasing landfill

WEEE product should be disposed of by handing it over at a designated collection point. For more information about where to drop off your waste product for recycling please contact your local authority.

# WARRANTY (UK & IRELAND ONLY)

This product is guaranteed for 2 years from the date of original purchase. If the product fails within this period due to faulty materials or workmanship, it will be repaired, replaced or refunded at our discretion. Proof of purchase will be required.

This warranty applies only to:

- Product installed and used in accordance with the instructions contained in this manual.
- Product used for domestic purposes only.
- Product purchased in the UK and Ireland.

This warranty does not cover:

- Cosmetic damage.
- Normal wear and tear or consumable parts.
- Incorrect voltage supply or power surges.
- Customer misuse, modifications or adjustments.
- Products with unreadable or removed serial numbers.

Haden disclaims any liability for incidental or consequential loss or damages.

In the event of a problem:

- Please refer to the troubleshooting tips section within your user guide for help and guidance.
- If you are still unable to resolve the problem, please contact our technical support team for assistance.

When contacting Haden please provide:

- Product model number and serial number. Model & serial numbers can be found on the product rating label.
- Date of purchase.
- Complete description of the problem.

This information will help our team assist you more quickly.

**Help Line:** 01909 544 570  
**Opening Hours:** Monday - Friday 9am – 5pm  
**Email:** info@haden.com



ESTD. ENGLAND 1958