

210 mm

### One Year Limited Warranty

**1. Warranty**

We extend a limited 1 year mechanical warranty to the original purchaser of this product against defects in material and workmanship from original purchase date subject to the terms below.

**2. Exclusions**

This warranty covers defects in manufacturing discovered while using the PRODUCT as recommended by Enchanté Accessories Inc. This warranty is limited to defects in materials or workmanship and does not cover damages caused by abuse, misuse, unauthorized modification, lightning or power surge damage, extreme heat or cold, and corrosive environments. The warranty also does not cover the normal wear and tear on finish, lever, plate, housing, connectors and accessories.

**3. Limits of Liability**

We will not be liable to you or anyone else for any damages that result from the failure of this Product. These damages include, but are not limited to, the following: lost profits, lost savings, theft, damage to other equipment, and incidental or consequential damages arising from use or inability to use this Product. Express or implied warranties are disclaimed. Some states do not allow the limitation on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow exclusion of incidental or consequential damages, so the above limitations may not apply to you.  
**IN NO EVENT WILL ENCHANTE ACCESSORIES INC. BE LIABLE FOR MORE THAN THE AMOUNT OF YOUR PURCHASE PRICE, NOT TO EXCEED THE CURRENT LIST PRICE OF THE PRODUCT.**

We specifically disclaim all other warranties, expressed or implied, and the use shall deem the installation or use of this PRODUCT and acceptance of these terms.

**4. Reminder**


Service requirement shall be subject to the presentation of this warranty card, dated proof of purchase and defective parts to the original place of purchase. This warranty card will not be reissued if lost.

<b>Product Model#:</b>	
<b>Purchase Date:</b>	
<b>Place of Purchase:</b>	

Email: [appliancehelp@tyutech.com](mailto:appliancehelp@tyutech.com)

Manufacturer: Shenzhen Aspiron Technology Company Limited  
 Address: Room 2803B, Building C, Galaxy World Phase II, Minle Community, Minzhi Street, Longhua District, Shenzhen, Guangdong, China

# USER MANUAL



## ELECTRICAL KETTLE

<b>Model</b>	NB-EK002
<b>Voltage</b>	120V- 60Hz
<b>Rated Power</b>	1500W
<b>Capacity</b>	1.7L

142.5 mm

面

虚线对折

210 mm

### IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:**

- Read and familiarize yourself with all operating instructions before using this Kettle.
- Before plugging your kettle into the mains, visually check that the kettle is intact and has not suffered any transit damage.
- Check that the voltage indicates on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This kettle is only to be used with the stand base provided.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- Keep the appliance and its cord out of reach of children. Children shall not play with the appliance.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended while connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- It is imperative to unplug the power cord after use, before it is cleaned and while being repaired.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- Do not allow the cord to hang over the edge of the table or counter or sharp edges or contact any hot surfaces.
- Do not run the mains cable under carpets, rugs, etc.
- Drain all remaining water after each use and allow the unit to cool before storage.
- Never place the appliance near to flammable material or high pressure containers.
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use this appliance outdoors.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- Do not immerse the appliance, base or its cord in water or any other liquids.
- Do not put the appliance in dishwasher.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Grasp the plug, not the cord.
- Do not cover this appliance.
- Never place this appliance on an electric, gas, or any other type of hob.

**FOR HOUSEHOLD USE ONLY**

**⚠ WARNING: Do not remove lid while the water is boiling.**

- Never fill the kettle more than its capacity – ensure the water level is between the min and max marks. If the kettle is overfilled, boiling water may be ejected.
- Always fit the lid during use and do not remove the lid while the water is boiling.

**⚠ CAUTION: The outside surface of the kettle will get hot during use.**

- Ensure the kettle is switched off before removing it from the base.

### Before First Time Use of the Kettle

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Before using the kettle for the first time fill to the max mark and allow to boil. Pour away the boiled water and then repeat the process. If a slight taste or odour remains repeat the above process once more.

### Using Your Electric Kettle

1. Position the power base on a flat, heat resistant surface, as close as possible to a power outlet.
2. Follow cord routing in power base according to exit patterns. Proper cord routing will result in the power base laying flat when kettle is placed in base. DO NOT operate kettle if power base is not flat. If power base is not flat, remove kettle from power base and repeat cord placement instructions.
3. Open the lid. Fill the electric kettle with cold water to the desired level. NOTE: Do not exceed the "MAX" water level mark indicated on the electric kettle.
4. Place the lid back to kettle by pressing down and place the the kettle on the base.
5. Push down the power switch, the light on the LED indicator will illuminate and the water will begin to heat and boil.
6. At the end of the boiling cycle the power switch will automatically switch off.
7. Wait until the water has finished boiling before removing it from the base unit.
8. Ensure the lid is correctly fitted before pouring boiling water – beware of scalding.

### Cleaning Your Kettle

- Do not clean your kettle in a dishwasher.
- Always disconnect the kettle from the mains power supply before cleaning.
- Wipe clean the outside of the kettle with a soft damp cloth. Never clean any part of the kettle with harsh or abrasive cleaners.
- Do not submerge any part of the base, mains cable or kettle in water or any other liquids.

### Descaling Your Kettle

- Due to scale build up, it is best to de-scale your kettle weekly. It is recommended to use Citric Acid for de-scaling. If Citric Acid is not available, you can use the juice of 1 lemon. Fill kettle halfway with Citric Acid/lemon and water mixture. Allow the unit to boil the solution two to three times. Rinse clean and wipe with a soft cloth.
- NOTE: If the kettle switches off before it boils or has a white deposit building up inside then it probably needs to be de-scaled.

Made in China

142.5 mm

底