



# DOUBLE WALLS ELECTRIC KETTLE

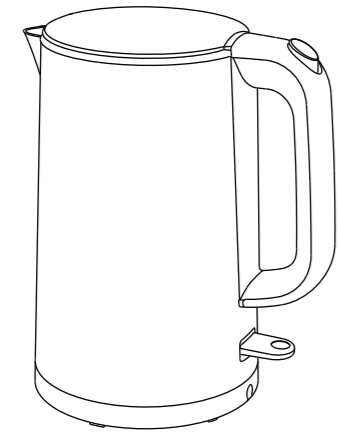

NB-EK004  
User Manual


## IMPORTANT SAFETY INSTRUCTIONS




**DANGER**

BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN YOUR USER MANUAL AND ON THE APPLIANCE


**READ AND SAVE THESE INSTRUCTIONS**



**DO NOT** touch or hold the mains plug with wet hands.



**DO NOT** touch hot surface.




**DO NOT** open lid while kettle is boiling.

- Read this important information carefully before you use the appliance and save it for future reference.
- Only connect the appliance to an earthed wall socket.
- The kettle is only intended for heating up and boiling water.
- Children should be supervised to ensure that they do not play with the appliance. Keep the appliance out of reach of children. Do not leave the appliance unattended.
- Keep the appliance away from any heat sources.
- Use this product on a stable, even and dry surface.
- Use the included power base only.
- Do not hang the power cord over the countertop. Keep it away from heat surface.
- Do not put pin, iron wire or any other items into the kettle or power base to avoid electric shock.
- Do not immerse the kettle, its power cable, and socket or power base into water to avoid hazards.
- Never try to repair the appliance by yourself. Send it to the nearest authorized maintenance center for repair.
- Unplug the power plug before moving the appliance.

## KNOWING YOUR ELECTRIC KETTLE

### PRODUCT DIAGRAM

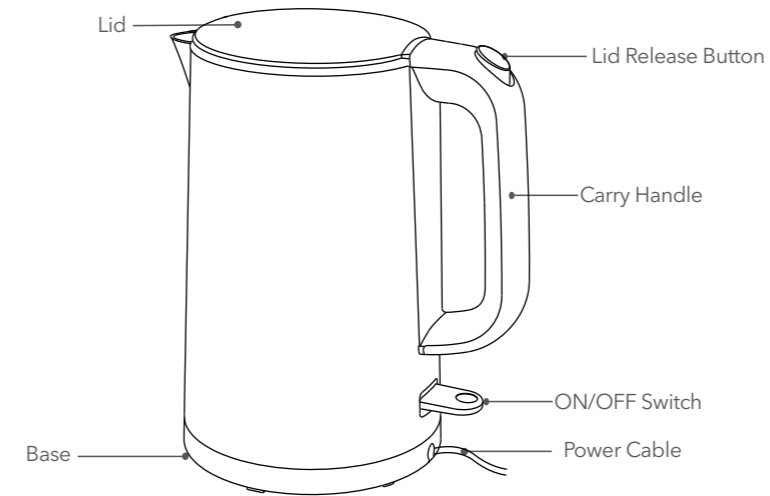

### SPECIFICATIONS

Model	NB-EK004
Rated Voltage	AC 120V 60Hz
Rated Power	1500W
Capacity	1.5L

**Questions or Concerns?**  
appliancehelp@tyutech.com

## USING YOUR ELECTRIC KETTLE

Before first use, fill kettle to the maximum level mark with fresh tap water and boil water for several times to deodorize.



- Before use, make sure the power cord, the base and the body are all dry.
- Pay attention to the escaping steam to avoid scalding.

1. Add water into the kettle. The water level must be between the minimum (MIN) and the maximum (MAX) water line.
2. Plug the power cord of the base into a well-grounded socket.
3. Put the kettle on the base, then press the ON/OFF switch. The indicator lights on and the kettle starts heating.
4. When the water boils, the kettle will automatically cut off the power, the indicator lights off, and the boiling is completed.

## BOIL-DRY PROTECTION

In the event that the kettle boils dry, it is protected by a boil dry fail-safe mechanism. It will switch the kettle off automatically when sensing a boil dry situation and keep it switched off until the kettle is refilled with at least the minimum amount of water.

## CLEANING AND MAINTENANCE



- Always unplug the kettle from the socket and allow it to cool completely before cleaning or descaling it.
- Regularly remove water scale deposits from inside the kettle based on how frequently the kettle is used.
- In case of scale buildup, fill the kettle with vinegar, add water and set aside for at least one hour. Pour the mixed liquid away, fill the kettle with clean water to the maximum line, boil and get rid of the water. Repeat several times until all the vinegar odor is flushed away.

## TROUBLESHOOTING

**The kettle will automatically turn off before the water boils.**

Q

**The kettle does not work.**

- There is limescale in the kettle. Remove limescale from your kettle.
- The boil-dry protection automatically switches off the kettle when there is not enough water in the water tank. Fill the water tank with more water.

- A
- Make sure it is plugged in correctly.
  - Make sure the power cord is not damaged.
  - Make sure the water does not run out during use.

## WARRANTY

**Thanks for choosing the Double Walls Electric Kettle.**

This product is covered with our product and labor warranty for 12 months from the date of its original purchase.

**The warranty will not apply in cases of:**

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized.

We can only provide after-sales service for products that are sold by authorized retailers and distributors.

If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

✳ **Please have your invoice and order ID ready before contacting Customer Support.**



appliancehelp@tyutech.com



www.tyutech.com



Manufacturer: Shenzhen Aspiron Technology Company Limited  
Address: Room 2803B, Building C, Galaxy World Phase II, Minle Community, Minzhi Street, Longhua District, Shenzhen, Guangdong, China



Made in China

尺寸：120\*160MM

折页

材质：128克铜版纸