 



To download recipes, search
model "PE-AF006" in the following link.

www.parisrhone.co/pages/user-manual

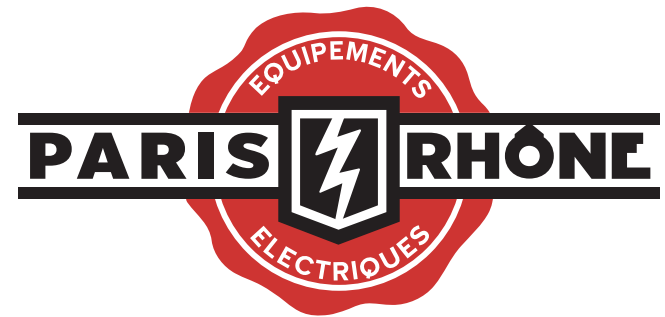

AIR FRYER OVEN

 PE-AF006
User Manual

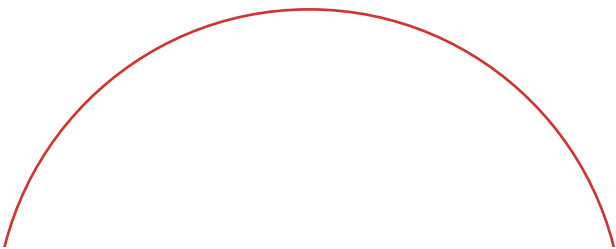

“ **CONTENTS** ”

KNOWING YOUR AIR FRYER OVEN

USING YOUR AIR FRYER OVEN

CLEANING AND MAINTENANCE

TROUBLESHOOTING

WARRANTY

“WARNING

BEFORE USING THIS APPLIANCE **READ ALL INSTRUCTIONS AND** **CAUTIONARY MARKINGS IN YOUR** **USER MANUAL AND ON THE** **APPLIANCE**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by person responsible for their safety.

- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Use the appliance only for intended household purposes as described in this User Manual. Any other use is not recommended that may cause fire, electric shock, or injury to persons.

DO NOT place the appliance against a wall or other appliances. Leave at least 4 inches of free space on the back and sides and 4 inches of free space above the appliance.

- DO NOT place anything on top of the appliance.
- DO NOT place on a stove, near gas or electric burners, or in a heated oven.
- DO NOT leave the appliance unattended while in use. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- DO NOT place anything on top of your air fryer. DO NOT store anything inside your air fryer.
- Keep your air fryer away from flammable materials (curtains, tablecloth, etc.). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- After using the appliance, the metal cover inside is very hot, avoid contact with it after cooking. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Immediately unplug the appliance if you see dark smoke coming out of the appliance. Wait for the smoke emission to stop, before you remove the pan from the appliance.

This appliance must be provided with correct voltage via a professionally installed power socket. Make sure the voltage indicated on the label of the appliance is the same as your local supply.

- DO NOT operate the appliance if the plug, the main cord or the appliance itself is damaged. Always make sure that the plug is inserted properly into a wall outlet.
- DO NOT let the power cord hang over the edge of table or counter. Keep away from hot surfaces.
- DO NOT plug in the appliance or operate the control panel with wet hands.
- NEVER connect this appliance to an external timer switch or separate remote control system in order to avoid a hazardous situation. To disconnect, turn off the appliance, then remove plug from the wall outlet.
- IMPORTANT - This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to rig this safety feature.

ELECTROMAGNETIC FIELDS (EMF)

Paris Rhône Air Fryer Oven complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this User Manual, the appliance is safe to use based on scientific evidence available today.

FOR HOUSEHOLD USE ONLY

READ AND SAVE THESE INSTRUCTIONS



Regular Check

**HAVE YOUR AIR FRYER OVEN
CHECKED REGULARLY
FOR ANY SIGN OF MALFUNCTION!**

Check if Plug, cord or appliance is damaged
Stop using, check FAQ and contact Paris Rhône Support Team.



ATTENTION

AVANT D'UTILISER CET APPAREIL, LISEZ TOUTES LES INSTRUCTIONS ET LES AVERTISSEMENTS FIGURANT DANS VOTRE GUIDE D'UTILISATION ET SUR L'APPAREIL

- N'utilisez pas l'appareil à d'autres fins que celles décrites dans le présent guide de l'utilisateur. L'utilisation d'accessoires non recommandés par le fabricant de l'appareil peut provoquer des blessures.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, sauf si elles ont été supervisées ou instruites de l'utilisation de l'appareil par une personne responsable de leur sécurité.
- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par des enfants ou à proximité. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil. Le nettoyage et l'entretien de l'utilisateur ne doivent pas être effectués par des enfants, sauf ils ont plus de 8 ans et sont surveillés.

- NE PAS faire fonctionner l'appareil si la prise, le cordon d'alimentation ou l'appareil lui-même sont endommagés. Veuillez toujours à ce que la fiche soit correctement insérée dans une prise murale.
- Ne laissez pas le cordon d'alimentation pendre sur le bord de la table ou du comptoir. Tenir à l'écart des surfaces chaudes.
- NE PAS brancher l'appareil ni utiliser le panneau de commande avec les mains mouillées.
- Vérifiez si la tension indiquée sur l'appareil correspond à la tension principale locale avant de brancher l'appareil.
- Ne connectez jamais cet appareil à une minuterie externe ou à un système de commande à distance séparé afin d'éviter une situation dangereuse. Pour le débrancher, éteignez l'appareil, puis retirez la fiche de la prise murale.
- Cet appareil possède une prise polarisée (une lame est plus large que l'autre). Pour réduire le risque de choc électrique, cette fiche est destinée à ne s'insérer dans une prise polarisée que d'une seule manière. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'adapte toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la prise de quelque manière que ce soit.

 
- NE PAS placer l'appareil contre un mur ou d'autres appareils. Laissez au moins 10 cm d'espace libre à l'arrière et sur les côtés et 10 cm d'espace libre au-dessus de l'appareil. Ne placez rien au-dessus de l'appareil.
- NE PAS mettre sur une cuisinière, à proximité de brûleurs à gaz ou électriques, ou dans un four chauffé.
- Ne laissez pas l'appareil sans surveillance lorsqu'il est utilisé. Faites preuve d'une extrême prudence en déplaçant un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Ne placez rien sur le dessus de votre friteuse à air. NE rangez rien à l'intérieur de votre friteuse à air.

- Tenez votre friteuse à l'écart des matériaux inflammables (rideaux, nappes, etc.). Utilisez-la sur une surface plane, stable et résistante à la chaleur, loin des sources de chaleur ou des liquides.
- Après utilisation de l'appareil, le couvercle métallique à l'intérieur est très chaud, évitez tout contact avec lui après la cuisson. Débranchez l'appareil lorsqu'il n'est pas utilisé et avant de le nettoyer. Laissez refroidir avant de mettre ou d'enlever des pièces et avant de nettoyer l'appareil.
- Débranchez immédiatement l'appareil si vous voyez de la fumée noire sortir de l'appareil. Attendez que l'émission de fumée s'arrête avant de toucher l'appareil.


CHAMPS ÉLECTROMAGNÉTIQUES (EMF)

La Friteuse à Air Paris Rhône est conforme à toutes les normes concernant les champs électromagnétiques (EMF). En la manipulant correctement et conformément aux instructions de ce guide d'utilisation, l'appareil est sûr à utiliser sur la base des preuves scientifiques disponibles aujourd'hui.

DESTINÉE À UN USAGE DOMESTIQUE EXCLUSIVEMENT LIRE ET CONSERVER CES INSTRUCTIONS

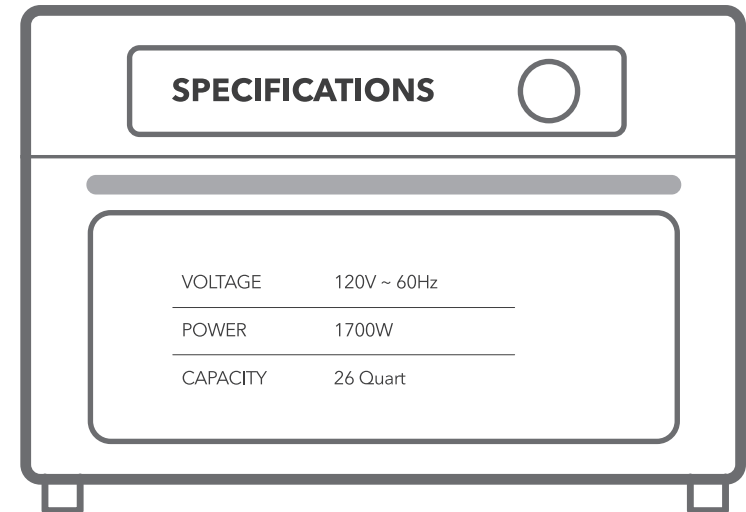



“ **KNOWING**
YOUR
AIR FRYER OVEN ”

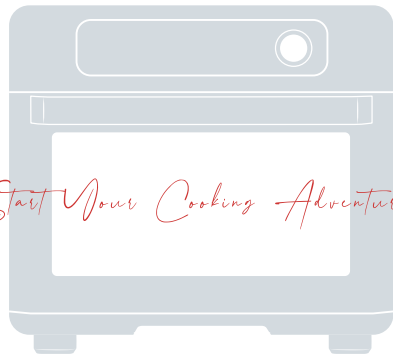 


Start Your Cooking Adventure!

01

  
Oven Body

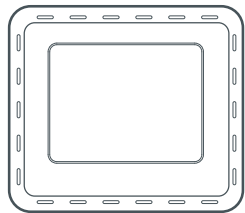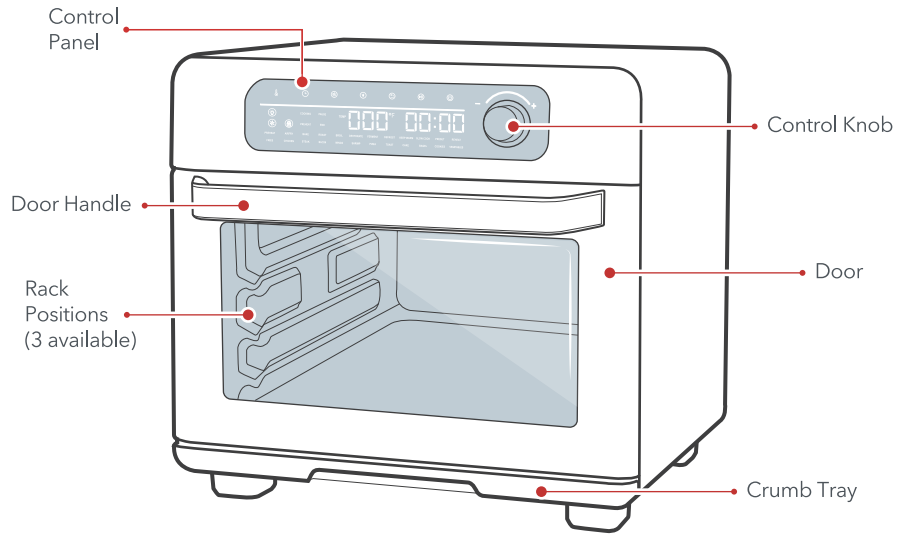


Sheet Pan

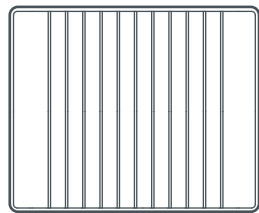 

Wire Rack

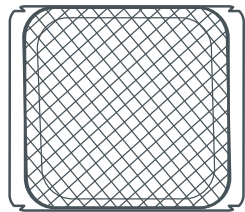 


Air Fry Basket

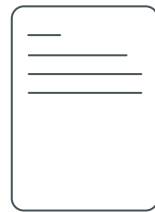 

Magnetic Cheat Sheet

 Operating Buttons

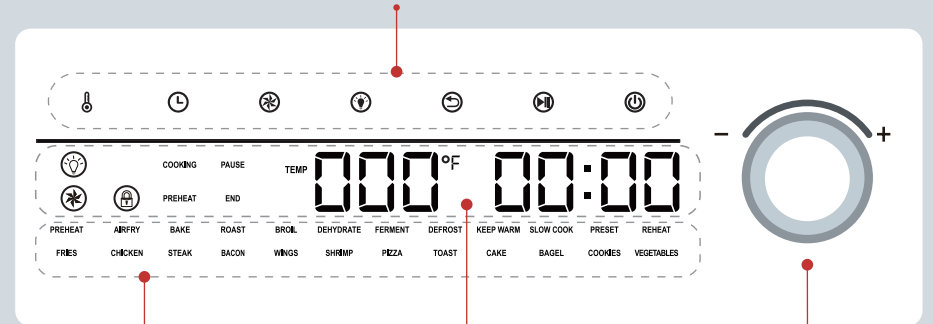

Cooking Menus

Display

Control Knob

- Turn the dial to select Menu or adjust Temperature / Time
- Press to enter the setting of toast slices



Temp Control

Tap to enter the setting of temperature.



Time Control

Tap to enter the setting of time.



Fan

Tap to turn the fan on or off.



Light

Tap to turn the oven light on or off.



Return / Child Lock

- Tap to return to the last step.
- Hold to turn on child lock, tap once again to cancel.



Start / Pause

Tap to CONFIRM the current setting or start/pause cooking when it is on.



Power ON/OFF

Tap to turn on/off.

Default Menu Settings

PREHEAT (400°F & 5min)	AIRFRY (400°F & 20min)	BAKE (360°F & 30min)	ROAST (400°F & 50min)
BROIL (360°F & 30min)	DEHYDRATE (140°F & 8 hours)	FERMENT (100°F & 1 hour)	DEFROST (140°F & 30min)
KEEP WARM (140°F & 30min)	SLOW COOK (250°F & 3 hours)	PRESET (30min)	REHEAT (360°F & 5min)
FRIES (400°F & 25min)	CHICKEN (380°F & 35min)	STEAK (400°F & 10min)	BACON (360°F & 10min)
WINGS (380°F & 15min)	SHRIMP (380°F & 12min)	PIZZA (350°F & 15min)	TOAST (350°F & 4min10s)
CAKE (300°F & 50min)	BAGEL (350°F & 5min)	COOKIES (320°F & 20min)	VEGETABLES (350°F & 8min)



 
USING YOUR AIR FRYER OVEN




02



 
- The oven and accessories will be hot during and after cooking. To avoid the risk of burn injury, DO NOT touch hot surfaces with unprotected hands.
- For optimal cooking results, it is recommended to preheat the air fryer oven before each use.

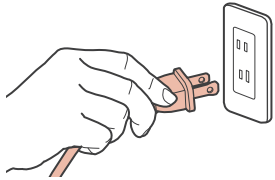


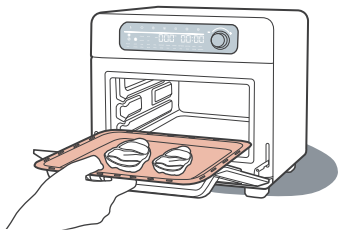 
Plug into an electrical outlet.
Tap  to turn on.

Note:

 
If no operation is done in 3 minutes after connected to power, the oven will return to standby mode.

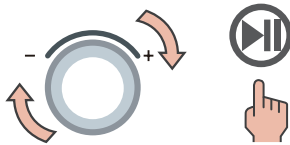

- Turn the dial to select "PREHEAT". Preheat time is not adjustable.
- Tap  to start preheating. Once completed, five beeps will be heard with "PREHEAT" and "END" shown on the display.



Slide the sheet pan/air fryer basket/wire rack with ingredients into the oven and close the door.

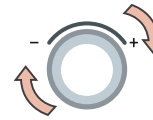




1

 


2



3

- 1 Turn the dial to select the cooking menu as desired.
- 2 Optionally, tap  /  then turn the dial to adjust the temperature or time.
- 3 Tap  to start cooking.

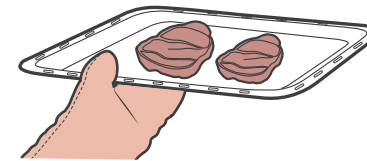





When cooking is done, carefully take food out with oven gloves.

Additional Features





Auto Start Timer

The air fryer oven enables you to set the time (1 min - 24h) you want the unit to start cooking automatically in advance.

- To activate this function,
 1. Turn the dial to select "PRESET", tap  and then turn the dial to select the time.
 2. Tap  again to confirm. Then select the desired cooking menu as instructed. Once time is up, the unit will start cooking under desired menu.
- To cancel, tap  to return to standby mode or tap  to power off.

Child Lock

To avoid mis-operation, the air fryer oven is designed with Child Lock function.

- When the unit is on, hold  to turn on child lock. All other controls except  will be deactivated.
- To cancel, tap  once or tap  to power off.

Cooking Tips

- Make sure that food does not come into direct contact with the heating elements when cooking.
- Air frying can cause oil and fat to drip from foods. To prevent excess smoke, carefully remove and empty the crumb tray periodically throughout cooking.
- Fresh herbs that are exposed to high heat will wilt and become unappealing. If using fresh herbs to garnish a recipe, try adding them directly after cooking instead.
- To give your food more flavor, use fresh spices and herbs instead of the dried versions. Even something as simple as fresh cracked pepper makes a huge difference!
- Follow food safety guidelines for doneness. Because food sizes can vary, do not rely on recipe timing only when cooking food. Check foods for doneness against current safety guidelines before serving.

Tricks

“

 
CLEANING AND MAINTENANCE



03



- Clean your air fryer oven and accessories after each use.
- Always unplug the oven and let it cool down before cleaning.
- Completely dry before reconnecting to a power source, and before storage.

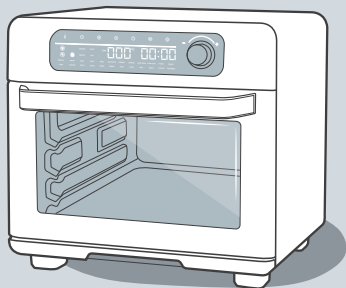

Cooking Chamber

To clean any food splatter, clean with a soft, damp cloth or sponge, and wipe dry. Check the heating element for food debris and clean.

Outer Body

 
Wipe clean with a soft, damp cloth or sponge.

Damp Cloth Only



Crumb Tray / Sheet Pan / Wire Rack / Air Fry Basket

- Remove for cleaning and ensure all grease and food debris is fully removed.
- Avoid using abrasive cleaning materials or metal utensils to avoid scratches.

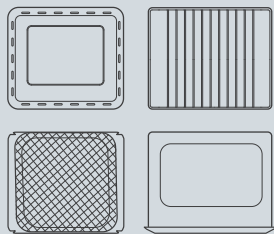

Hand Wash

- Use warm, soapy water and a soft cloth to wash the oven's interior.
- DO NOT use abrasive cleaners, scrubbing brushes, or chemical cleaners, as they will damage the oven.

The air fryer oven does not work

- Make sure the power cord is securely plugged into the outlet.
- Make sure the oven door is closed properly.
- Plug in another appliance to the same plug to test the circuit.

Remaining odor

The first few times you use your air fryer oven, you may notice a plastic smell. This is normal, non-toxic, and goes away quickly. It is recommend to let the oven run for a few minutes before first use.

Dark smoke comes out

- Immediately stop cooking and unplug the oven. Allow it to cool to room temperature.
- Remove all accessories from the cooking chamber and clean the area as well as all accessories thoroughly.

White smoke comes out

- Cooking greasy foods will cause oil to leak into the crumb tray. This oil will produce white smoke. Try not to air fry foods with a high fat content.
- Make sure the drip pan and the inside are cleaned properly and not greasy after each use.

Foods are cooked unevenly

For more even browning and crispiness, toss ingredients or turn the tray 180° halfway through cooking cycle.

Flaking of non-stick coating

Clean the sheet pan, pizza pan and crumb tray with moderate detergent and a slightly moist, non-abrasive sponge or cloth.

WARRANTY

Thanks for choosing Paris Rhône Air Fryer Oven.

This product is covered with Paris Rhône product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Paris Rhône.

We can only provide after sales service for products that are sold by Paris Rhône or Paris Rhône authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

✂ **Please have your invoice and order ID ready before contacting Customer Support.**



support@parishone.co



www.parishone.co



Manufacturer: Shenzhen NearbyExpress Technology Development Co.,Ltd.
Address: Floor 7, Building E, Galaxy World Phase II, Shenzhen, China

Made In China

尺寸：140*210mm

装订成册

材质：封面157克书纸 内页105克铜版纸