



ELECTRIC KETTLE

PE-EK009
User Manual

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all Instructions.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- To reduce the risk of injury, do not drape cord over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

- a) A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- b) Longer extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used:
- The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
 - The extension cord should be a grounding-type 3-wire cord.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

CAUTION: Risk of injury, any other servicing should be performed by an authorized service representative

KNOWING YOUR ELECTRIC KETTLE



Specifications

Voltage	120V 60Hz
Power	1500W
Capacity	1.7L



Questions or Concerns?
support@parisrhone.co

USING YOUR ELECTRIC KETTLE

Before First Use


1. Rinse and dry the lid thoroughly.
2. Fill kettle to the maximum level mark with fresh tap water and boil water for several times to deodorize.



Operation



- Before use, make sure the power cord, the base and the body are all dry.
- When filling the kettle, always remove it from the base.
- Pay attention to the escaping steam to avoid scalding.


1. Remove the lid, and fill the kettle with water, making sure that the water level is between the minimum and maximum marks.

2. Align the triangle marks () to replace the lid. Place the kettle back on the base and plug into an electrical outlet.

3. ① To boil water, tap  directly.
 ② To set a desired temperature, tap  repeatedly to cycle through 212°F-120°F-160°F-175°F-185°F-195°F. The kettle will start to heat water to the desired temperature after the display flashes three times.
4. Once completed, three beeps will be heard, with the current water temperature shown on the display.

Additional Features

Keep Warm Function

- Keep warm function will be activated automatically after the heating cycle.
- If the kettle is removed from the base, replace the kettle and hold  until a beep is heard to activate this function manually. The keep warm temperature level is auto-selected depending on the actual water temperature.

Keep warm temp: 120°F/160°F/175°F/185°F/195°F. The kettle will auto shut-off after 40-minute warm-keeping.

Boil-Dry Protection

In the event that the kettle boils dry, it is protected by a boil dry fail-safe mechanism. It will switch the kettle off automatically when sensing a boil dry situation and keep it switched off until the kettle is refilled with at least the minimum amount of water. Always allow the kettle to cool for at least 10 minutes before reuse if the kettle has boiled dry.

CLEANING AND MAINTENANCE



- Always unplug the kettle from the socket and allow it to cool completely before cleaning or descaling it.
- DO NOT immerse the kettle, its power cable, and socket or base into water to avoid hazards.



- Wipe the outer body with a soft dry cloth.
- Regularly remove water scale deposits from inside the kettle based on how frequently the kettle is used.
- In case of scale buildup, fill the kettle with vinegar or lemon juice, add water and set aside for at least one hour. Pour the mixed liquid away, fill the kettle with clean water to the maximum line, boil and get rid of the water. Repeat several times until all the vinegar odor is flushed away.

WARRANTY

Thanks for choosing Paris Rhône Electric Kettle.

This product is covered with Paris Rhône product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Paris Rhône.

We can only provide after-sales service for products that are sold by Paris Rhône or Paris Rhône authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

※**Please have your invoice and order ID ready before contacting Customer Support.**



support@parisrhone.co



www.parisrhone.co



Manufacturer: Shenzhen NearbyExpress Technology Development Co.,Ltd.
 Address: Floor 7, Building E, Galaxy World Phase II, Shenzhen, China



Intertek
 3061511
 Made In China

尺寸：120*160MM

折页

材质：128克铜版纸