

PE-EK010 **User Manual** 

## SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all Instructions.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when any appliance is used by or
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off ", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- To reduce the risk of injury, do not drape cord over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

# **SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY**

- a) A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer
- b) Longer extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used:
  - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
- The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- The extension cord should be a grounding-type 3-wire cord.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.


**CAUTION:** Risk of injury, any other servicing should be performed by an authorized service representative.



**Questions or Concerns?** 

support@parisrhone.co

#### KNOWING YOUR ELECTRIC KETTLE

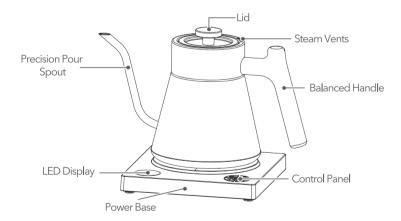

#### **Specifications**


Voltage	120V 60Hz
Power	1200W
Capacity	1.0L/33.8 OZ

## **USING YOUR GOOSENECK KETTLE Control Panel**

ON/OFF	Display ON/OFF Press to turn on/off the display.
Boil	Fast Boil Press to automatically set the target temperature at 212°F/100°C.
Keep Warm	Keep Warm / °F/°C  • Press once to keep at set temperature (100°F-210°F/40°C-99°C) for up to 120 minutes.  • Long press to change the displayed temperature unit: °F/°C.
+	Temperature + Press once to increase the temperature by one degree.
-	Temperature - Press once to decrease the temperature by one degree.

Preset temperature: 100°F-212°F/40°C-100°C.

# **LED Display**

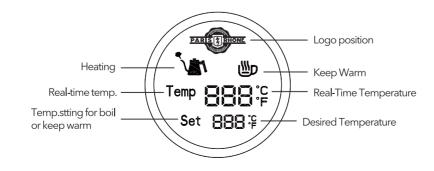

#### **Before First Use**

- 1. Rinse and dry the lid thoroughly.
- 2. Fill kettle to the maximum level mark with fresh tap water and boil water for several times to deodorize.

#### **Operation**



When filling the kettle, always remove it from the base Pay attention to the escaping steam to avoid scalding. It will heat water only when the desired temperature is higher than the actual water temperature.

- 1. Fill the kettle with water, making sure that the water level is between the minimum and
- 2. Replace the lid and place the kettle back on the base and plug into an electrical outlet. 3. Press "ON/OFF" button to turn on the display.
- 4. After setting a desired temperature, the kettle will start to heat water, with 🐚 lighting
- 5. Once completed, three beeps will be heard.

#### **Boil-Dry Protection**

In the event that the kettle boils dry, it is protected by a boil dry fail-safe mechanism. It will switch the kettle off automatically when sensing a boil dry situation and keep it switched off until the kettle is refilled with at least the minimum amount of water. Always allow the kettle to cool for at least 10 minutes before reuse if the kettle has boiled dry.

## **CLEANING AND MAINTENANCE**



Always unplug the kettle from the socket and allow it to cool completely before cleaning or descaling it.

DO NOT immerse the kettle, its power cable, and socket or base into water to avoid hazards.

DO NOT wash in a dishwasher

Follow the instructions below to clean the kettle:

- 1. Remove the lid, add in 0.5L/16.9 fl.oz lemon juice and set aside for at least one
- 2. Empty the kettle. Wipe the interior with wet and soft cloth.
- 3. Fill the kettle with water and bring it to boil.
- 4. Drain the boiled water and rinse the kettle 4 to 5 times.
- 5. Wipe the exterior of the body with dry and soft cloth.

6. Store the unit in dry and well ventilated place.

## **WARRANTY**

Thanks for choosing Paris Rhône Gooseneck Kettle

This product is covered with Paris Rhône product and labor warranty for 12 months from the date of its original purchase.

#### The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel. Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
   Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Paris Rhône.

We can only provide after-sales service for products that are sold by Paris Rhône or Paris Rhône authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues

※Please have your invoice and order ID ready before contacting Customer Support



support@parisrhone.co



www.parisrhone.co



Manufacturer: Shenzhen Danya Technology Co.,Ltd. Address: Room 705, Building E, Galaxy World Phase II, Minle Community, MinZhi Street, Longhua District, Shenzhen, China



Rev 1.0 EN