

TOWER FAN

PE-TF019
User Manual

Questions or Concerns?
support@parisrhone.co

THANK YOU

FOR BEING OUR CUSTOMER



Your purchase is truly appreciated!
We hope you are over-the-moon with our product!

L A N G U A G E S

English 02

Français 20

CONTENTS

SAFETY INSTRUCTIONS	02
ASSEMBLING YOUR TOWER FAN	07
USING YOUR TOWER FAN	10
CLEANING AND MAINTENANCE	15
TROUBLESHOOTING	17

01

SAFETY INSTRUCTIONS



 


DANGER


BEFORE USING THIS APPLIANCE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN YOUR USER MANUAL AND ON THE APPLIANCE



DO NOT touch or hold the mains plug with wet hands.

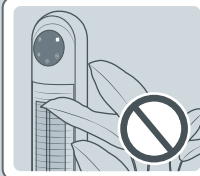

 DO NOT block or cover air flow to or from the fan while in operation.

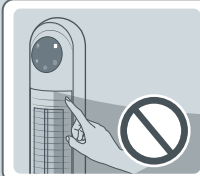

DO NOT insert fingers or objects through the grille while in operation.

INTENDED USE

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use the appliance only for intended household purposes as described in this User Manual. Any other use is not recommended that may cause fire, electric shock, or injury to people.

ELECTRICITY SAFETY

- This appliance must be provided with correct voltage via a professionally installed power socket. Make sure the voltage indicated on the label of the appliance is the same as your local supply.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

RELATED TO USE

- DO NOT use this fan to ventilate areas where flammable liquids or vapors are used, stored or are present.
- DO NOT attempt to disassemble, repair, modify or replace any part any part of your product.
- Always make sure to place the fan on a flat, level surface before operation.
- Always unplug the appliance before cleaning, making any repairs or servicing, or whenever not in use.
- It is normal that there is noise during operation. If too loud, please set the fan to lower speed.

FOR HOUSEHOLD USE ONLY



Regular Check

HAVE YOUR TOWER FAN CHECKED REGULARLY FOR ANY SIGN OF MALFUNCTION!

Check if plug, cord or appliance is damaged

Stop using, check FAQ and contact Paris Rhône Support Team.

SPECIFICATIONS

Input	120V AC 60Hz
Rated Power	25W

 


ACHTUNG


BEVOR SIE DIESES GERÄT VERWENDEN, LESEN SIE ALLE ANWEISUNGEN UND WARNHINWEISE IN IHREM BENUTZERHANDBUCH UND AUF DEM GERÄT



Berühren oder halten Sie den Netzstecker NICHT mit nassen Händen.

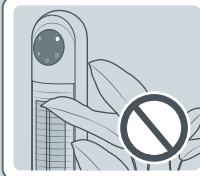

 Den Luftstrom zum oder vom Lüfter während des Betriebs NICHT blockieren oder abdecken.

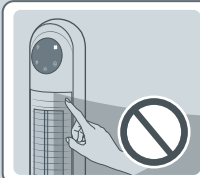

Führen Sie KEINE Finger oder Gegenstände durch das Gitter, während der Lüfter in Betrieb ist.

VERWENDUNGSZWECK

- Dieses Gerät kann von Kindern über 8 Jahren Alt und Erwachsene mit eingeschränkter körperlicher, sensorischer oder geistiger Leistungsfähigkeit oder mangelnder Erfahrung und Kenntnis verwendet werden, wenn sie eine Aufsicht oder Anweisung zur sicheren Verwendung des Geräts erhalten haben und die Gefahren verstehen beteiligt.
- Kinder dürfen nicht mit dem Gerät spielen. Kinder dürfen die Reinigung und Wartung nicht ohne Aufsicht durchführen.
- Wenn das Versorgungskabel beschädigt ist, muss es vom Hersteller, seinen Agent oder ähnlich qualifizierte Personen ersetzt werden, um eine Gefahr zu vermeiden.

 
STROMSICHERHEIT

- Dieses Gerät muss über eine professionell installierte Steckdose mit der richtigen Spannung versorgt werden. Stellen Sie sicher, dass die auf dem Etikett des Geräts angegebene Spannung mit Ihrer örtlichen Stromversorgung übereinstimmt.
- Wenn das Versorgungskabel beschädigt ist, muss es vom Hersteller, seinem Servicemitarbeiter oder ähnlich qualifizierten Personen ausgetauscht werden, um eine Gefahr zu vermeiden.
- Führen Sie keine Schnur unter Teppichboden. Decken Sie das Kabel nicht mit Teppichen, Läufern oder ähnlichen Abdeckungen ab. Verlegen Sie das Kabel nicht unter Möbeln oder Geräten. Verlegen Sie das Kabel außerhalb des Verkehrsbereichs und dort, wo es nicht ausgelöst wird.

IM ZUSAMMENHANG MIT DER VERWENDUNG

- Verwenden Sie diesen Ventilator NICHT, um Bereiche zu lüften, in denen brennbare Flüssigkeiten oder Dämpfe verwendet, gelagert oder vorhanden sind.
- Versuchen Sie NICHT, Teile Ihres Produkts zu zerlegen, zu reparieren, zu modifizieren oder zu ersetzen.
- Stellen Sie den Lüfter vor dem Betrieb immer auf eine ebene Fläche.
- Ziehen Sie immer den Netzstecker aus der Steckdose, bevor Sie das Gerät reinigen, reparieren oder warten oder wenn Sie es nicht verwenden.
- Es ist normal, dass während des Betriebs Geräusche auftreten. Wenn zu laut, stellen Sie den Lüfter bitte auf eine niedrigere Drehzahl ein.

NUR FÜR DEN HAUSHALT LESEN UND SPEICHERN SIE DIESE ANWEISUNGEN

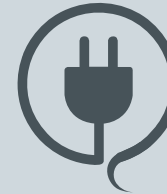

Regelmäßige
Überprüfung

**HABEN SIE IHREN TURMVENTILATOR
REGELMÄSSIG AUF STÖRUNGEN
ÜBERPRÜFT!**

**Überprüfen Sie, ob Stecker, Kabel oder Gerät
beschädigt sind.**


Funktioniert nicht, überprüfen Sie die FAQ und wenden Sie sich an das Paris Rhône-Support-Team.

SPEZIFIKATIONEN


Eingangsspannung	120V AC 60Hz
Nennleistung	25W

02

 ASSEMBLING YOUR TOWER FAN

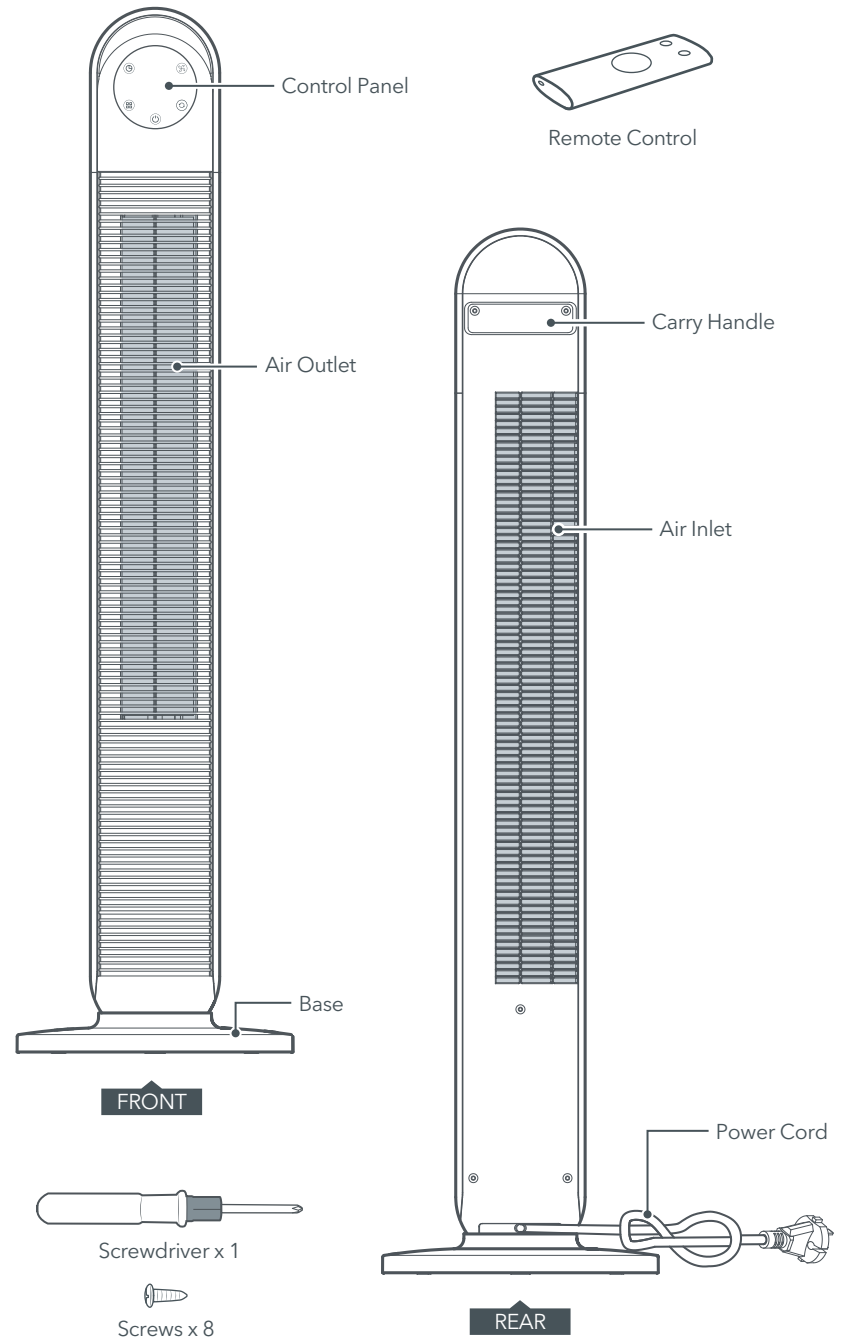


 1.

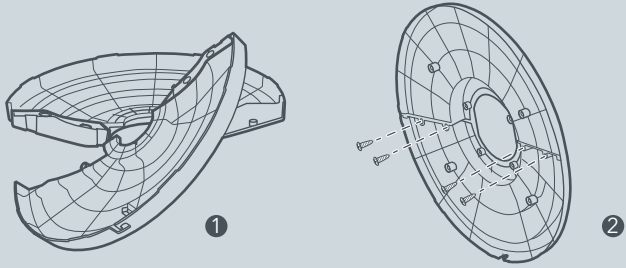

Connect the front and rear base parts by pushing the plastic pegs on one half into the corresponding slots on the other half, and secure with four screws.

 2.

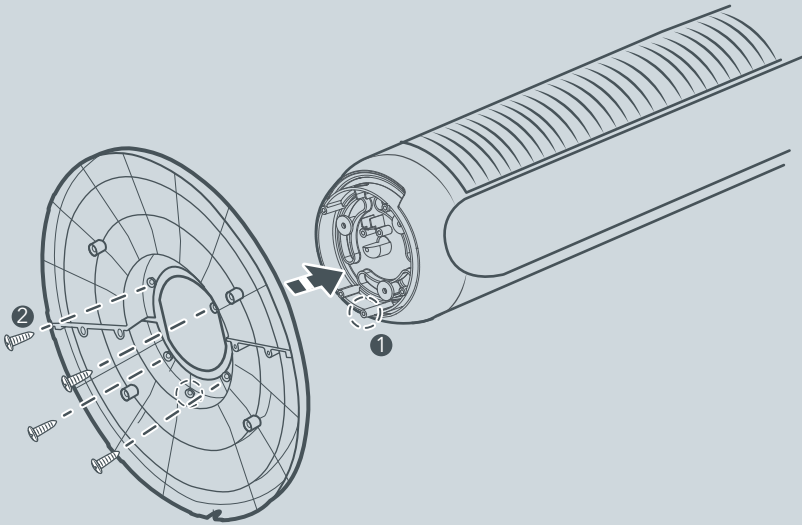

Connect the base and the main body with four screws according to the positioning holes.

03

USING YOUR TOWER FAN



- DO NOT plug into an outlet or operate the fan before the assembly is done.
- Always keep the fan upright on a level ground in case of any damage.

Control Panel



Timer for Turning ON/OFF

Tap to set timer for turning on / off the fan (0-24h).

Display ON/OFF

Tap to turn off the display. Tap any button to wake it up only.



Power ON/Standby

Turn on / Standby mode.



Oscillation

 
 
Tap to start/stop oscillating.



Fan Speed

Tap to cycle through Level 1-12 fan speed.


LED Display

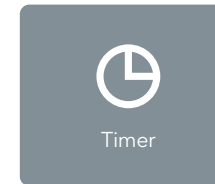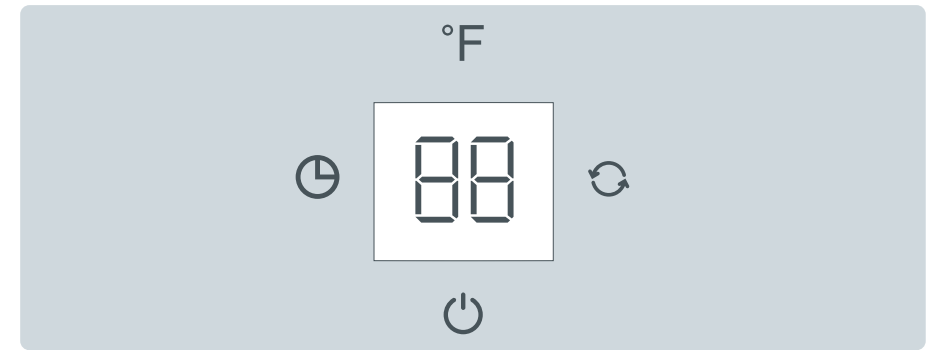

Remote Control



 - For added convenience, the same control buttons can be found on the remote control.
- Press “...” to mute, a beep will be heard and any operations with the control panel or remote control will be mute. Press again to unmute without a notification.

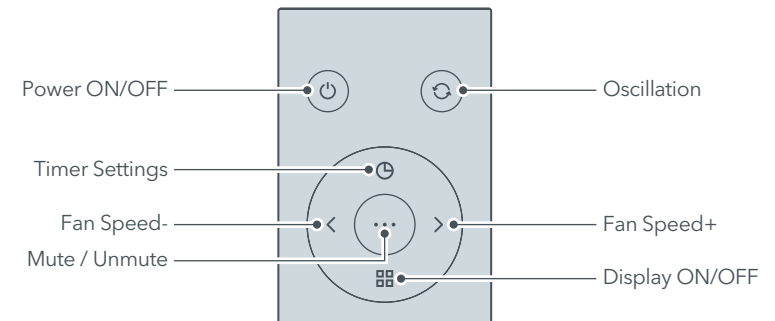

Additional Features



 
Memory Function

The fan is designed with power off memory function, it will always remember your last settings (except timer setting) once you turn it on again. If the fan is disconnected, it will resume to the default mode (Level 12 fan speed, oscillation off) the next time you turn it on.

User Servicing Instructions



This Tower Fan features a fused safety plug which is designed to cut off electric current to the fan if an electrical fault occurs. If your fan loses power and you suspect that the fuse on your fan has blown,

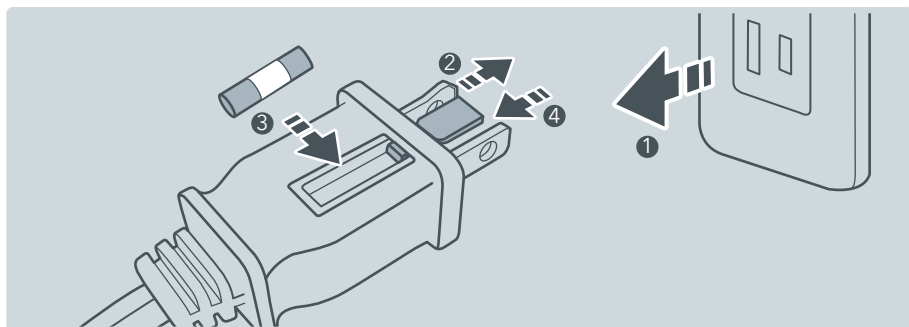


- 1 Grasp plug and remove from the receptacle or other outlet device. DO NOT unplug by pulling on cord.
- 2 Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- 3 Remove fuse carefully. Insert the tip of your tool into fuse slot (close with the terminal), then prize the fuse gradually and slowly, but not overexert. If you feel tight, you can try it at several times and prize the fuse little by little. When one side of the fuse has been prized, then you can get the fuse out entirely. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.
- 4 Close fuse cover. Slide closed the fuse access cover on top of attachment plug. Risk of fire. DO NOT replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

Replacement of Batteries



 - Replace with new batteries of the same type when replacement is required.
- When not using the remote control for a long time, please take out the batteries.
- DO NOT attempt to dismantle the batteries.
- DO NOT dispose the batteries in fire, batteries may explode or leak.
- DO NOT use rechargeable batteries.

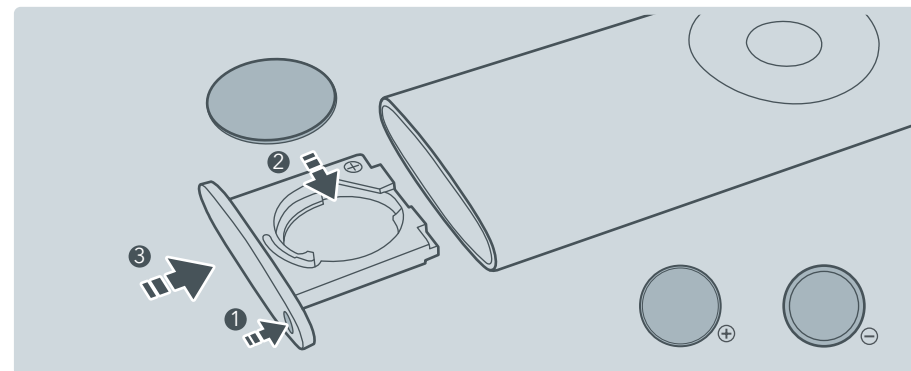

- 1 Press the locking button to pop up the battery holder.
- 2 Replace the battery with the same type (CR2025, 3V), making sure the (+) side facing up.
- 3 Push in the holder until securely locked into place.

 


WARNING:

Do not ingest battery, Chemical Burn Hazard. This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. The batteries contain materials, which are hazardous to the environment; they must be removed from the appliance before it is scrapped and that they are disposed of safely.

04

CLEANING AND MAINTENANCE

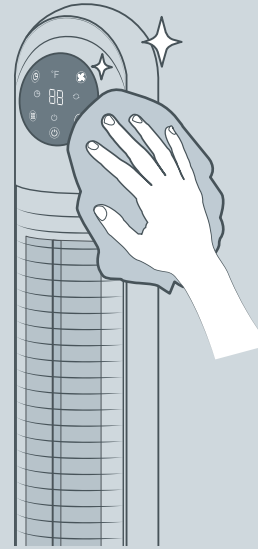

Only a soft cloth can be used for cleaning the outer surfaces.



To remove dust between the grills, a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air are acceptable.



- Always make sure the tower fan is turned off and unplugged before cleaning.
- DO NOT stick any foreign objects or your fingers inside of the unit.
- Never immerse in water or allow water to drip into the motor housing.
- DO NOT clean with abrasive chemicals or flammable cleaning agents.



For storage, you may leave the tower fan covered to protect it from dust. Store it in a cool, dry location and wrap the cord around the cord wrap on the unit so that it will not be tripped over or damaged.

05

TROUBLE- SHOOTING



Why there is noise

It is normal that there is noise during high speed, lower the speed and check again.

Why the wind power is not strong enough

- Move the fan closer.
- Ensure air inlet and outlet are unobstructed, and no obstacles before the fan.

Why the remote control is not working

- Make sure the fan is connected to a powered electrical outlet.
- Check that the remote control is powered and move the obstacles between the fan and the remote.
- Operate the remote control near or in front of the tower fan.

Why the oscillation is not steady

Check that the base is firmly assembled and the fan is on a level ground.


CONTENTS

ASSEMBLAGE DE VOTRE VENTILATEUR	20
UTILISER VOTRE VENTILATEUR TOUR	23
NETTOYAGE ET ENTRETIEN	28
DÉPANNAGE	30


01

 ASSEMBLAGE DE VOTRE VENTILATEUR



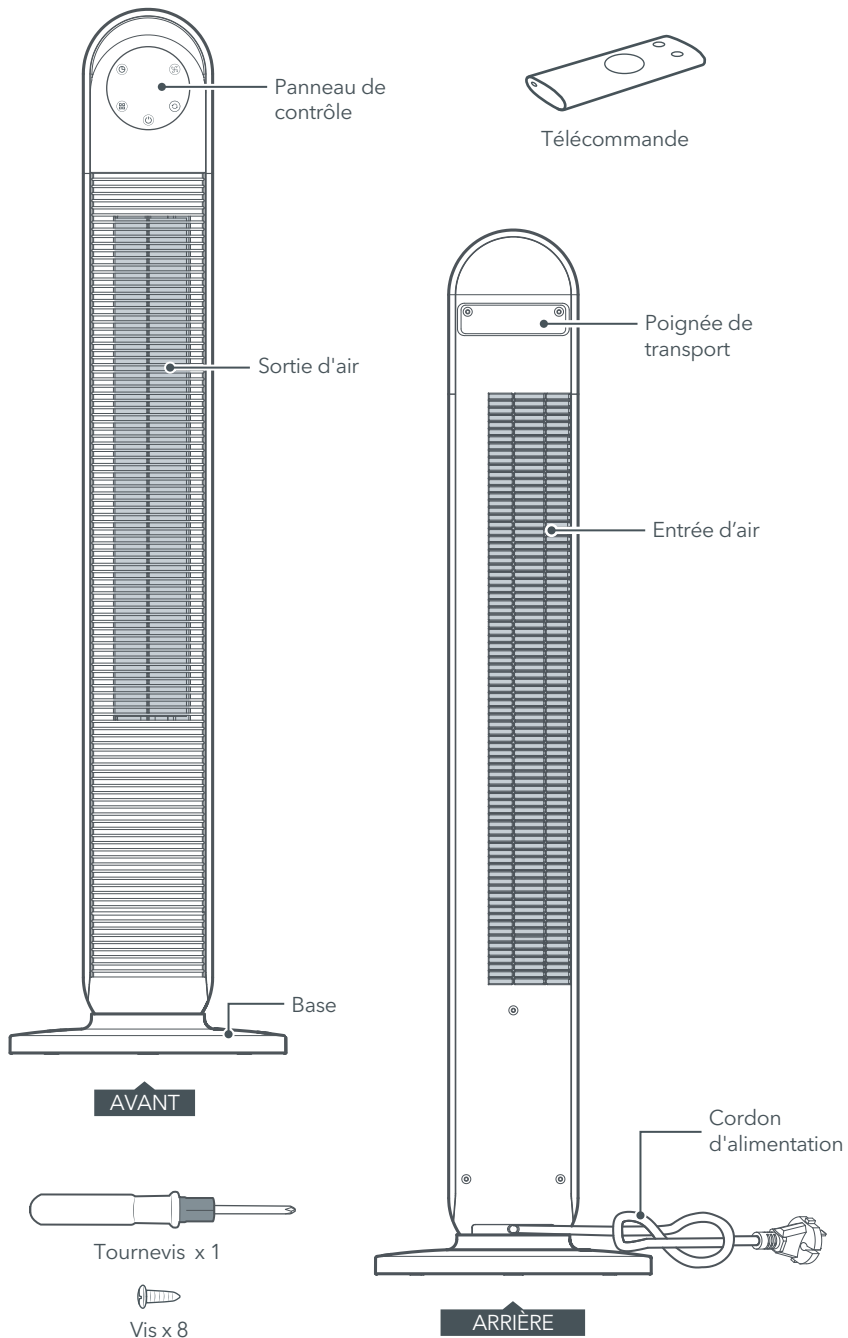


 1.

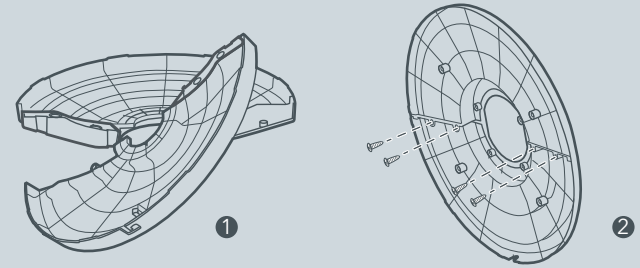

Connectez les parties avant et arrière de la base en poussant les chevilles en plastique d'une moitié dans les fentes correspondantes de l'autre moitié, et fixez-les avec quatre vis.

 2.

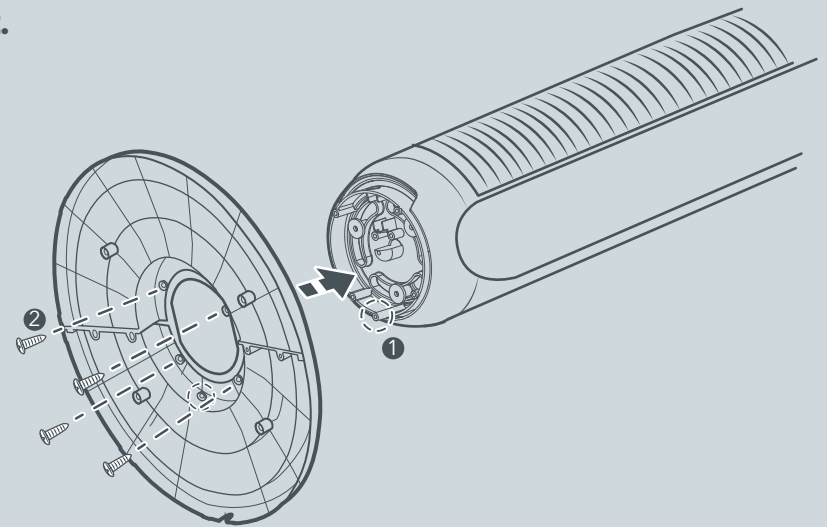

Raccordez la base et le corps principal à l'aide de quatre vis en respectant les trous de positionnement.



- NE PAS brancher dans une prise de courant ou faire fonctionner le ventilateur avant que l'assemblage ne soit terminé.
- Maintenez toujours le ventilateur en position verticale sur un sol plat en cas de dommage.

02

UTILISER VOTRE VENTILATEUR TOUR



Panneau de contrôle



Minuteur d'allumage /extinction

Touchez une fois pour régler la minuterie pour allumer / éteindre le ventilateur (0-24h).



Affichage ON/OFF

Touchez pour éteindre l'écran. Appuyez sur n'importe quel bouton pour l'allumer uniquement.



Mise sous tension / Mise en veille

Mise en marche/mode veille.



Oscillation

 
 
 
Appuyez sur pour démarrer/ arrêter l'oscillation..



Vitesse du ventilateur

Appuyez pour faire défiler les vitesses du ventilateur de 1 à 12.


Affichage LED

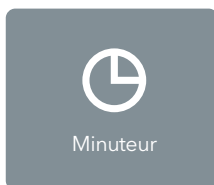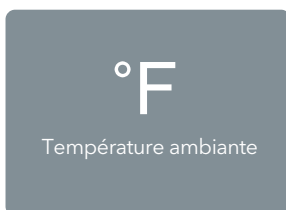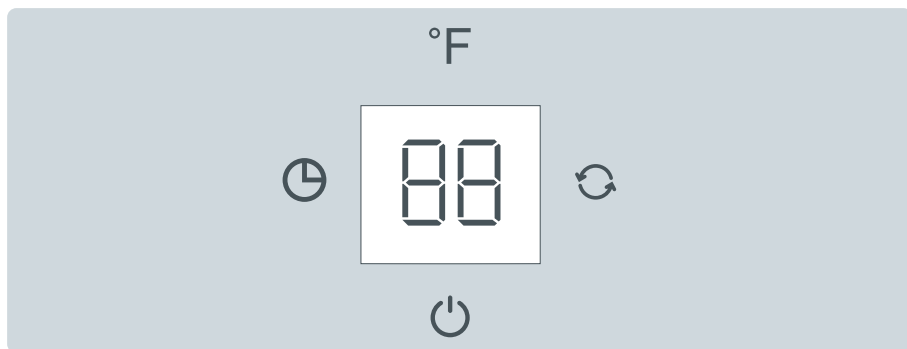

Télécommande



 - Pour plus de commodité, les mêmes boutons de commande se trouvent sur la télécommande.
- Appuyez sur "..." pour mettre en sourdine, un bip se fait entendre et toute opération avec le panneau de commande ou la télécommande est mise en sourdine. Appuyez à nouveau sur pour rétablir le son sans notification.

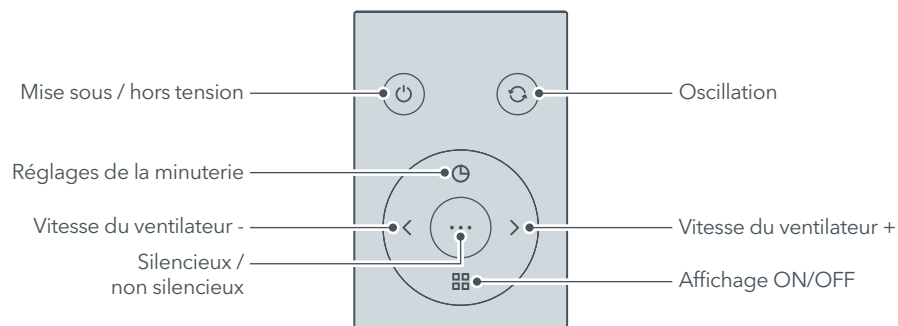

Caractéristiques supplémentaires



 
Fonction de mémoire

Le ventilateur est conçu avec une fonction de mémoire de mise hors tension, il se souviendra toujours de vos derniers réglages (à l'exception du réglage de la minuterie) lorsque vous le remettrez en marche. Si le ventilateur est débranché, il reprendra le mode par défaut (12 vitesses de ventilation, oscillation désactivée) la prochaine fois que vous l'allumerez.

Instructions de réparation



Ce ventilateur tour est équipé d'une fiche de sécurité à fusible conçue pour couper le courant électrique du ventilateur en cas de défaillance électrique. Si votre ventilateur perd le courant et que vous soupçonnez que le fusible de votre ventilateur a sauté,

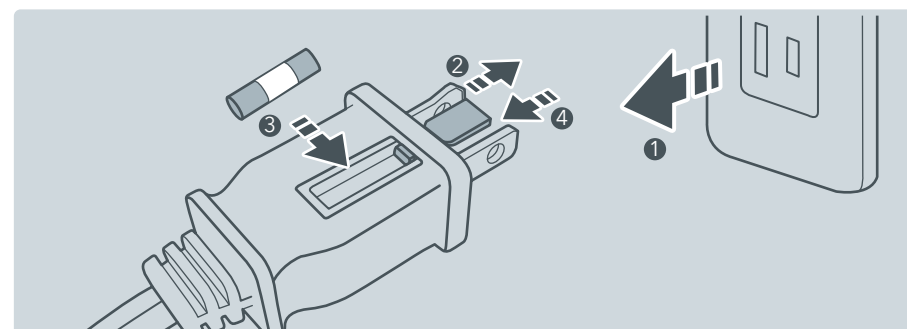


- 1 Saisissez la fiche et retirez-la de la prise ou de tout autre dispositif de sortie. NE PAS débrancher en tirant sur le cordon.
- 2 Ouvrez le couvercle du fusible. Faites glisser le couvercle d'accès aux fusibles ouvert sur le dessus de la fiche d'attache vers les lames.
- 3 Retirez le fusible avec précaution. Insérez la pointe de votre outil dans la fente du fusible (à proximité de la borne), puis remontez le fusible progressivement et lentement, mais sans forcer. Si vous le sentez trop serré, vous pouvez essayer à plusieurs reprises et soulever le fusible petit à petit. Lorsqu'un côté du fusible a été soulevé, vous pouvez alors le retirer entièrement. Risque d'incendie. Remplacez le fusible uniquement par un fusible de 5 ampères, 125 volts.
- 4 Fermez le couvercle du fusible. Glissez le couvercle d'accès aux fusibles situé sur le dessus de la fiche de raccordement. Risque d'incendie. NE PAS remplacer la fiche de l'accessoire. Contient un dispositif de sécurité (fusible) qui ne doit pas être retiré. Jeter le produit si la fiche de fixation est endommagée.

Remplacement de la batterie



 
- Remplacez par des piles neuves du même type lorsque le remplacement est nécessaire.
- Si vous n'utilisez pas la télécommande longtemps, veuillez retirer les piles.
- NE PAS essayer de démonter les piles.
- NE PAS jeter les piles au feu, les piles peuvent exploser ou fuir.
- NE PAS utiliser de piles rechargeables.

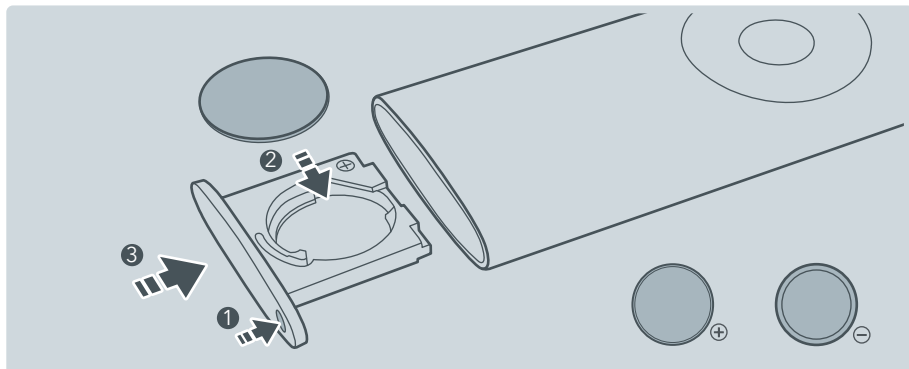

- 1 Appuyez sur le bouton de verrouillage pour sortir le support de pile.
- 2 Remplacez la pile par le même type (CR2025, 3V), en veillant à ce que le côté (+) soit orienté vers le haut.
- 3 Poussez le support jusqu'à ce qu'il soit bien verrouillé en place.

03

 NETTOYAGE ET ENTRETIEN

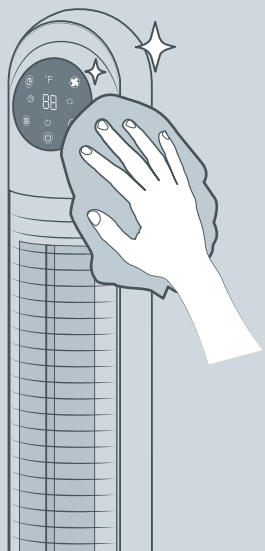

Seul un chiffon doux peut être utilisé pour nettoyer les surfaces extérieures.



Pour enlever la poussière entre les grilles, un cure-pipe, une lance à poussière flexible, un aspirateur ou de l'air comprimé sont acceptables.



- Assurez-vous toujours que le ventilateur tour est éteint et débranché avant le nettoyage.
- NE PAS mettre d'objets étrangers ou de doigts à l'intérieur de l'appareil.
- Ne plongez jamais dans l'eau et ne laissez jamais l'eau s'égoutter dans le carter du moteur.
- NE PAS nettoyer avec des produits chimiques abrasifs ou de nettoyage inflammables.



Pour le stockage, vous pouvez laisser le ventilateur assemblé et couvert pour le protéger de la poussière. Conservez le ventilateur dans un endroit frais et sec.

04

DÉPANNAGE

Pourquoi y a-t-il du bruit

Pourquoi le vent généré n'est-il pas assez puissant

Pourquoi la télécommande ne fonctionne-t-elle pas

Pourquoi l'oscillation n'est-elle pas régulière

Il est normal qu'il y ait du bruit à grande vitesse, réduisez la vitesse et vérifiez à nouveau.

- Rapprochez le ventilateur.
- Assurez-vous que l'entrée et la sortie d'air ne sont pas obstruées et qu'il n'y a pas d'obstacles devant le ventilateur.

- Assurez-vous que le ventilateur est branché à une prise électrique.
- Vérifiez que la télécommande est alimentée et déplacez les obstacles entre le ventilateur et la télécommande.
- Utilisez la télécommande à proximité ou face au ventilateur.

Vérifiez que la base est solidement assemblée et que le ventilateur se trouve sur un sol plat.

WARRANTY AND SERVICE

Thanks for choosing Paris Rhône Tower Fan.

 
This product is covered with Paris Rhône product and labor warranty for 12 months from the date of its original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any of its parts that have been performed by a repair person not authorized by Paris Rhône.

We can only provide after sales service for products that are sold by Paris Rhône or Paris Rhône authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

✳️ **Please have your invoice and order ID ready before contacting Customer Support.**

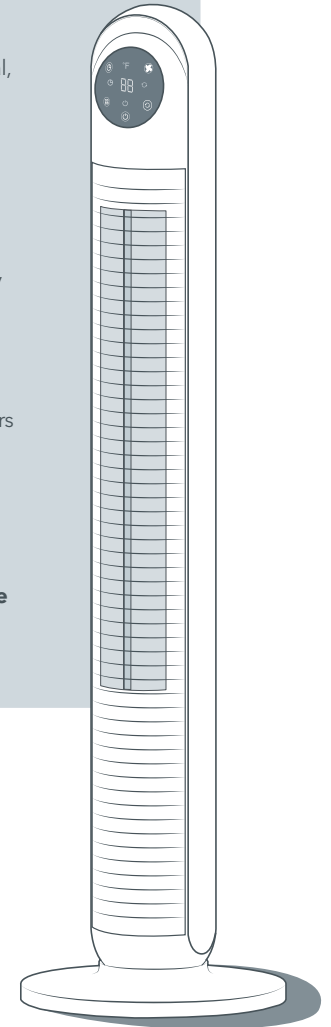



WEEE Compliance

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



support@parishone.co



www.parishone.co



Manufacturer: Shenzhen Danya Technology Co.,Ltd.
Address: Room 705, Building E, Galaxy World Phase II, Minle Community,
MinZhi Street, Longhua District, Shenzhen, China



Intertek
4005910



MADE IN CHINA

尺寸：140*210mm

装订成册

材质：封面120克铜版纸，内页80克书纸

印刷：双色印刷