

SAFETY INSTRUCTIONS

1. Read the instructions carefully before installation and use. Keep the manual safe for future reference.
2. Ensure the location you have selected to install the speaker will provide proper support and does not have obstructions that might interfere with the sound. Never submerge the speaker in water.
3. Do not touch or bump the woofer and tweeter. If these are damaged, the sound will be distorted.
4. Protect the power cable from being damaged. Do not stretch the power cable or place it near sharp objects that may damage it.
5. A damaged cable must be repaired or replaced by an authorised electrician.
6. Never turn up your speaker volume to the point of distortion and always reduce volume prior to switching input sources.

CARE & MAINTENANCE

Ensure all equipment is turned OFF prior to cleaning. Surfaces and cabinet need only occasional dusting/cleaning. Never touch the speaker drivers. Never use chemicals or solvents as they may damage the surface. Clean using a damp cloth.

SPECIFICATIONS

Art. no:	5103
Voltage:	230V
Amplifier:	Active, integrated
RMS Power:	60W
Woofer:	6.5"
Tweeter:	1"
Diameter:	36cm
Height:	41cm
Cable length:	2m
IP Class:	IP56, weatherproof
Bluetooth:	Up to 20m
Wireless pairing:	Max 2 units, up to 10m

Scan for more information



THANK YOU FOR CARING

Always recycle!

Please refer to the local environmental laws for recycling.



Lightson

 
LightsOn AB
Terminalgatan 3
235 39 Vellinge
Sweden
www.lightson.se

LIGHTSON
GARDEN
PLUG & PLAY


STREAM

OUTDOOR SPEAKER

Wireless

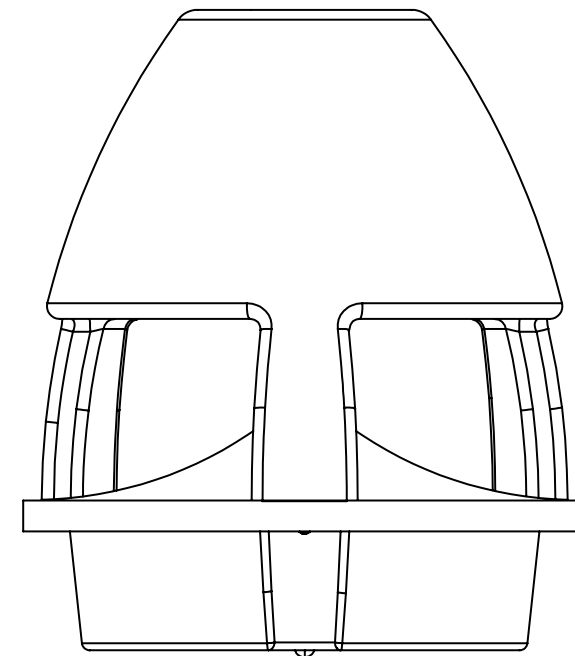

KNOW YOUR SPEAKER

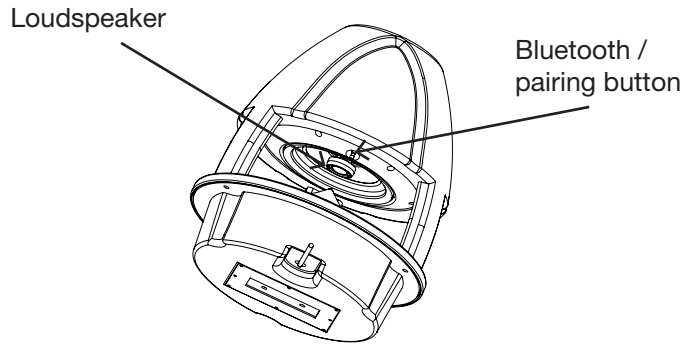 


The speaker usually needs a break-in period of 20-30h play time to reach optimal sound quality.


Stream has a built in equalizer that is optimized for great outdoor sound. If you prefer different sound characteristics, please adjust the equalizer, or treble / bass, on your music source.

BLUETOOTH CONNECTION

1. Connect the speaker to the power supply.
2. Press the Bluetooth button briefly (do not hold). The speaker is now ready to connect to your phone.

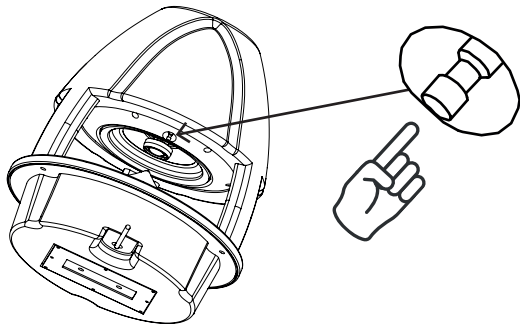


 3. Locate the speaker (named LightsOn Stream) in the Bluetooth settings on your phone and connect.

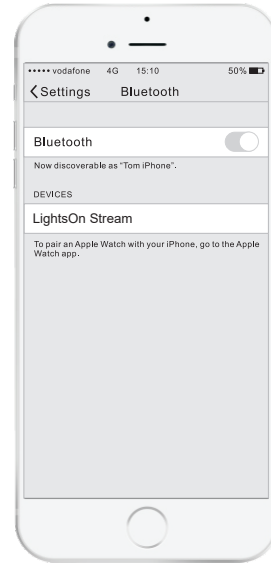

PAIRING SPEAKERS (optional)

1. Press the Bluetooth button on the main speaker for two seconds. The main speaker is now ready to pair with the second speaker.
2. Now press the button on the second speaker for two seconds. The speakers are now paired together for wireless stereo sound.

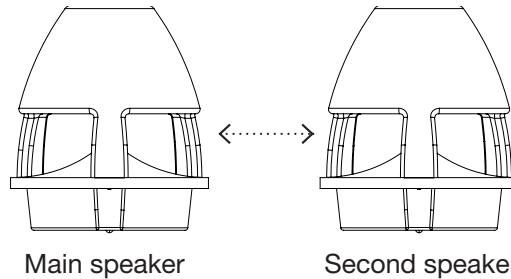

If you wish to disconnect the second speaker, briefly press (do not hold) the Bluetooth button twice.

TROUBLESHOOTING

If a problem arises, please check the FAQ below

Q: The speaker has not been found during Bluetooth setup.

A:

1. Please check that the power cable is connected.
2. Make sure that you have pressed the speaker Bluetooth button to activate Bluetooth.
3. Make sure that the speaker is within 10m range of your phone during setup.

Q: The speaker connects to the phone but there is no sound.

A: Ensure that the volume is turned up on the phone and that it is not muted.

Q: The sound is distorted when playing bass heavy music very loud.

1. Turn down the volume until the distortion disappears.
2. Adjust the bass level in the equalizer (or treble / bass) on your phone.

Q: The second speaker (optional) does not pair with the first speaker.

A: Follow the steps for pairing two speakers and make sure that the distance between the two speakers is max 10m.

Press the speaker button for 10 seconds if you wish to delete all connection data and restore to factory default setting.