

USER MANUAL

CONTENTS

- 3 Caution
- 4 Components & Operation
- 8 Cleaning & Maintenance
- 9 Troubleshooting
- 10 Technical Information

CAUTION



 
WARNING: These instructions should be read carefully and retained for future use, we cannot be liable for any damages caused by not following these instructions.

Important Safety Instructions

Operation of the heater can be dangerous. Observing the following procedures will reduce the risk of fire, electric shock or injury to a person and minimize installation time.



1. Remove the unit from its packaging and make sure it is in good condition before using.
2. Risk of electric shock. Do not attempt to repair or modify the unit, doing so will void the warranty.
3. Do not operate any heater that is damaged or malfunctioning due to previous use or drop. Disconnect power if the supply cord is damaged in any way and contact our customer service.
4. Keep packaging away from children.
5. Check the household voltage to ensure it matches the heater's specification (120 V / 60 Hz).
6. This heater is hot when in use. To avoid burns, do not touch the surface. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 1 m (39 in) from the front of the heater and keep them away from the sides and rear.
7. Do not use the unit near any water source/container and do not operate with wet hands. Make sure the unit is on a dry and level surface.
8. Do not immerse cord or plug in any liquids.
9. Keep the air inlets and outlets clean and free of dirt, dust accumulation or anything that may cause blockage.
10. Always unplug the heater when not in use.
11. Connect to properly grounded outlets only.
12. Always plug the heater directly into a wall outlet. Never use with an extension cord, power strip or solid state speed control device.
13. Do not allow cord to hang over a counter top where it may be easily pulled.
14. Do not put fingers or foreign objects into the grill while in operation.
15. This unit is only intended to be used by capable adults.
16. Do not cover cord with carpets, rugs, runners or similar items. Do not route cord under furniture or appliances. Arrange cord away from high traffic areas and where it will not be tripped on.
17. To disconnect the heater, turn controls to off, then remove plug from outlet.
18. The heater has hot, arcing and sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
19. Do not use the heater outdoors.

COMPONENTS & OPERATION

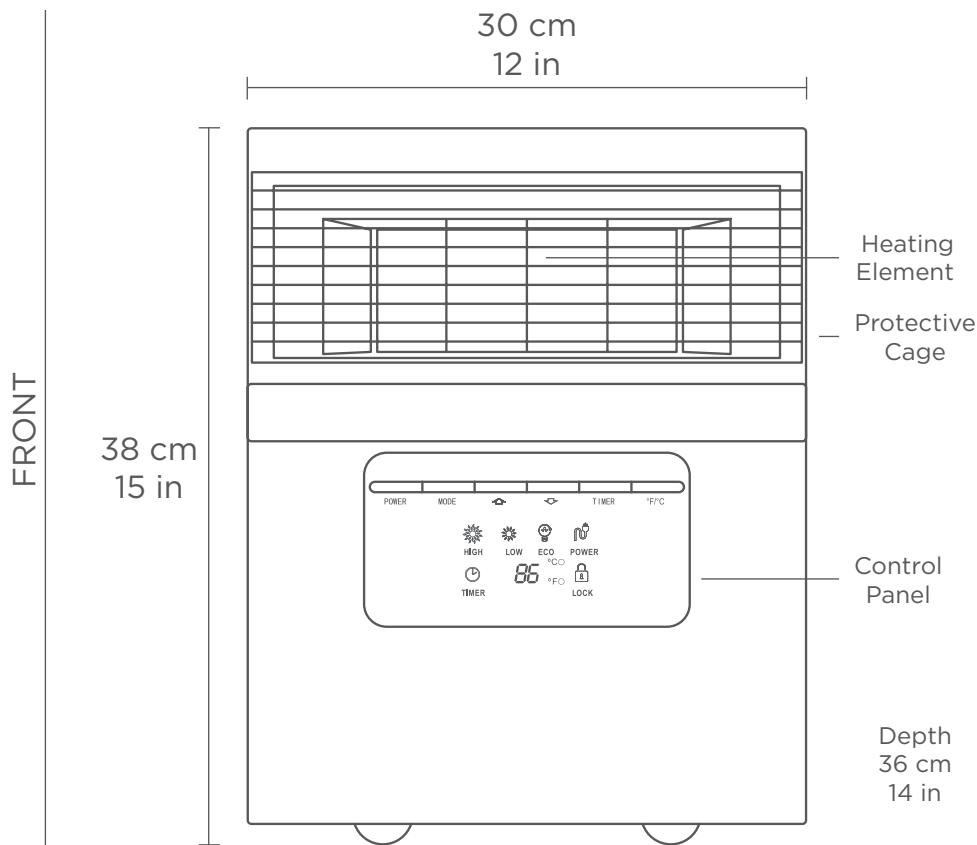


Plug

  The unit must be plugged into a 3 pin properly grounded outlet for proper and safe use.

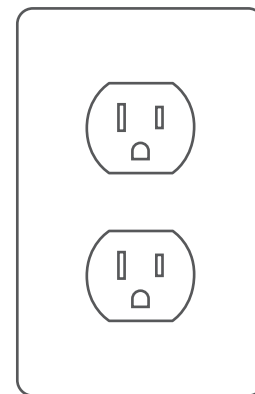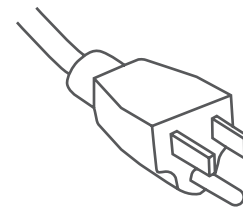


COMPONENTS & OPERATION

 CONTROL PANEL

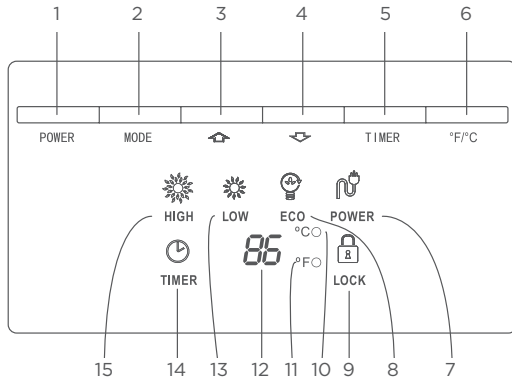

Button	Function
1	Power Powers the heater On or Off
2	Mode Toggles between the 3 modes available
3	Temp Up Increases the set temperature
4	Temp Down Decreases the set temperature
5	Timer Engages the on/off timer function
6	°F/°C Alternates between temperature units

 REMOTE CONTROL

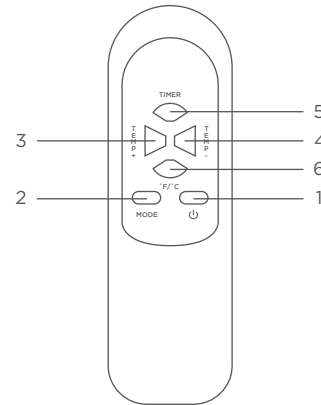

Indicator	Function
7	Power Indicates the heater is receiving power
8	Eco Mode Indicates when energy saving mode is on
9	Lock Indicates when locked
10	Celsius Indicates units are in Celsius
11	Fahrenheit Indicates units are in Fahrenheit
12	Digital Display Displays temperature or timer
13	Low Heat Indicates low heat mode is on
14	Timer Indicates timer mode is on
15	High Heat Indicates high heat mode is on

COMPONENTS & OPERATION

Start

- Plug in the unit and make sure that the switch on the back of the unit is in the on position.
- Turn the heater on by pressing the POWER button on the control panel or the supplied remote control.
- Select a heat mode by pressing the MODE button to toggle between the 3 settings. HIGH HEAT mode uses 1500 W, LOW HEAT mode uses 1000 W, and ECO mode uses the needed energy to maintain the desired temperature.
- Once power is off, heating element will stop working first. Fan will stay on for 1 minute to cool down the unit.

Temperature Setting

- Adjust the desired temperature by pressing the UP or DOWN buttons on the control panel or remote.
- Operating Temperatures: 15 °C (59 °F) - 30 °C (86 °F)
- Once the desired temperature is chosen, the heater will remain on until the room temperature increases and reaches to what is displayed. The unit will cycle on and off to maintain the temperature.
- Press °F/°C to change the temperature unit.
- The indicator light beside the °F or °C will turn on to indicate the operating unit.

COMPONENTS & OPERATION

Power Off Timer

- Turn the heater on and set the unit to the desired temperature.
- Press the TIMER button on the control panel or the remote.
- The digital display will change from the temperature to the hours option for the timer. Continue to press the TIMER button to change the number of hours you would like the unit on.
- The selected hours will flash before reverting back to the temperature. The timer indicator light will remain lit as long as the timer is activated.
- The unit will power off when the timer counts down to the selected hour.

Power On Timer

- Turn the heater off.
- Press the TIMER button on the control panel or the remote.
- The digital display will change to the hours option for the timer. Continue to press the TIMER button to change the number of hours you would like before the unit turns on.
- The timer indicator light will remain lit as long as the timer is activated.
- The unit will turn on when the internal timer counts down to the selected hour.

Control Panel Lock

- Press the UP and DOWN buttons on the unit at the same time for 3 seconds until it beeps, indicating that it is locked. This will lock both the control panel and the remote.
- To disengage lock, press the temp UP and DOWN buttons on the unit at the same time for 3 seconds until it beeps, indicating that it is unlocked. This will unlock both the control panel and the remote.

CLEANING & MAINTENANCE

 
 


IMPORTANT: Always disconnect the heater from the outlet and allow it to cool before attempting to work on it.

1. Do not attempt to repair or adjust any electrical or mechanical functions on the heater.
2. The heater does not contain user serviceable parts. Should the product be damaged or breakdown, contact our customer service.
3. Damaged supply cords must be replaced by the manufacturer.
4. Make sure the switch at the back is off before plugging the heater into the outlet. Put the heater on a flat stable surface.

Cleaning

Unplug the power cord and make sure the heater is cool before continuing. Clean the vents with a vacuum brush attachment. Clean the outer shell with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth. **DO NOT** use alcohol, gasoline, abrasive powders, furniture polish or rough brushes to clean the heater. **DO NOT** immerse the heater in water. Wait until the heater is completely dry before use. Air filters need to be cleaned every 3 months. Take off the filter using the instructions below. Flush and clean the filters with water and then, dry it out and re-assemble.

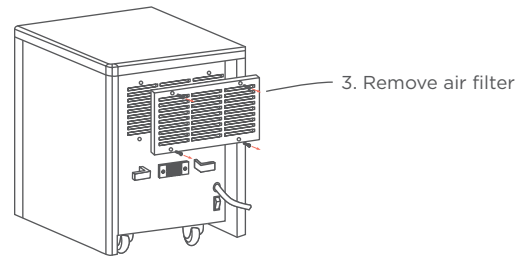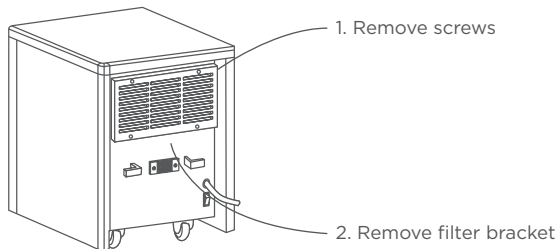

Storage

Store the heater in a cool dry location with power cord properly secured. Store the unit in its original carton or suitable container.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTION
Unit will not turn on.	<ol style="list-style-type: none">1. The On/Off switch on the back of the unit is in the off position.2. Unit may not be properly plugged in.	<ol style="list-style-type: none">1. Flip the switch on the back to the on position.2. Check the plug to make sure the unit is properly plugged in and the wire is intact.
Undesirable odor.	<ol style="list-style-type: none">1. There may be something in the vent.	<ol style="list-style-type: none">1. Follow the cleaning instructions on page 8.
Remote is not working.	<ol style="list-style-type: none">1. Remote control batteries have run out.	<ol style="list-style-type: none">1. Replace batteries (AAA).



For further questions regarding the set up of your Briza heater or for troubleshooting tips please visit our website www.brizacomfort.com. You will find help for frequently asked questions in the FAQ section.

Recycling

At the end of the product life make sure to bring it into your local recycling facility or call your regional recycling authorities for instructions on how to properly dispose of the unit.

TECHNICAL INFORMATION

Input Electricity	120 V / 60 Hz
Power	1500 W
Overall Dimension	36x30x38 cm (14x12x15 in)
Weight	6.3 kg (13.9 lb)

Remote Control Included

Batten Industries Inc.
114-2455 Dollarton Hwy.
North Vancouver, BC, V7H 0A2
Toll Free 1.888.984.7471
info@brizacomfort.com

brizacomfort.com

