

4L60 to 4L80 swap wiring

Trans pin	4L60 PCM	Colour	Function	4L80 PCM	Colour	Funtion
A	c2-48	lt gn	1-2	same	same	same
B	c2-47	yel/blk	2-3	same	same	same
C	c2-6	rd/blk	pc sol	same	same	same
D	c2-8	lt bl/wh	pc sol	same	same	same
E	Ign	pnk	ign +	same	same	same
L	c2-51	yel/blk	temp	same	same	same
M	c1-53	grey	temp	same	same	same
N	c2-63	pnk	range A	same	same	same
P	c1-18	red	range C	same	same	same
R	c1-17	dk bl	range B	same	same	same
S	c1-79	wh	3-2 sol	c2-2	brn	tcc pwm
T	c2-42	tn/blk	TCC sol	n/a	n/a	n/a
U	c2-2	brn	tcc pwm	n/a	n/a	n/a
	c2-20		VSS	same	same	same
	c2-21		VSS	same	same	same
	n/a		ISS	c2-22		
	n/a		ISS	c2-23		

~ 4L60 S&T to be used for 4L80 ISS

~ move 4L60 U to 4L80 S

~ Move pin C1-79 to C2-22

~ Move pin C2-42 to C2-23

~ C1 is Blue PCM Connector

~ C2 is Red or Green PCM Connector

Engine Harness to Transmission Connector

