



Akko

MOD 003/004
GASKET

 
用户手册 User Manual

目录

Mod 003/004组合键功能	1
Mod 003/004系统功能(Windows)	2
Mod 003/004系统功能(Mac)	3
Mod 003/004背光调节	4
按键 / 灯光自定义说明和调用说明	5
Akko售后服务规范	6

Menu

Mod 003/004 HotKeys	7
Mod 003/004 System Commands (Windows)	8
Mod 003/004 System Commands (Mac)	9
Mod 003/004 Backlight Settings	10
Key/Lighting Effects Customization Instruction	11
Akko Warranty and Service Statement	12

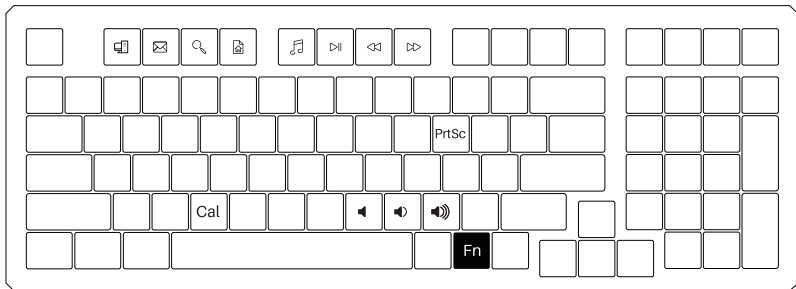


Fn+	F1	=	我的电脑
	F2		电子邮件
	F3		Windows搜索
	F4		浏览器主页
	F5		多媒体播放器

Fn+	F6	=	播放 / 暂停
	F7		上一首
	F8		下一首
	P		Prtsc
	C		计算器

Fn+	M	=	静音
	<		音量减小
	>		音量增加
	w		将 W A S D 与 ↑ ↓ ← → 键对调

Mod 003/004 系统功能(Windows)

 2

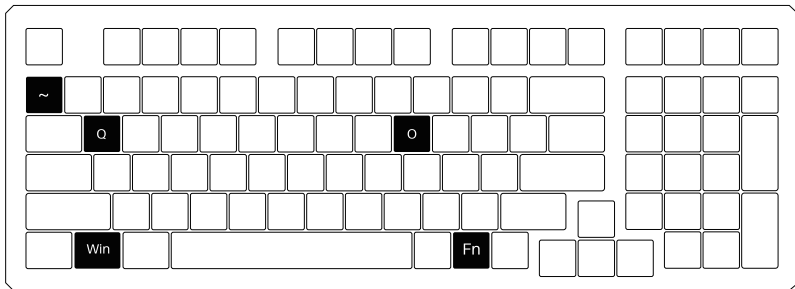

锁Win键

Fn + 左Win

恢复出厂设置

长按 Fn + ~ 3秒

将Ctrl变成Menu (App) 键

 
长按Fn + 右Ctrl 3秒

进入Windows系统

长按Fn + Q 3秒

进入Mac系统

长按Fn + O 3秒

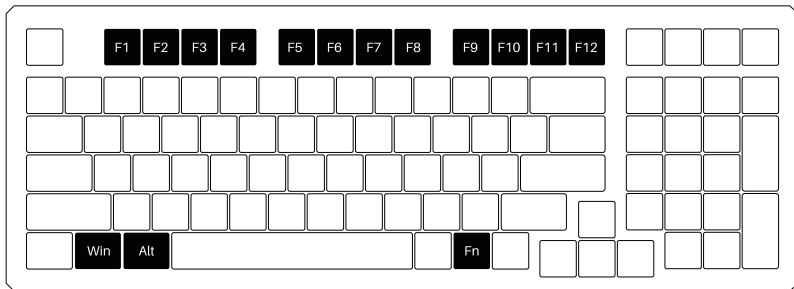

F1 降低显示屏亮度

F2 增加显示屏亮度

F3 开放任务控制

F4 呼出Siri

F5 无功能

F6 无功能

F7 向后跳(音频)

F8 暂停/播放(音频)

F9 向前跳过(音频)

F10 静音

F11 调低音量

 
F12 调高音量

左Win 左Alt

左Alt 左Win

Fn + (F1 ~ F12)

F1 ~ F12

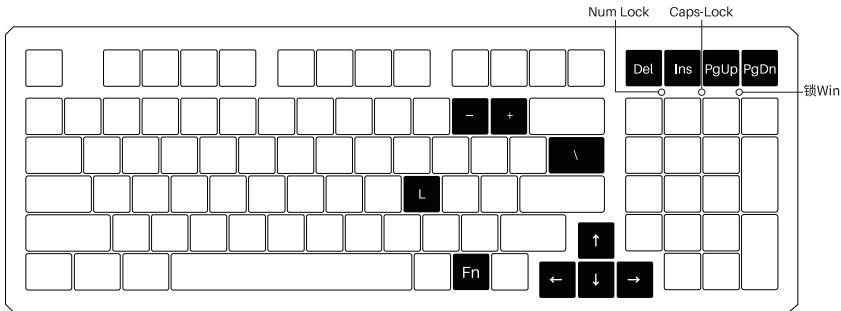

Fn+	Del	一石二鸟、彩泉涌动、峰回路转、极光、百花争艳
	Ins	常亮、流星、呼吸、涟漪、如影随形
	PgUp	繁星点点、霓虹、光波、层出不穷、川流不息
	PgDn	斜风细雨、踏雪无痕、聚合、正弦波、雨滴
	L	灯光开启 / 关闭
	\	在所有灯效RGB彩光模式下,通过这个快捷键,可以调节灯光颜色致7色单色+RGB循环。

Fn+	“↑”	灯光变亮	此处灯光调节为通用功能,有些灯光效果不具备某些调节,如:常亮灯效只能调节亮度,不能调节方向和速度。
	“↓”	灯光变暗	
	“←”	灯光方向向左	
	“→”	灯光方向向右	
	“-”	灯光速度变慢	
	“+”	灯光速度变快	

1. 键盘按键/灯光自定义需在有线模式下配合驱动进行。
2. 键盘有线模式下灯光可搭配驱动实现音乐律动。
3. 按键/灯光自定义及调用说明;请在我司官网下载“Akko Cloud”驱动。
4. 驱动下载地址www.akkogear.com

1. Akko机械键盘享受非人为损坏1年保修服务, 即从购买日起, 1年以内免费维修。
2. 如超过条款1的保修期限, Akko官方将收取不超过市场平均价格的费用提供维修服务。
3. 用户自行拆开键盘视为放弃免费维修服务, 即使1年内损坏, 也按照售后服务条款2执行。
4. 不同销售平台的特殊服务条款, 以购买平台规则为准。

注意 人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等, 键盘为电子产品, 请按照电子产品保护方式爱惜使用。

 
售后电话:0755-27728007

售后QQ:981572876

*官方售后服务时间为每周一至周五上午10:00至下午18:00, 节假日以国家法定节日休息为准。

*因受维修时间, 物流时间, 零件采购时间等不可控因素, 售后时间会有不同, 以实际损坏情况评估为准, 请用户耐心等待。

Mod 003/004 HotKeys

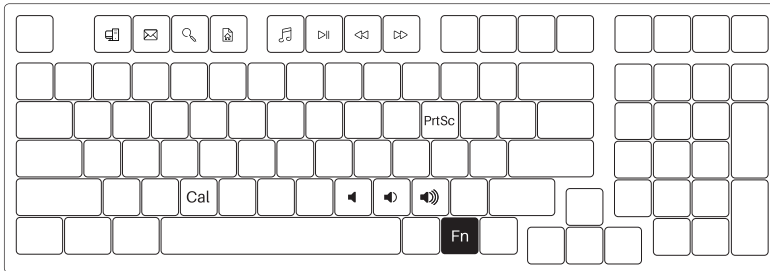


Fn+	F1	=	File Explorer
	F2		E-mail
	F3		Windows Search
	F4		Browser Homepage
	F5		Media

Fn+	F6	=	Pause /Playback
	F7		Previous Song
	F8		Next Song
	P		Print Screen
	C		Calculator

Fn+	M	=	Mute
	<		Decrease Volume
	>		Increase Volume
	w		Swap W A S D with ↑ ↓ ← →

 Mod 003/004 System Commands(Windows)

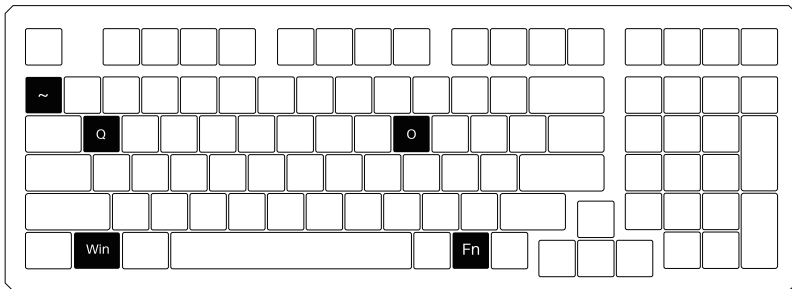

Lock Windows Key

Press Fn and left Win key

Restore Factory Settings

Hold down Fn and press ~ key 3S

Revert Ctrl into Menu (APP) key

Hold down Fn and press right Ctrl 3S

 
Enter the Windows system

Hold down Fn and press Q key 3S

Enter the Mac system


Hold down Fn and press O key 3S

Mod 003/004 System Commands(Mac)

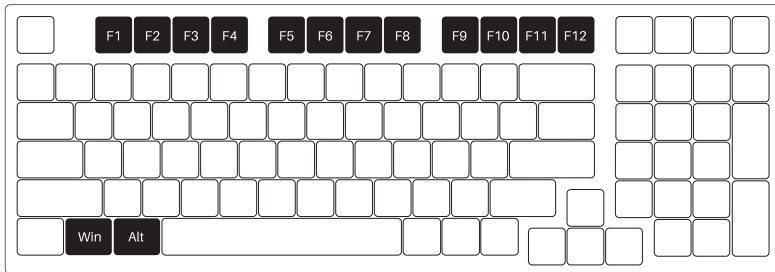

F1	Decrease display brightness	F5	N/A	F9	Skip forward (audio)	Left Win	Command
F2	Increases display brightness	F6	N/A	F10	Mute	LeftAlt	Option
F3	Open mission control	F7	Skip back (Audio)	F11	Volume down	Fn + (F1 ~ F12)	
F4	Activate Siri	F8	Pause/Play (Audio)	F12	Volume up	F1 ~ F12	

 Mod 003/004 Backlight Settings

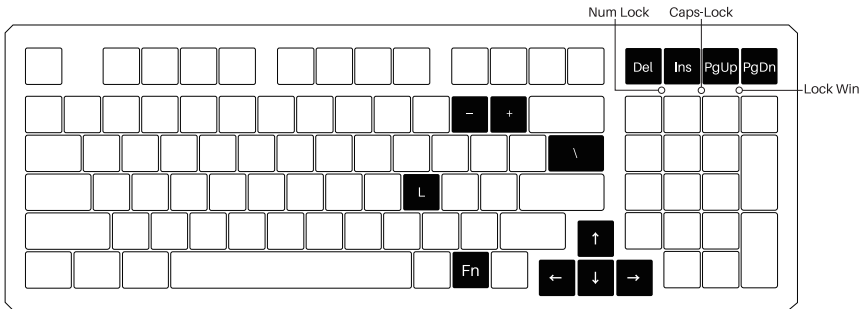

Fn+	Del	=	Effect 1, Effect 2, Effect 3, Effect 4, Effect 5
	Ins		Effect 6, Effect 7, Effect 8, Effect 9, Effect 10
	PgUp		Effect 11, Effect 12, Effect 13, Effect 14, Effect 15
	PgDn		Effect 16, Effect 17, Effect 18, Effect 19, Effect 20
	L		Light On / Off
	\		In all lighting effects with RGB color mode, this shortcut allows you to set the backlight color to 7 single color with RGB loop effect.

Fn+	"↑"	=	Bright	The adjustments on the left is for generic lighting effects. Some lighting effects cannot be tweaked. For example, effects with constant light can only adjust brightness as they don't have animation speed and direction.
	"↓"		Dim	
	"←"		Set animation direction to left	
	"→"		Set animation direction to right	
	"_"		Slower Animation	
	"+"		Faster Animation	

Key/Lighting Effects Customization Instruction

1. The key/lighting effects customization must be completed in wired mode with Akko driver.
2. In wired mode, the lighting effects can also achieve music rhythm effects with Akko driver.
3. Please download the Akko Cloud driver on our website.
4. Users can download the driver via en.akkogear.com

1. Akko provides 1-yr warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



扫描关注官方微信



扫描关注官方微博



[instagram.com/akkogear](https://www.instagram.com/akkogear)



[facebook.com/akkogear](https://www.facebook.com/akkogear)