



M1 HES 有线键盘用户手册

M1 HES Wired Mechanical Keyboard
User Manual

 
快速开始指南 ▶
Quick Guide

感谢您购买及使用本产品



为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

产品概览

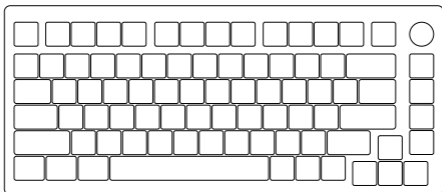

包装内容



系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本

安装步骤

将键盘USB连接线插入电脑的USB接口即可开始使用。


指示灯说明

状态	指示灯位置	指示方式
Caps	Caps键	白光常亮
锁Win	左Win键	白光常亮

调整按键行程快捷键

Fn+1	轴行程为2mm	Fn+2	轴行程为0.5mm
Fn+3	轴行程为0.5mm+火力模式		
Fn+4	驱动自定义轴行程通道，默认2mm轴行程		

 M1 HES 组合键功能

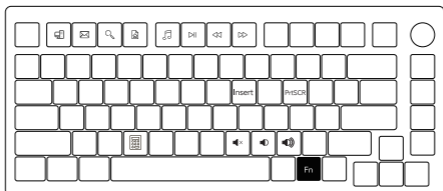



Fn+	F1	我的电脑
	F2	电子邮件
	F3	= Windows搜索
	F4	浏览器主页
	F5	多媒体播放器

Fn+	F6	播放 / 暂停
	F7	上一首
	F8	= 下一首
	C	计算器
	M	静音

Fn+	<	音量减小
	>	音量放大
	P	= Print SCR
	I	Insert
	W	将WASD与 ↑↓←→键对调

 M1 HES 系统功能 (Windows)

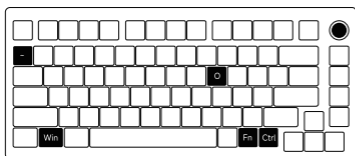



旋钮功能

- 默认为音量功能
- 逆时针为调低音量
- 顺时针为调高音量
- 按下中间切换为亮度功能
- 逆时针为降低亮度
- 顺时针为增加亮度

锁Win键

Fn + 左Win

恢复出厂设置

长按 Fn+~ 5秒

 
Win系统 ⇌ Mac系统

长按 Fn + O 3秒

切换成菜单键 (可记忆)

长按 Fn + 右Ctrl 3秒

系统功能 (Mac)

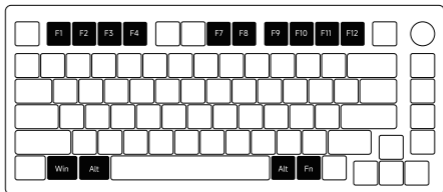

F1 降低显示屏亮度

F2 增加显示屏亮度

F3 开放任务控制

F4 呼出Siri

F7 上一曲

F8 暂停/播放(音频)

F9 下一曲

F10 静音

F11 调低音量

F12 调高音量

 
左Win Option

左Alt Command

右Alt Command

Fn + (F1~12) F1 ~ F12

M1 HES 灯光调节

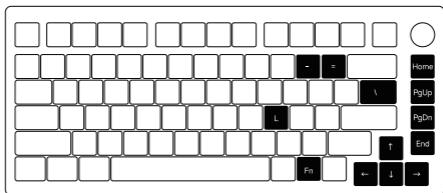

Fn+- 灯光速度变慢

Fn+= 灯光速度变快

Fn+↑ 灯光变亮

Fn+↓ 灯光变暗

Fn+← 灯光方向向左

Fn+→ 灯光方向向右

Fn+L 灯光关闭/开启

Fn+Home 常亮、涟漪、如影随形、川流不息、流星

Fn+PgUp 繁星点点、霓虹、光波、层出不穷、彩泉涌动

Fn+End 呼吸、极光、正弦波、雨滴、峰回路转

Fn+PgDn 斜风细雨、踏雪无痕、聚合、一石二鸟、百花争艳

Fn+\ 在RGB彩光模式下，调节灯光颜色致7色单色+RGB循环

按键/灯光自定义说明和调用说明

1. 键盘按键/灯光自定义可配合驱动进行
2. 键盘灯光可搭配驱动实现音乐律动
3. 请在我司官网下载“MonsGeek Driver”驱动
4. 国内驱动下载地址www.monsgeek.cn
国外驱动下载地址www.monsgeek.com

MONGEEK保修和服务声明

1. MONGEEK为中国大陆的客户提供一个保修。对于其他地区，请联系您的卖家（MonsGeek分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，MonsGeek也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 在未经制造商/卖方指示的情况下拆开键盘将立即导致保修无效
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00
节假日以国家法定节假日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：www.monsgeek.cn

产地：中国·深圳

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China



WARNING:
Water and Beverages can't be
poured into the Keyboard.



 
中国制造/Made in China

注意
事项

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品
请按照电子产品保护方式爱惜使用。

To provide you with a better user experience, please read this manual carefully before using the product.

Overview

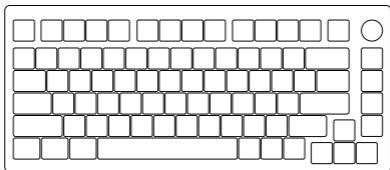

Packing List



System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version

Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB port to start using it.


Indicator Description

Status	Indicator Position	Indicating Mode
Caps	Caps key	Steady White
Lock Win	Left Win key	Steady White

Shortcuts to Adjust Travel Distance

Fn+1	Switch Travel Distance = 2mm	Fn+2	Switch Travel Distance = 0.5mm
Fn+3	Switch Travel Distance = 0.5mm + Ultra Sensitive Mode		
Fn+4	Customize switch actuation distance through MonsGeek Driver (2mm by default)		

 M1 HES HotKeys

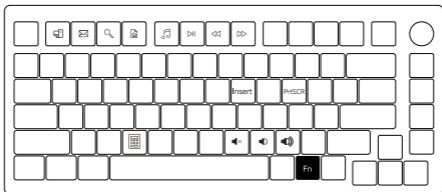


Fn+	F1	My Computer
	F2	E-mail
	F3	= Windows Search
	F4	Browser Homepage
	F5	Media

Fn+	F6	Pause/Playback
	F7	Previous Song
	F8	= Next Song
	C	Calculator
	M	Mute

Fn+	<	= Decrease Volume
	>	Increase Volume
	P	= Print SCR
	I	Insert
	W	Swap W A S D with ↑ ↓ ← →

 M1 HES System Commands (Windows)

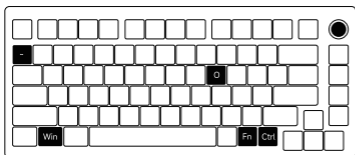

Rotary Knob

Default is volume function:
 Rotate counterclockwise to decrease the volume;
 Rotate clockwise to increase the volume.

Press the middle to switch to brightness function:
 Rotate counterclockwise to decrease brightness;
 Rotate clockwise to increase brightness.

Lock Windows Key

Press Fn and
Left Win Key

Revert Ctrl into Menu Key (Memorable)

Hold down Fn
and press Right Ctrl Key for 3S

 
Restore Factory Settings

Hold down Fn and
press ~ Key for 5S

Win System ⇌ Mac System

Hold down Fn and
press O Key for 3S

M1 HES System Commands (Mac)

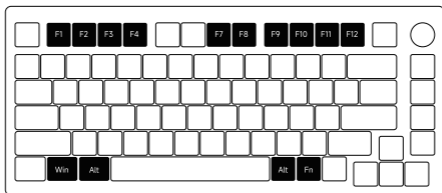


F1	Decrease display brightness	F7	Skip back (Audio)	F11	Decrease Volume
F2	Increase display brightness	F8	Pause/Play (Audio)	F12	Increase Volume
F3	Open mission control	F9	Skip forward (Audio)	Left Win	Option
F4	Activate Siri	F10	Mute	Left Alt	Command

Right Alt Command

Fn + (F1-12) F1 ~ F12

 M1 HES Backlight Settings

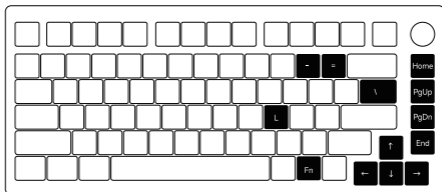

Fn+-	Slower Animation	Fn+Home	Effect1, Effect2, Effect3, Effect4, Effect5
Fn+=	Faster Animation	Fn+PgUp	Effect6, Effect7, Effect8, Effect9, Effect10
Fn+L	Light On / Off	Fn+End	Effect11, Effect12, Effect13, Effect14, Effect15
Fn+↑	Bright	Fn+PgDn	Effect16, Effect17, Effect18, Effect19, Effect20
Fn+↓	Dim	Fn+\	This shortcut allows you to set the backlight color to 7 single color with RGB loop effect
Fn+←	Set Animation Direction to Left		
Fn+→	Set Animation Direction to Right		

Key/Lighting Effects Customization Instruction

1. The key/lighting effects customization can be programmed by MonsGeek driver.
2. The lighting effects can also achieve audio visualizer effects with MonsGeek driver.
3. Please download the MonsGeek Driver on our website.
4. Users can download the driver via www.monsgeek.com.

MONSGEEK Warranty and Service Statement

1. MONSGEEK offers a One-Year warranty for customers in mainland China. For other regions, please contact your seller (MonsGeek distributor) for specific warranty details.
2. If the warranty period expires, customers are responsible for repair costs. MONSGEEK provides instructions for self-repair if preferred, but users assume full responsibility for any losses incurred during the process.
3. Disassembling the keyboard without manufacturer/seller's instruction will void the warranty immediately.
4. Return and warranty policies may vary across platforms and are subject to the specific distributor's terms at the time of purchase.

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: www.monsgeek.com

Origin: Shenzhen, China



WARNING:

Water and Beverages can't be poured into the Keyboard.



中国制造/Made in China

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.

 MONSGEEK