



MG108B 三模键盘用户手册

MG108B Multi-modes Keyboard

User Manual

快速开始指南 ▶

 
Quick Guide

感谢您购买及使用本产品



为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

包装内容

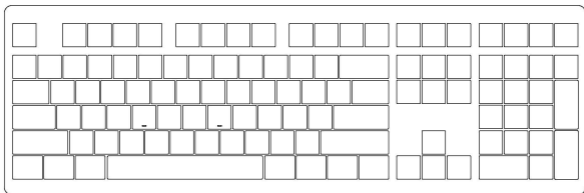

系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本


安装步骤

将键盘USB连接线插入电脑的USB接口即可开始使用。

独立指示灯

状态	指示灯位置	回连	配对	连接成功
BT1	按键E灯	蓝灯慢闪	蓝灯快闪	蓝灯常亮2s熄灭
BT2	按键R灯	蓝灯慢闪	蓝灯快闪	蓝灯常亮2s熄灭
BT3	按键T灯	蓝灯慢闪	蓝灯快闪	蓝灯常亮2s熄灭
2.4G	按键Y灯	绿灯慢闪	绿灯快闪	绿灯常亮2s熄灭
有线	按键U灯	无	无	红灯常亮2s熄灭
状态	指示灯位置	指示方式		
低电	独立指示灯3	白灯慢闪		
充电		白灯常亮		
充满		白灯常亮/恢复正常背光		
Caps	独立指示灯2	开启白灯常亮		
锁WIN	Lwin键灯位	开启白灯常亮		
NUM	独立指示灯1	开启白灯常亮		

 
MG108B 组合键功能

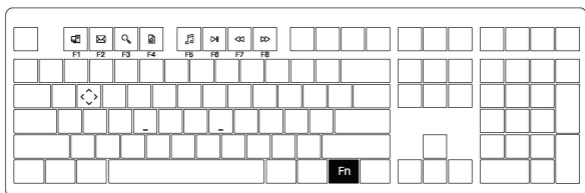

Fn+	F1	=	我的电脑
	F2		电子邮件
	F3		Windows搜索
	F4		浏览器主页
	F5		多媒体播放器

Fn+	F6	=	播放 / 暂停
	F7		上一首
	F8		下一首
	W		将WASD与 ↑ ↓ ← → 键对调

 MG108B 系统功能 (Windows)

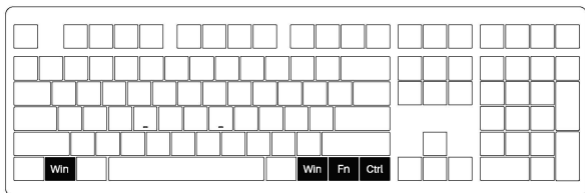

锁Win键

Fn + 左Win

 
恢复出厂设置

Win_l+ Win_r 5秒

切换成菜单键

长按Fn + 右Ctrl 3秒

MG108B 系统功能 (Mac)

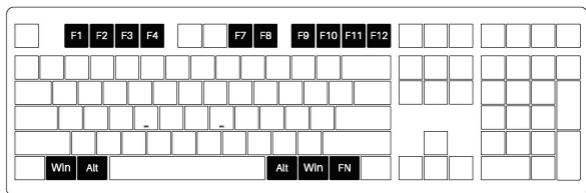

F1 降低显示屏亮度

F2 增加显示屏亮度

F3 开放任务控制

F4 呼出Siri

右 Win Option

右 Alt Command

F7 上一曲

F8 播放/暂停

F9 下一曲

F10 静音

左 Win Option

左 Alt Command

 
F11 调低音量

F12 调高音量

Fn + (F1~F12)

F1~F12

MG108B 灯光调节

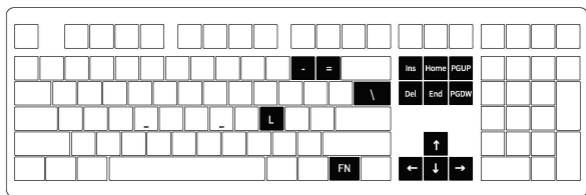

FN++ 灯光速度变慢

FN+= 灯光速度变快

FN+↑ 灯光变亮

FN+↓ 灯光变暗

FN+← 灯光方向向左

FN+→ 灯光方向向右

FN+\ 切换背光致7种单色+RGB循环

FN+L 灯光关闭/开启

FN+Ins 常亮(默认)、流星、呼吸

FN+Home 涟漪、如影随形、川流不息

 
FN+PGUP 繁星点点、霓虹、光波、层出不穷


FN+Del 彩泉涌动、峰回路转、百花争艳

FN+End 极光、正弦波、雨滴

FN+PGDN 斜风细雨、踏雪无痕、聚合、一石二鸟

MG108B 连接使用指南

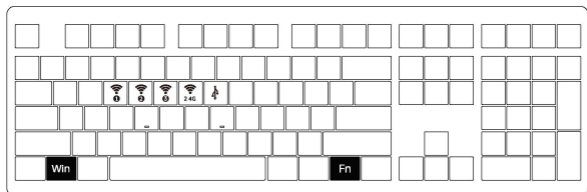

Fn+	E	蓝牙设备1		左: Windows (内置电源开)
	R	蓝牙设备2		中: Windows (内置电源关)
	T	蓝牙设备3		右: MAC (内置电源开)
	Y	2.4G无线设备		
	U	有线模式		

蓝牙配对

键盘开机后，按下FN+E/R/T进入蓝牙模式，长按FN+E/R/T组合键3S，键盘进入对码状态，蓝色指示灯快闪，连上后指示灯常亮2S，如果没有连上设备指示灯熄灭，键盘进入睡眠。

2.4G配对

键盘开机后，按下FN+Y进入2.4G模式，再按下FN+Y组合键3S进入配对模式后，插入接收器，绿色指示灯快闪，配对成功后退出对码，模式灯常亮2S，找不到配对设备30s后，退出对码模式灯熄灭，键盘进入睡眠。

电量查询

按下组合键Fn+空格，电量低于30%空格键上红光；30-50% 空格键上提示为橙色；50-70%空格键上提示为紫色；70-90% 空格键上提示为黄色；90-100% 空格键上提示为绿色。

按键/灯光自定义说明和调用说明

1. 键盘三种工作模式下均可连接驱动并进行灯光和按键自定义
2. 键盘三种工作模式下可搭配驱动实现音乐律动
3. 请在我司官网下载“MonsGeek_setup”驱动
4. 驱动下载地址www.monsgeek.cn

MONSGEEK保修和服务声明

1. MONSGEEK为中国大陆的客户提供一年保修。对于其他地区，请联系您的卖家（MonsGeek分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，MonsGeek也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 在未经制造商/卖方指示的情况下拆开键盘将立即导致保修无效
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00
节假日以国家法定节日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：www.monsgeek.cn

产地：中国·深圳

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China



WARNING:
Water and beverages can't be
poured into the Keyboard.



 
中国制造/Made in China

**注意
事项**

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品
请按照电子产品保护方式爱惜使用。

To provide you with a better user experience, please read this manual carefully before using the product.

Packing List

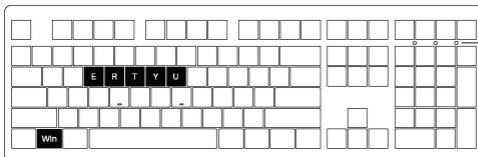

LED Indicator

1. Num
2. Caps
3. Battery Level Indicator

System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version

Connectivity Method


Connect the keyboard to your computer by plugging in the USB cable into an available USB port to start using it.

Independent Indicator

Status	Indicator	Re-Connected	Pairing	Connected
Bluetooth device 1	E key LED	Slow flashing blue LED	Fast flashing blue LED	Steady blue for 2s then turns off
Bluetooth device 2	R key LED	Slow flashing blue LED	Fast flashing blue LED	Steady blue for 2s then turns off
Bluetooth device 3	T key LED	Slow flashing blue LED	Fast flashing blue LED	Steady blue for 2s then turns off
2.4G wireless device	Y key LED	Slow flashing green LED	Fast flashing green LED	Steady green for 2s then turns off
Wired mode	U key LED	N/A	N/A	Steady red for 2s then turns off

Status	Indicator Position	LED Indicator
Lock Win	Left Win key LED	Steady white
Num	LED Indicator 1	Steady white
Caps	LED Indicator 2	Steady white
Low Battery	LED Indicator 3	Slow flashing white LED
Charging		Steady white
Fully Charged		Steady white → Light off

 
MG108B HotKeys

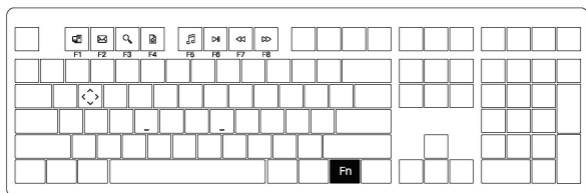

Fn+	F1	My Computer
	F2	E-mail
	F3	= Windows Search
	F4	Browser Homepage
	F5	Multimedia Player

Fn+	F6	Play/Pause
	F7	Previous Song
	F8	= Next Song
	W	Swap WASD with ↑ ↓ ← →

 MG108B System Commands (Windows)

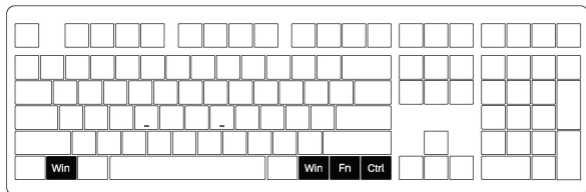

Lock Win Key

Press Fn and left Win key

 
Restore Factory Settings

Press left Win and right Win key for 5s

Revert Ctrl into Menu Key


Hold down Fn and right Ctrl key for 3s

MG108B System Commands (Mac)

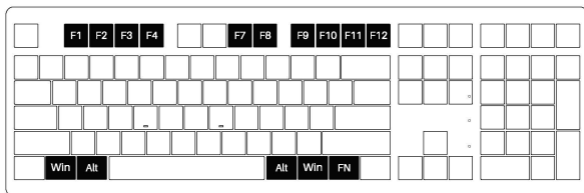


F1	Decrease display brightness	F7	Skip back (Audio)	F11	Volume down
F2	Increase display brightness	F8	Pause/Play (Audio)	F12	Volume up
F3	Open mission control	F9	Skip forward (Audio)		
F4	Activate Siri	F10	Mute		
Right Win	Option	Left Win	Option	<div style="background-color: black; color: white; padding: 5px; border: 1px solid black;"> Fn + (F1~F12) F1~F12 </div>	
Right Alt	Command	Left Alt	Command		

 
MG108B Backlight Settings

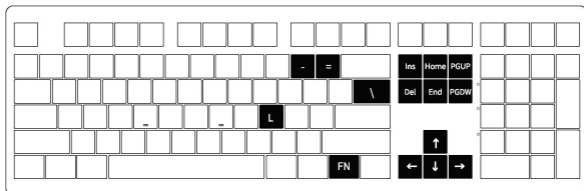

FN+-	Slower Animation	FN+Ins	Effect1, Effect2, Effect3
FN+=	Faster Animation	FN+Home	Effect4, Effect5, Effect6
FN+ ↑	Bright	FN+PGUP	Effect7, Effect8, Effect9, Effect10
FN+ ↓	Dim	FN+Del	Effect11, Effect12, Effect13
FN+ ←	Set animation direction to left	FN+End	Effect14, Effect15, Effect16
FN+ →	Set animation direction to right	FN+PGDN	Effect17, Effect18, Effect19, Effect20
FN+\	This shortcut allows you to set the backlight color to 7 single color with RGB loop effect		
FN+L	Light Off/On		

 MG108B Multi-modes Feature Overview

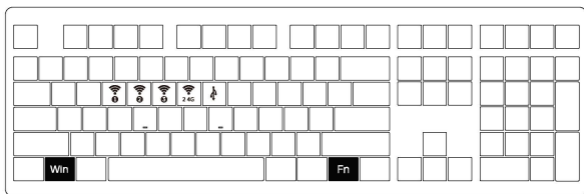

Fn+	E	Bluetooth Device 1	
	R	Bluetooth Device 2	
	T	= Bluetooth Device 3	
	Y	2.4G Wireless Device	
	U	Wired Mode	
			Left: Windows (built-in battery power on)
			Middle: Default Windows (built-in battery power off)
			Right: Mac (built-in battery power on)

Bluetooth Pairing

After turning on the keyboard, press FN+E/R/T to enter Bluetooth mode. Press and hold the FN+E/R/T combination key for 3 seconds to put the keyboard in pairing mode, with the blue indicator light flashing quickly. Once the connection is established, the indicator light will stay on for 2 seconds. If the device fails to connect, the indicator light will turn off and the keyboard will enter sleep mode.

2.4G Pairing

After turning on the keyboard, press FN+Y to enter 2.4G mode. Then press and hold the FN+Y combination key for 3 seconds to enter pairing mode. Then insert the receiver, and the indicator light will flash quickly. Once pairing is successful, the LED indicator will stay on for 2 seconds. If no available device is found within 30 seconds, the LED indicator will turn off and the keyboard will enter sleep mode.

Battery Level Inquiry

Please press Fn and Spacebar keys to check the battery level.

Battery Level	Spacebar Key Indicator
below 30%	Red LED
30%-50%	Orange LED
50%-70%	Purple LED
70%-90%	Yellow LED
90%-100%	Green LED

Key/Lighting Effects Customization Instruction

1. The key/lighting effects customization can be programmed by MonsGeek driver in all three modes.
2. In all three modes, the lighting effects can also achieve audio visualizer effects with MonsGeek driver.
3. Please download the MonsGeek Cloud Driver on our website
4. Users can download the driver via www.monsgeek.com

MONGEEK Warranty and Service Statement

1. MONGEEK offers a One-Year warranty for customers in mainland China. For other regions, please contact your seller (MonsGeek distributor) for specific warranty details.
2. If the warranty period expires, customers are responsible for repair costs. MONGEEK provides instructions for self-repair if preferred, but users assume full responsibility for any losses incurred during the process.
3. Disassembling the keyboard without manufacturer/seller's instruction will void the warranty immediately.
4. Return and warranty policies may vary across platforms and are subject to the specific distributor's terms at the time of purchase.

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: www.monsgeek.com

Origin: Shenzhen, China



WARNING:
Water and Beverages can't be
poured into the Keyboard.



中国制造/Made in China

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.

 MONSGEEK