



**MONSGEEK**

**MG108/MG108W**

User Manual 用户手册

# 目录

---

 
MG108组合键功能	1
MG108系统功能(Windows)	2
MG108系统功能(Mac)	3
MG108W工作模式切换	4
按键自定义说明和调用说明	5
MONSGEEK售后服务规范	6

# Menu

---

MG108 HotKeys .....	7
MG108 System Commands (Windows) .....	8
MG108 System Commands (Mac) .....	9
MG108W Operation Mode Switch .....	10
Customization Instruction .....	11
MONSGEEK Warranty and Service Statement .....	12

# MG108 组合键功能

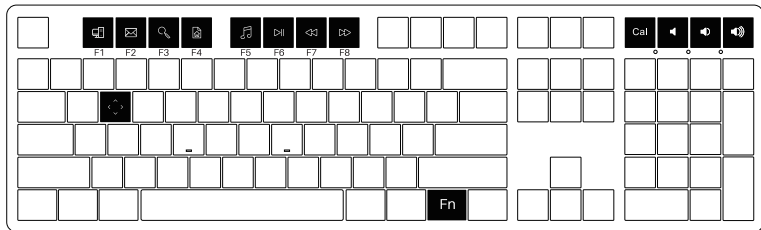


Fn+	F1	=	我的电脑
	F2		电子邮件
	F3		Windows搜索

Fn+	F4	=	浏览器主页
	F5		多媒体播放器
	F6		播放 / 暂停

Fn+	F6	=	上一首
	F7		下一首
	W		将WASD与 ↑ ↓ ← → 键对调

# MG108系统功能(Windows)

 2

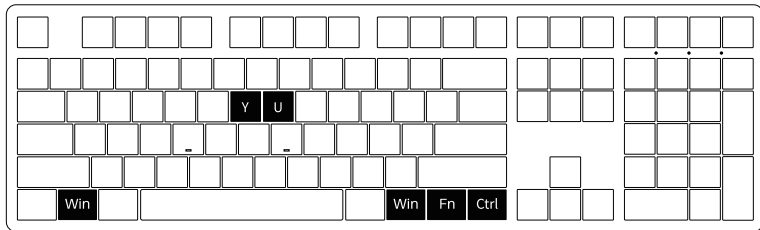

## 指示灯说明

1.Num Lock

2.Caps

3.锁Win

(锁定时左Win白光常亮 解锁Win时灯灭)

\*MG108W为电量指示灯  
(低电白灯慢闪/充电长亮/充满灯灭)

锁Win键

Fn + 左Win

恢复出厂设置

左Win + 右Win  
长按5秒

切换成菜单键  
(可记忆)

 
长按Fn + 右Ctrl 3秒

2.4G模式  
(MG108W)

长按FN + Y  
短按回连, 长按配对

USB模式  
(MG108W)

FN + U

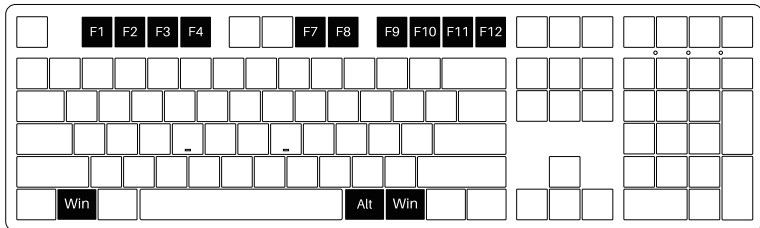

F1 降低显示屏亮度

F2 增加显示屏亮度

F3 开放任务控制

F4 呼出Siri

F7 向后跳(音频)

F8 暂停/播放(音频)

F9 向前跳过(音频)

F10 静音

F11 调低音量

F12 调高音量

左Win Option

左Alt Command

右Alt Command

**Fn + (F1 ~ F12)**

F1 ~ F12

# MG108W 工作模式切换

\*不插入USB外线的情况下,开关居MAC/WIN两端开启内部锂电池供电。  
插入USB外线后,产品自动切换到有线模式。

\*三颗指示灯闪烁3次表示切换完成



1. 键盘按键自定义需配合驱动进行。
2. 驱动及固件会不定期更新
3. MG108W电量指示灯（低电白灯慢闪/充电长亮/充满灯灭）



 
- \* MONSGEEK机械键盘享受非人为损坏1年保修服务, 即从购买日起, 1年以内免费维修。
  - \* 如超过条款1的保修期限, MONSGEEK官方将收取不超过市场平均价格的费用提供维修服务。
  - \* 用户自行拆开键盘视为放弃免费维修服务, 即使1年内损坏, 也按照售后服务条款2执行。
  - \* 不同销售平台的特殊服务条款, 以购买平台规则为准。
- 
- \* 官方售后服务时间为每周一至周五上午10:00至下午18:00, 节假日以国家法定节日休息为准。
  - \* 因受维修时间, 物流时间, 零件采购时间等不可控因素, 售后时间会有不同, 以实际损坏情况评估为准, 请用户耐心等待。

售后电话:0755-21629564

注意  
事项

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等, 键盘为电子产品, 请按照电子产品保护方式爱惜使用。

# MG108 Hotkey

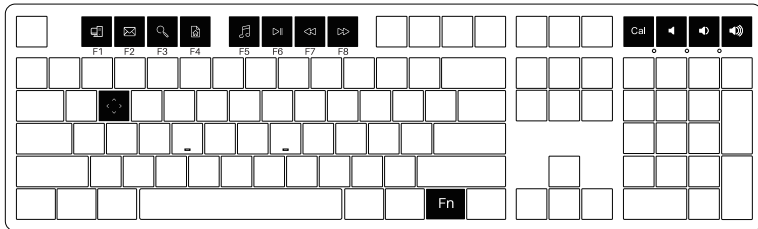


Fn+	F1	=	File Explorer
	F2		E-mail
	F3		Windows Search

Fn+	F4	=	Browser Homepage
	F5		Media
	F6		Pause /Playback

Fn+	F6	=	Previous Song
	F7		Next Song
	W		Swap W A S D with ↑ ↓ ← →

# MG108 System Commands(Windows)

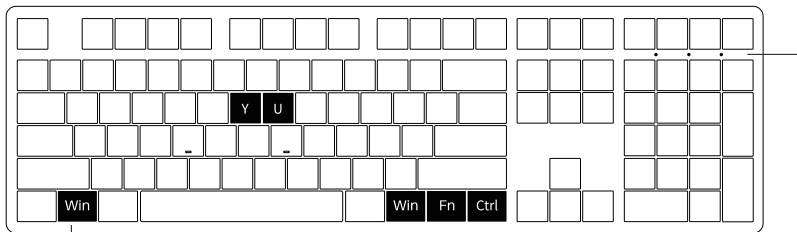 

## LED Indicator

MG108 (USB Wired Model):  
Win Lock

MG108W (Wireless 2.4G):  
Low Battery: Slow flashing white LED  
Charging: Constant white LED  
Fully Charged: LED off

## LED Indicator

- 1.Num Lock
- 2.Caps
- 3.Mac OSX Mode

## Lock Windows Key

Press Fn and  
left Win key

## Restore Factory Settings

Hold down left Win  
and right Win key for 5s

## Remap Ctrl into Menu key (power-on memory)

Hold down Fn and  
right Ctrl key for 3s

 
## 2.4G Mode (MG108W)

Press FN + Y  
Long press to pair  
Short press to connect

## USB Mode (MG108W)

Press Fn and U key

# MG108 System Commands(Mac)

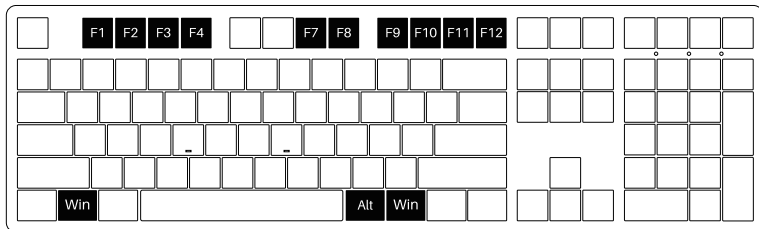

F1 Decrease display brightness

F2 Increases display brightness

F3 Open mission control

F4 Activate Siri

F7 Skip back (Audio)

F8 Pause/Play (Audio)

F9 Skip forward (Audio)

F10 Mute

F11 Volume down

F12 Volume up

Left Win Option

Left Alt Command


Right Alt Command

Fn + (F1 ~ F12)

F1 ~ F12

# MG108W Operation Mode Switch

 - \*The built-in battery will start to power when the back switch is in the non-USB mode (either Mac or Win).  
The keyboard will switch to USB wired mode automatically once USB cable is plugged in.
- \*The switch will complete when the LED indicator flashes for 3 times.

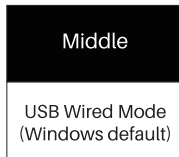

- 1.The key and backlight customization must be completed with the MonsGeek driver.
- 2.Please download the driver from [www.monsgeek.com/download](http://www.monsgeek.com/download).

Note:

MG108W Battery Level Indicator

Low Battery: Slow flashing white LED

Charging: Constant white LED

Fully Charged: LED off

1. MONSGEEK provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (MonsGeek distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. MONSGEEK will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Disassembling the keyboard without manufacturer/seller's instruction will immediately void the warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

**Precautions**

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



**MONSGEEK**  
[www.monsgeek.com](http://www.monsgeek.com)

