

SMART SUDOKU



User Manual



Read this manual carefully before use and retain it for future reference.

GiiKER Smart Sudoku

Smart Sudoku is an interactive number-placement game console supporting auto timer, hints and 1v1 battle. Follow the puzzle screen to set a game, the goal is to fill in the spaces so that the number does not repeat in each column, row and box. Explore the 2500+ leveled up puzzles and enjoy the game like never before!



- GiiKER Button**
Power on / off
Pair Button
- Puzzle Screen**
Displays challenges & Gives hints
- Game Board**
Consists of 36 cells
6x6 grids or 4x4 grids
- Number Indicators**
Indicates the submitted number
- Main Screen**
Referee / Puzzles Number / Levels
- Level Settings**
- Hints**
- Battery Compartment**
Two AA batteries

- Pieces**
- 1 x6
- 2 x6
- 3 x6
- 4 x6
- 5 x6
- 6 x6

How to Play

Smart Sudoku offers two grid formations: 6x6 Sudoku and 4x4 Sudoku, switch between the modes using the included cover.



6x6 Sudoku
In each column, row, and 2x3 regions, the numbers 1 to 6 can only appear once.



4x4 Sudoku
In each column, row, and 2x2 square, the numbers 1 to 4 can only appear once.

* To switch to 4x4 Sudoku mode, insert the cover into the game board.

Quick Start

01: Power on
Long press **GiiKER** button to turn on.
Short press **<** or **>** to select a challenge.

02: Set a game
Set a game according to the puzzle screen, tap the cell to clear the corresponding pixel.

03: Solve
Place the number in the empty cell and tap the number of times to select the corresponding number indicator. The Main screen will give Correct / Wrong indication instantly.

04: Complete
When all the spaces are filled in correctly, this warranty reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Keep these instructions for future reference as they contain important information.

Level Settings

- Short press **△** to enter Level Settings
- Short Press **<** or **>** to select the level.
- Short Press **△** again to confirm the level.

6x6 Sudoku					4x4 Sudoku		
L1	L2	L3	L4	L5	L1	L2	L3
Beginner	Intermediate	Advanced	Expert	Master	Beginner	Intermediate	Advanced
50 puzzles	450 puzzles	700 puzzles	500 puzzles	500 puzzles	50 puzzles	100 puzzles	150 puzzles

Hints Function

Step1: Press **○** to show the hinting position according to the current status.

Step2: Press **○** again to show the hinting solution.

* Whenever you place a number, you exit the hinting function.

1v1 Battle

Smart Sudoku offers head to head battle mode. When pairing, two devices should be as close as possible.

- Short press the **GiiKER** button: Invite / Accept / Surrender / Next
- Long press the **GiiKER** button: Decline / Exit

01: Invite Battle
Short press the **GiiKER** button, pair up with the other Smart Sudoku nearby.


02: Select Level
Select the level by Initiator.

03: Battle Starts
Battle time includes game set up.
If wrong for 3 times, you lose.
Surrender: Short press the **GiiKER** button.

04: Next
Play Next Round (Without Changing difficulty level): Either player presses the **GiiKER** button.
To change difficulty level: Either player presses the **△** button.
Long press the **GiiKER** button to exit the battle mode.

Mute Setting

Long press the **<** or **>** button at the same time, to set mute on/off.

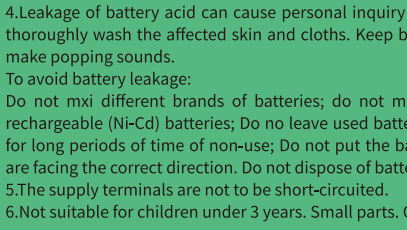

Power Off

Long press the **GiiKER** Button, automatically turn off if no operations within 30 mins.

Specifications:

Name	Smart Sudoku		
Model	JKSD001		
Material	ABS	Age	4+
Battery Type	1.5V AA Battery		

Notes

- Never abuse, throw, drop, puncture, violently kick or step on the product. This can damage the product.
- The product is not water resistant. Do not drop the product into water. Do not drop the product out in the rain or near a source of moisture.
- Do not place the product near a source of heat. Operate and store the product between 0°C and 40°C.
- Leakage of battery acid can cause personal injury as well as damage to your Super Blocks. Do not leave batteries in the Super Blocks for long periods of time of non-use; Do not put the batteries backwards. Make sure the positive (+) and negative (-) ends are facing the correct direction. Do not dispose of batteries in a fire.
- The supply terminals are not to be short-circuited.
- Not suitable for children under 3 years. Small parts. Choking hazard.

Limited Warranty

GiiKER warrants that your GiiKER hardware products ("the Product") will be free from defects in materials and workmanship for a period of 90 days from the date of purchase ("the Warranty Period"). If a defect in the Product arises under normal and intended use within the Warranty Period, please contact the authorized GiiKER dealer in your country. The authorized GiiKER dealer in your country will, at its opinion and subject to applicable laws, repairs or repair the Product with the new or reconditioned parts.

This warranty is only valid to the original retail purchaser, accompanied by a receipt or proof of purchase. GiiKER does not warrant that the operation of the Product will be uninterrupted or error-free. This Warranty does not apply to: a) Products you purchase from unauthorized dealer; b) Defects in consumables, such as stickers or protecting coatings designed to diminish over time; c) defects caused by misuse or failure to follow the product directions, improper or unauthorized repair; d) Defects caused by accidents, neglect, fire, water, lightning, or other acts of nature; e) Normal wear and tear or otherwise due to the normal aging, other cause beyond GiiKER's reasonable control.

Declaration of Conformity

GiiKER Technology Co., Ltd. declares that this product is in compliance with the relevant requirements of Directive 2009/48/EC, Directive 2011/65/EU, Directive 2014/53/EU. This declaration of conformity is published on our website www.giiker.com/pages/compliance.

EUROPEAN UNION-DISPOSAL INFORMATION

The symbol above means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Keep these instructions for future reference as they contain important information.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter. RF exposure: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

SCAN AND FOLLOW US!

Manufacturer: FS GiiKER Technology Co., Ltd.
Website: www.giiker.com Email: support@giiker.com
Made in China
This content is subject to change without prior notice.

