 




# SUPER SLIDE

## USER MANUAL



## ABOUT SUPER SLIDE

  Super Slide is an interactive game console for sliding puzzle. Follow the LED to set a game, the goal is to shift the big square block to the automatic detection zone. Explore 500+ leveled up games with learn and challenge modes, enjoy the game like never before!

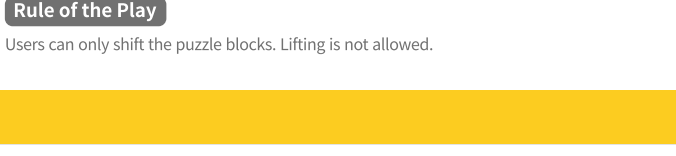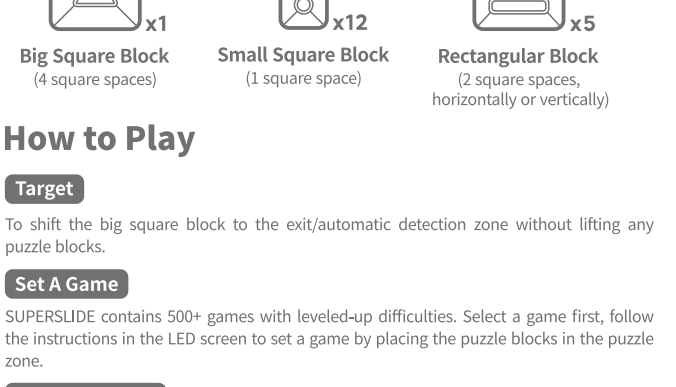

## How to Play

**Target**  
To shift the big square block to the exit/automatic detection zone without lifting any puzzle blocks.

**Set A Game**  
SUPERSLIDE contains 500+ games with leveled-up difficulties. Select a game first, follow the instructions in the LED screen to set a game by placing the puzzle blocks in the puzzle zone.

**Rule of the Play**  
Users can only shift the puzzle blocks. Lifting is not allowed.

## Quick Start


**1 Turn On**  
Long press **ON/OFF** button for 3 seconds, LED screen automatically displays the last saved level.

**2 Select a Game**  
Press **◀** or **▶** to select a game.

**3 Set a Game**  
Set up the game as shown on the LED Screen, then press **⏻** to turn the LED game indications from blink to still.



**4 Solve the game**  
With the automatic detection sensor, when the big square block is moved the exit zone, it will give animation and sounds indication.

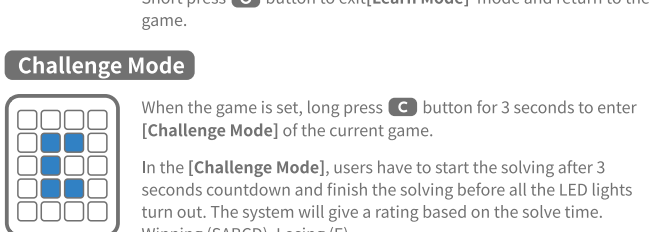


## Learn Mode

When the game is set, long press **L** button for 3 seconds to enter **[Learn Mode]** of the current game. In the **[Learn Mode]**, you can view the solving steps of the game. Short press **◀** or **▶** button, to view step backward or forward. Long press **◀** or **▶** button, to view 10 steps fast backward or forward. Short press **⏻** button to exit **[Learn Mode]** mode and return to the game.

## Challenge Mode

When the game is set, long press **C** button for 3 seconds to enter **[Challenge Mode]** of the current game. In the **[Challenge Mode]**, users have to start the solving after 3 seconds countdown and finish the solving before all the LED lights turn out. The system will give a rating based on the solve time. Winning (SABCD), Losing (E). Short press **⏻** button to exit **[Challenge Mode]** and return to the game.

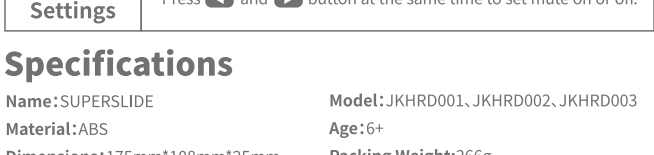

## Instruction

<b>Turn On/Off</b>	Long press <b>ON/OFF</b> button for 3 seconds to Turn On/Off. • LED screen will dim if no operations for 5 minutes. Automatically turn off if no operations for 20 minutes.
<b>Save File</b>	Long press <b>◀</b> and <b>▶</b> button at the same time for 3 seconds. The screen flashes once to indicate the game has been successfully saved.
<b>Back to Level 1</b>	Long press <b>◀</b> and <b>⏻</b> button at the same time for 3 seconds.
<b>Load File</b>	Long press <b>▶</b> and <b>⏻</b> button at the same time for 3 seconds.
<b>Mute Settings</b>	Press <b>◀</b> and <b>▶</b> button at the same time to set mute on or off.

## Specifications

<b>Name:</b> SUPERSLIDE	<b>Model:</b> JKHRD001, JKHRD002, JKHRD003
<b>Material:</b> ABS	<b>Age:</b> 6+
<b>Dimensions:</b> 175mm*108mm*25mm	<b>Packing Weight:</b> 266g

## Notes

- Never abuse, throw, drop, puncture, violently kick or step on the product. This can damage the product.
- The product is not water resistant. Do not drop the product into water. Do not leave the product out in the rain or near a source of moisture.
- Do not place the product near a source of heat. Operate and store the product in the temperature between 0° and 40° C.
- leakage of battery acid can cause personal injury as well as damage to your Super Slide. If battery leakage occurs, thoroughly wash the affected skin and cloths. Keep battery acid away from your eyes and mouth. Leaking batteries may make popping sounds. To avoid battery leakage:  
\*do not mix different brands of batteries; do not mix different types of batteries (alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd) batteries); do not leave used batteries in the Super Slide; do not leave batteries in the Super Slide for long periods of non-use; do not put the batteries in backwards. Make sure the positive (+) and negative (-) ends are facing the correct direction; do not dispose of batteries in a fire.
- The supply terminals are not to be short-circuited.

## Troubleshooting

Problem Observed	Possible Reason	Solution
<b>Unable to turn on</b>	Uninstalled batteries or wrongly installed batteries	Install the batteries as instructed
	Battery life down to 0%	Replace new batteries
<b>No Sounds</b>	Set mute on	Press <b>◀</b> button and <b>▶</b> button at the same time to set mute on or off
<b>LED grows dim</b>	No operations for more than 5 minutes	Press any button to awake

## Limited Warranty

GiiKER warrants that your GiiKER hardware product ("the Product") will be free from defects in materials and workmanship for a period of 90 days from the date of purchase ("the Warranty Period"). If a defect in the Product arises under normal and intended use within the Warranty Period, please contact the authorized GiiKER dealer in your country. The authorized GiiKER dealer in your country will, at its option and subject to applicable laws, replace or repair the Product with new or reconditioned parts. This warranty is only valid to the original retail purchaser, accompanied by a receipt or proof of purchase. GiiKER does not warrant that the operation of the Product will be uninterrupted or error-free; b) Defects in consumables, such as stickers or protective coatings designed to diminish over time; c) Defects caused by misuse or failure to follow the product directions, improper installation; product alteration or modification; improper or unauthorized repair; d) Defects caused by accidents, neglect, fire, water, lightning, or other acts of nature; incorrect electrical line voltage, fluctuations or surges; e) Normal wear and tear or otherwise due to the normal aging, other causes beyond GiiKER's reasonable control.

## Declaration of Conformity

GiiKER Technology Co.,Ltd. declares that this product is in compliance with the relevant requirements of European Union 2009/48/EC, Directive 2011/65/EU. This declaration of conformity is published on our website [www.giiker.com/pages/compliance](http://www.giiker.com/pages/compliance).

## EUROPEAN UNION- DISPOSAL INFORMATION



The symbol above means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Keep these instructions for future reference as they contain important information.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
– Reorient or relocate the receiving antenna.  
– Increase the separation between the equipment and receiver.  
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
– Consult the dealer or an experienced radio/TV technician for help.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## SCAN AND FOLLOW US !



Manufacturer: FS GiiKER Technology Co., Ltd.  
Website: [www.giiker.com](http://www.giiker.com) Email: [support@giiker.com](mailto:support@giiker.com)  
Made in China

This content is subject to change without prior notice.