 


# SMART FOUR

## User manual

 


## GIKER

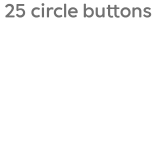

## Introduction

Smart Four is an AI featured 3D board game. With the integrated referee, the board records your moves and determines the winner of the game. You can fire up a head to head competition or challenge against the infused robot.

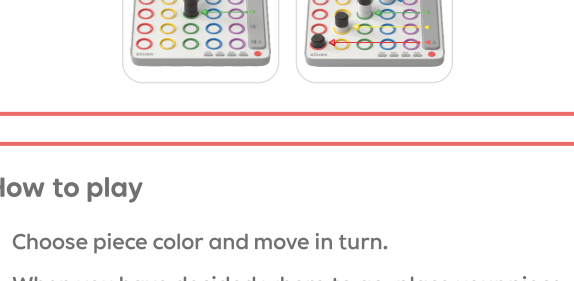

### 1 Light Indication Area 2 Game Board

**1 Player Indicator:** Lights up to indicate which party needs to take a move. Consists of 25 circle buttons

**2 Triangular Indicator:** The indicator color corresponds with the same color circle in this row.

**3 Game Mode**

**4 Power Button** Long press power button for 2 seconds to turn on/off

 
**5 Battery Compartment** The battery compartment is on the back of the Smart Four. Please install 2 AA batteries before use.

**6 Pieces** 32 Black Pieces, 32 White Pieces. Total 64 Pieces.

\*If the board is not in use for more than 10 minutes, it will shut down automatically.

## How to win

Link four in a row in any direction!

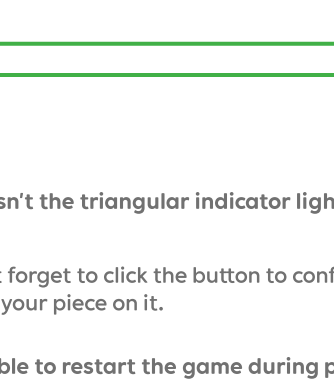


## How to play

- Choose piece color and move in turn.
- When you have decided where to go, place your piece on it and click on the corresponding button to confirm, and then the opposite Player Indicator will light up.
- Up to 5 pieces can be placed on one button. Otherwise, the Triangular Indicator will blink rapidly to indicate a wrong move.
- When a player wins, triangular indicator/indicators will blink to show where the four pieces connect in a row.

## Robot Mode

 - Choose difficulty
- Human move first
- Triangular Indicator lights up, you need to finish the move for the robot.

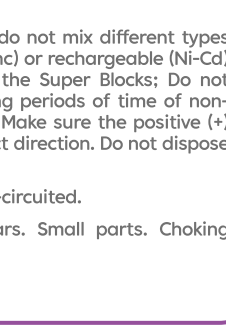

## Head to Head Mode

Opening: either party can move first.

## Mute Setting

Long press **M** for 2 seconds, all Triangular Indicator display red to indicate setting successfully.

## Specifications

<b>Name</b>	Smart Four	<b>Model</b>	JKSZQ002
<b>Material</b>	ABS	<b>Ages</b>	6+
<b>Battery Type</b>	1.5V AA Battery	<b>Board Dimensions</b>	240x222x31.5mm

## FAQ

• **Why doesn't the triangular indicator light up after winning?**  
You might forget to click the button to confirm when you place your piece on it.

• **Is it possible to restart the game during play?**  
Yes, you can press the correspond mode button at any time to restart the game or switch game modes.

• **Why does the triangular indicator blink three times?**  
It means that the current move is invalid. Please check if more than 5 pieces place on one button or if the piece was not move on the button specified by the robot.

## Notes

- 1.Never abuse, throw, drop, puncture, violently kick or step on the product. This can damage the product.
- 2.The product is not water resistant. Do not place the product into water. Do not leave the product out in the rain or near a source of moisture.
- 3.Do not place the product near a source of heat. Operate and store the product between 0 °C and 40 °C.
- 4.Leakage of battery acid can cause personal injury as well as damage to your Super Blocks. If battery leakage occurs, thoroughly wash the affected skin and cloths. Keep battery acid away from your eyes and mouth. Leaking batteries may make popping sounds.

To avoid battery leakage:  
Do not mix different brands of batteries; do not mix different types of batteries (alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd) batteries; Do not leave used batteries in the Super Blocks; Do not leave batteries in the Super Blocks for long periods of time of non-use; Do not put the batteries backwards. Make sure the positive (+) and negative (-) ends are facing the correct direction. Do not dispose of batteries in a fire.

5.The supply terminals are not to be short-circuited.

6.Not suitable for children under 3 years. Small parts. Choking hazard.

## Limited Warranty

GiiKER warrants that your GiiKER hardware products ("the Product") will be free from defects in materials and workmanship for a period of 90 days from the date of purchase ("the Warranty Period"). If a defect in the Product arises under normal and intended use within the Warranty Period, please contact the authorized GiiKER dealer in your country. The authorized GiiKER dealer in your country will, at its opinion and subject to applicable laws, replace or repair the Product with the new or reconditioned parts.

This warranty is only valid to the original retail purchaser, accompanied by a receipt or proof of purchase. GiiKER does not warrant that the operation of the Product will be uninterrupted or error-free. This Warranty does not apply to: a) Products you purchase from unauthorized dealer; b) Defects in consumables, such as stickers or protecting coatings designed to diminish over time; c) defects caused by misuse or failure to follow the product directions, improper or unauthorized repair; d) Defects caused by accidents, neglect, fire, water, lightning, or other acts of nature; e) Normal wear and tear or otherwise due to the normal aging, other cause beyond GiiKER's reasonable control.

## Declaration of Conformity

GiiKER Technology Co.,Ltd. declares that this product is in compliance with the relevant requirements of Directive 2009/48/EC, Directive 2011/65/EU. This declaration of conformity is published on our website [www.giiker.com/pages/compliance](http://www.giiker.com/pages/compliance).

## EUROPEAN UNION- DISPOSAL INFORMATION



The symbol above means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Keep these instructions for future reference as they contain important information.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



SCAN AND FOLLOW US !

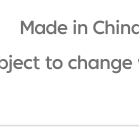

Manufacturer: FS GiiKER Technology Co., Ltd.

Website: [www.giiker.com](http://www.giiker.com) Email: [support@giiker.com](mailto:support@giiker.com)

Made in China

This content is subject to change without prior notice.