 


TIC-TAC-TOE BOLT

GiIKER

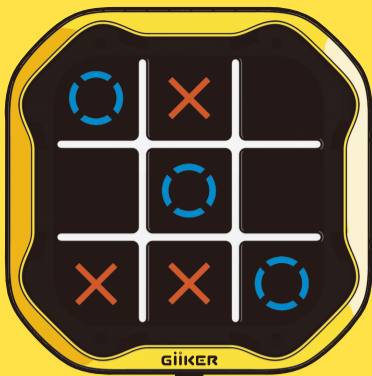

User Manual

Declaration of Conformity

GiIKER Technology Co.,Ltd. declares that this product is in compliance with the relevant requirements of Directive 2009/48/EC, Directive 2011/65/EU. This declaration of conformity is published on our website www.giiker.com/pages/compliance.

EUROPEAN UNION- DISPOSAL INFORMATION



The symbol above means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept products for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Keep these instructions for future reference as they contain important information.


STATEMENTS

GiIKER and the GiIKER logo are registered trademarks of GiIKER Limited; All other trademarks mentioned in this manual are the property of their respective owners.



Manufacturer: FS GiIKER Technology Co., Ltd.
No.1 Sanle North Road Beijiao Shunde District, Foshan528311
Website: www.giiker.com Email: support@giiker.com
Made in China
This content is subject to change without prior notice.
V1.1

 Quick Start

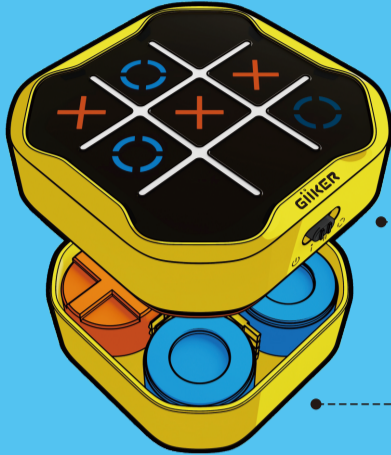

The Classic Tic-Tac-Toe Game Reinvented!

Three Tic-Tac-Toe themed games in one box, challenging your focus and memory. It's quick to start but longtime to master.

 
Touch screen console will automatically turn off if no operations for 10 minutes. Switch to turn it on.

Touch Screen

- ⏻ On/off
- i Infinite Tic Tac Toe - Robot Mode
- ii Infinite Tic Tac Toe - Head To Head Mode
- ⏻ Memory Flash

Battery compartment

Two AA batteries

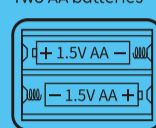


Cover-up Tic-Tac-Toe



Infinite Tic-Tac-Toe

2 | 1min

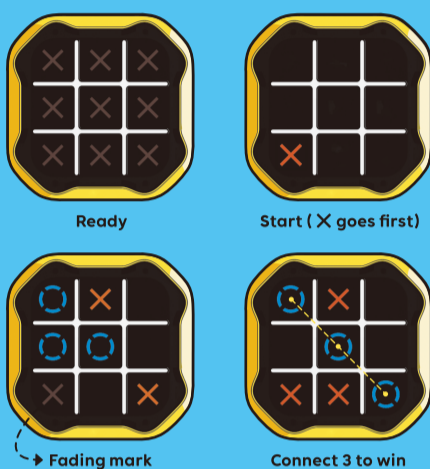 

How to play


Take turns tapping the screen to make moves, connect 3 to win. X goes first. Only 3 marks can be put for each X and O. When the 4th mark is put, the oldest mark disappears.

Quick Start

- i Robot Mode ii Head to Head Mode
- X (human) moves first, O (robot) moves next
- The connected 3 tiles will flash when someone wins. Tap the screen to restart.

Memory Flash

1 | 3min

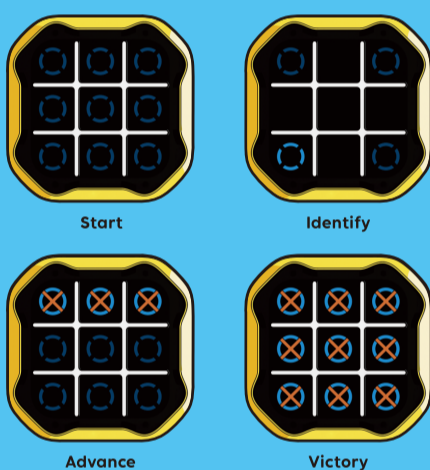 

How to play


Focus and identify the sequence. There are 9 difficulties, with 3 stages each. Clear all 9 difficulties in one go to beat the game!

Quick Start

- Switch to O Mode
- Observe and memorize the light sequence
- Tap the sequence
 - Correct: O mark disappears
 - Incorrect: X mark appears

Cover-up Tic-Tac-Toe

2 | 3min

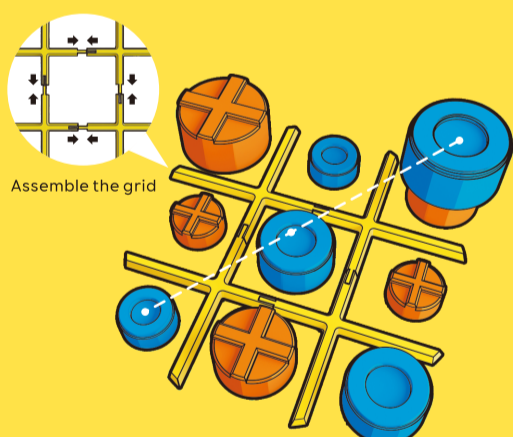 

How to play

1. Assemble the grid
2. Choose a color
3. Connect 3 in a row to win!

Quick Start

- In each turn, choose to "place" or "move" a piece
- Place**
Place a piece on an empty tile, or cover any smaller pieces
- Move**
Move a piece to an empty tile or cover any smaller pieces
 - Only the top piece can be moved
 - If a draw occurs after a move, the opposing player wins.

Specifications

Name: Tic-Tac-Toe Bolt Material: ABS
Model: JKJZQ001 Age: 3+

FAQ

1. Why does the touch screen console suddenly shut down?

The console will automatically turn off if low battery or no operations for 10 minutes. Replace the battery or flick the switch to wake up.

2. How to distinguish between robot mode and head-to-head mode?

In robot mode, after X (human) plays, O (robot) will automatical play.

In head-to-head mode, after X (player 1) plays, wait for O (player 2) to play.

Notes

- 1.Never abuse, throw, drop, puncture, violently kick or step on the product. This can damage the product.
- 2.The product is not water resistant. Do not drop the product into water. Do not leave the product out in the rain or near a source of moisture.
- 3.Do not place the product near a source of heat. Operate and store the product between 0 °C and 40 °C.
- 4.Leakage of battery acid can cause personal injury as well as damage to your Tic-Tac-Toe Bolt. If battery leakage occurs, thoroughly wash the affected skin and cloths. Keep battery acid away from your eyes and mouth. Leaking batteries may make popping sounds.
To avoid battery leakage:
Do not mix different brands of batteries; Do not mix old and new batteries; Do not mix alkaline, standard (carbon-zinc), or re-chargeable batteries; Do no leave used batteries in the Tic-Tac-Toe Bolt; Do not leave batteries in the Tic-Tac-Toe Bolt for long periods of time of non-use; Do not put the batteries backwards. Make sure the positive (+) and negative (-) ends are facing the correct direction. Do not dispose of batteries in a fire.
- 5.The supply terminals are not to be short-circuited.
- 6.Not suitable for children under 3 years. Small parts. Choking hazard.
- 7.Read this manual carefully before use and retain it for future reference.

Limited Warranty

GiIKER warrants that your GiIKER hardware products ("the Product") will be free from defects in materials and workmanship for a period of 1 year from the date of purchase ("the Warranty Period"). If a defect in the Product arises under normal and intended use within the Warranty Period, please contact the authorized GiIKER dealer in your country. The authorized GiIKER dealer in your country will, at its option and subject to applicable laws, replace or repair the Product with the new or reconditioned parts.

This warranty is only valid to the original retail purchaser, accompanied by a receipt or proof of purchase. GiIKER does not warrant that the operation of the Product will be uninterrupted or error-free. This Warranty does not apply to: a) Products you purchase from unauthorized dealer; b) Defects in consumables, such as stickers or protecting coatings designed to diminish over time; c) Defects caused by misuse or failure to follow the product directions, improper or unauthorized repair; d) Defects caused by accidents, neglect, fire, water, lightning, or other acts of nature; e) Normal wear and tear or otherwise due to the normal aging, other cause beyond GiIKER's reasonable control.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE (OR BY COUNTRY OR PROVINCE). OTHER THAN AS PERMITTED BY LAW, GI IKER DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the antenna and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help.

