

CHARGING

1. Insert the USB-C Charging end into the Swami 6000i & then insert the USB end of the charging cord into a USB charging port or AC adapter (included). The recommended charging rate is 5V, 1A.
2. A complete full charge will take roughly 6 hours



BUTTON DESCRIPTION

-[Power] Button: Hold to power on/off

-[OK] Button: Tap to confirm selection. Long hold to go back.

-[Up] Button: Press to scroll up, change holes.

-[Down] Button: Press to scroll down, change holes.



 
FORCE SHUT DOWN

If you experience an error while using your 6000i, please follow the force shut down procedure shown below. This will automatically power off your unit. Once powered down, the unit can be turned on again.

PRESS the [Power] button, [Up] button and [OK] button all at once to perform the force reset.

USING SWAMI ON THE COURSE

Select the **Play** option from the **Start Menu** and press **[OK]** The Swami 6000i will search for surrounding courses that the device supports. Use the **[Up]** and **[Down]** keys to select your golf course, then press the **[OK]** button.

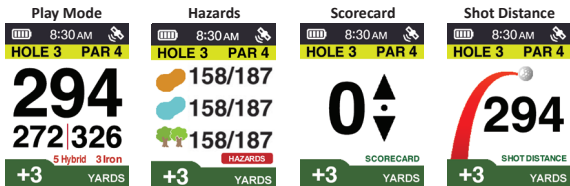

Play Mode will now display the distance to the front, center & back edge of the green for the current hole.

***Setting Up i-Caddie*:** To set up i-Caddie navigate to the settings tab and enter your average 7 iron distance using the **[Up]** & **[Down]** buttons. Once set, hold the **[OK]** button

While in **Play Mode**, press the **[OK]** button to access the hazard screen. To return the **Play Mode** screen (distances to green) hold down the **[OK]** button

To access the scorecard, press the **[OK]** button while on the **hazard screen**. Press the **[UP]** or **[DOWN]** buttons to enter your score, then hold **[OK]** to return to the **Play Mode** screen (distances to green).

Note: Scorecard can only be used if turned ON in settings

While in **Play Mode**, press **[OK]** to access **Shot Distance Mode** & then travel from where you hit your shot to your ball. The Distance that the shot traveled will be displayed. To return to **Play Mode** screen (distances to green), hold the **[OK]** button.

Note: Shot Distance Mode can only be used if turned ON in settings