

# SWAMI VIBE QUICK START



## CHARGING

1. Insert micro USB charging end into the Swami Vibe & then insert the USB end of the charging cord into a USB charging port or AC adapter (included). The recommended USB charging rate is 5V, 1A.
2. A complete full charge will take roughly 6 hours of charging time.



## BUTTON DESCRIPTION & SCREEN LAYOUT



- A. [POWER] Button: **Hold** to power on. **Hold** to power off.
- B. [OK] Button: **Press** to select options and to toggle between Green, Hazards, & Scorecard. **Press & hold** to return to previous screen.
- C. [UP] Button: **Press** to scroll up, change holes.
- D. [Down] Button: **Press** to scroll down, change holes.
- E. [PLAY/PAUSE] Button: **Press** to play music, **press** again to pause
- F. [BT CONNECTION] Button: **Press & hold** to connect. Activate Bluetooth on smartphone. Then, **Hold [BT CONNECTION]** Button. Indicator light flashes blue while searching for device to pair. Select "SWAMI VIBE" on your smartphone, indicator light stops flashing when paired.
- G. [VOLUME UP] Button: **Press** once to raise volume. **Press** twice to skip to next song
- H. [VOLUME DOWN] Button: **Press** once to lower volume. **Press** twice to go back a song


## USING SWAMI ON THE COURSE

Select the **PLAY** option from the Main Menu and **press** the **[OK]** button. The Swami Vibe will search for surrounding courses that the device supports once courses download. Use the **[UP]** and **[DOWN]** buttons to select your golf course, then **press** the **[OK]** button.


### 1. PLAY MODE



### 2. HAZARDS

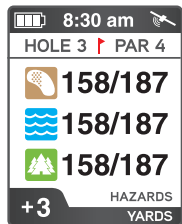

### 3. SCORE CARD

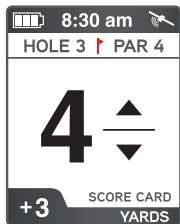

### 4. SHOT DISTANCE



- 1. PLAY MODE** will display the distance to the Front, Center & Back edge of the green for the current hole.
- While in **PLAY MODE**, **press** the **[OK]** button to access the **HAZARD SCREEN**. To return to the **PLAY MODE** screen (distances to green) **press [OK]** again.
- To access the **SCORECARD**, **press** the **[OK]** button while on the **HAZARD SCREEN**. **Press** the **[UP]** or **[DOWN]** buttons to enter your score, then **press [OK]** button again to return to the **PLAY MODE** Screen (distances to green).  
**NOTE: SCORECARD** can only be used if turned ON in Settings.
- While in **PLAY MODE**, **press** the **[OK]** button to access **SHOT DISTANCE MODE**. Then travel from where you hit your shot to your ball. The distance that the shot traveled will be displayed. To return to the **PLAY MODE** Screen (distances to green), **press** the **[OK]** button.  
**NOTE: SHOT DISTANCE** can only be used if turned ON in Settings.

## MAGNET

The Swami Vibe contains a strong magnet inside of the unit. Use the magnet to attach to a metal surface for hands-free use on the course. To attach, simply line up the back of the unit with a metal surface & allow the magnet to connect before letting go.

