

# SWAMI ACE QUICK START



## CHARGING

1. Insert the micro USB charging end into the Swami ACE & then insert the USB end of the charging cord into a USB charging port or AC adapter (included). The recommended USB charging rate is 5V, 1A.
2. A complete full charge will take roughly 6 hours of charging time.



## BUTTON DESCRIPTION

- **[Power] Button:** Hold to power on/off
- **[OK] Button:** Tap to confirm selection. Long hold to go back.
- **[Up] Button:** Press to scroll up, change holes.
- **[Down] Button:** Press to scroll down, change holes.



## FORCE SHUT DOWN

If you experience an error while using your ACE, please follow the force shut down procedure shown below. This will automatically power off your unit. Once powered down, the unit can be turned on again.

**PRESS** the **[Power]** button, **[Up]** button and **[OK]** button all at once to perform the force reset.

## USING SWAMI ON THE COURSE

Select the **Play** option from the **Start Menu** and press **[OK]** The Swami ACE will search for surrounding courses that the device supports. Use the **[Up]** and **[Down]** keys to select your golf course, then press the **[OK]** button.


### 1. PLAY MODE



### 2. HAZARDS



### 3. SCORECARD

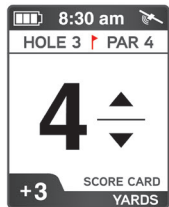

### 4. SHOT DISTANCE



1. **Play Mode** will now display the distance to the front, center & back edge of the green for the current hole.
2. While in **Play Mode**, press the **[OK]** button to access the **hazard screen**. To return to the **Play Mode** screen (distances to green) hold down the **[OK]** button.
3. To access the scorecard, press the **[OK]** button while on the **hazard screen**. Press the **[UP]** or **[DOWN]** buttons to enter your score, then hold **[OK]** to return to the **Play Mode** screen (distances to green).

**Note:** Scorecard can only be used if turned ON in settings

4. While in **Play Mode**, press **[OK]** to access **Shot Distance Mode**, & then travel from where you hit your shot to your ball. The distance that the shot traveled will be displayed. To return to the **Play Mode** screen (distances to green), hold the **[OK]** button.

**Note:** Shot Distance Mode can only be used if turned ON in settings

## MAGNETIC HOLDER/COVER:

### TO PLACE ON CART:

Slide the holder onto the back of the device to magnetically mount to the golf cart.



### TO STORE DEVICE:

Slide the holder onto the front of the device to cover and protect the screen.

