

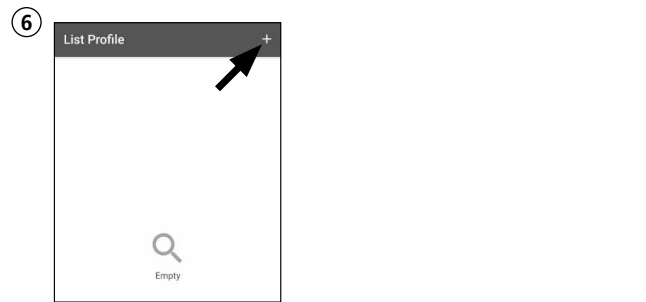
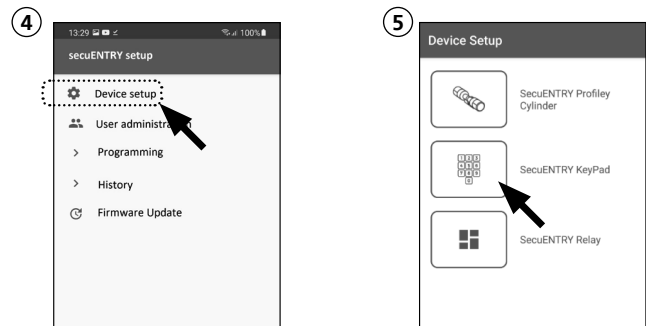
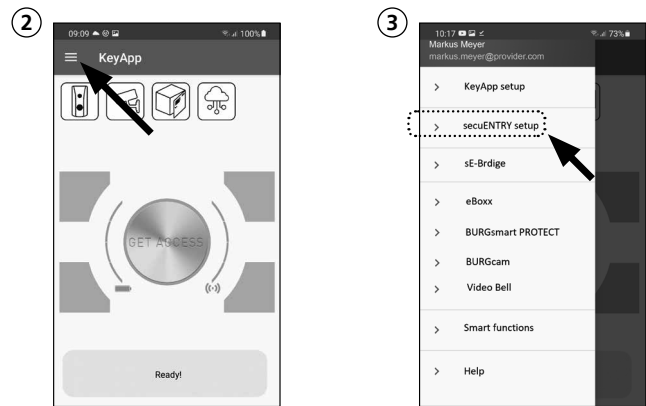
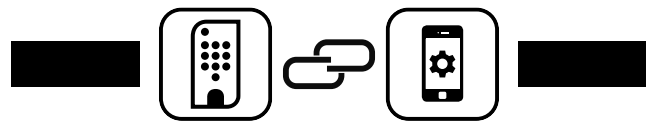
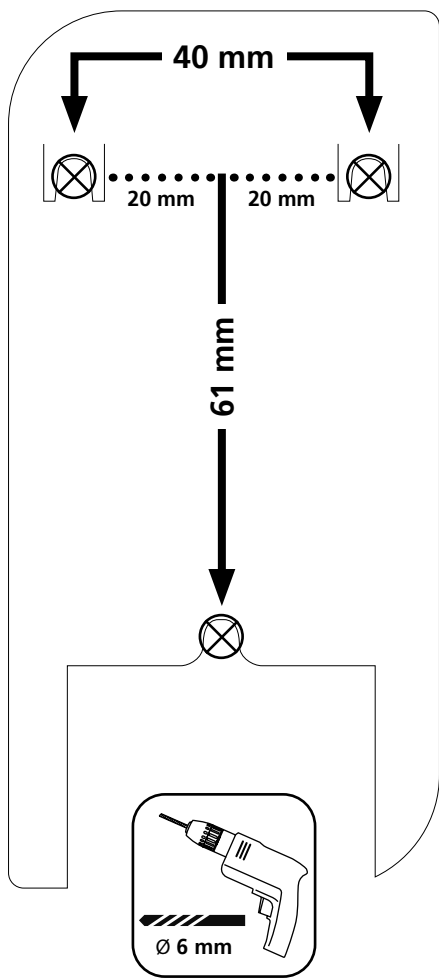
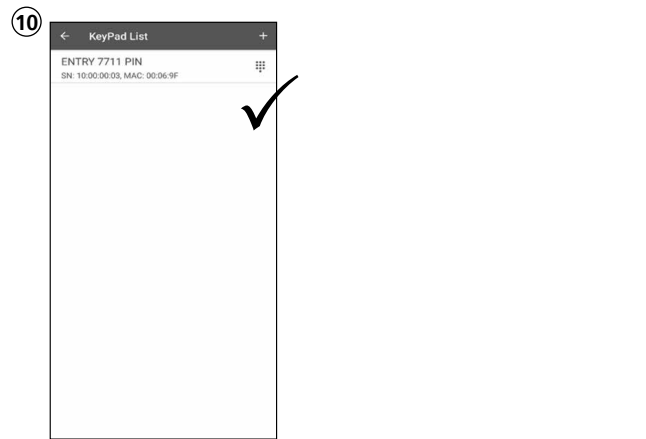







1:1

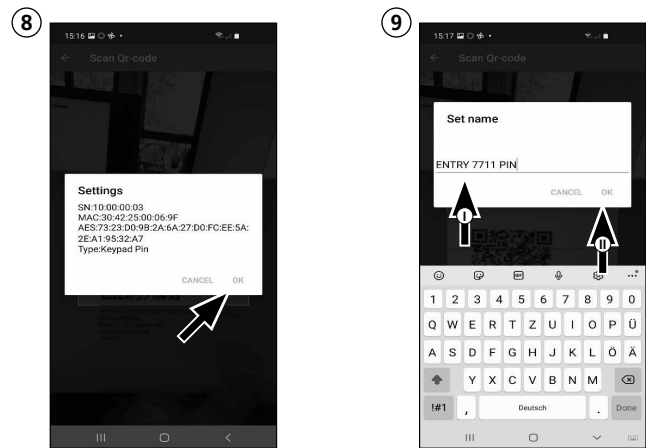




Quick Start
ENTRY 7711 Keypad PIN
ENTRY 7712 Keypad FP 1

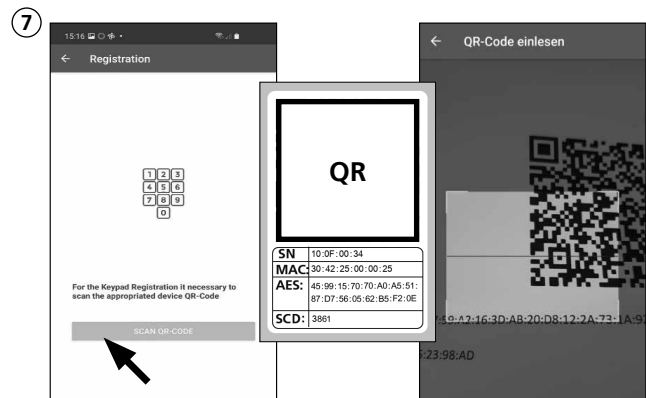

 Quick Start
ENTRY 7711 Keypad PIN
ENTRY 7712 Keypad FP 2

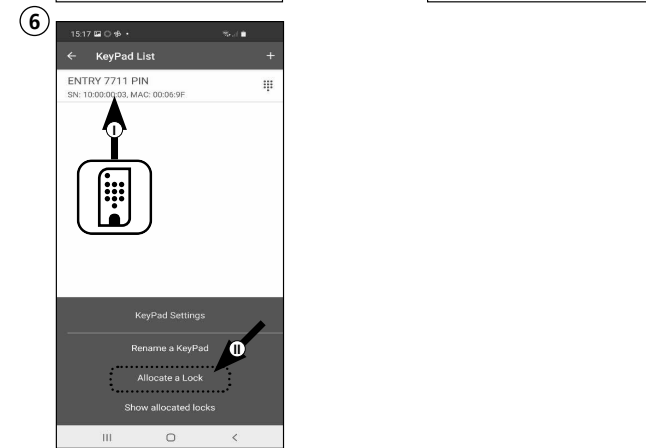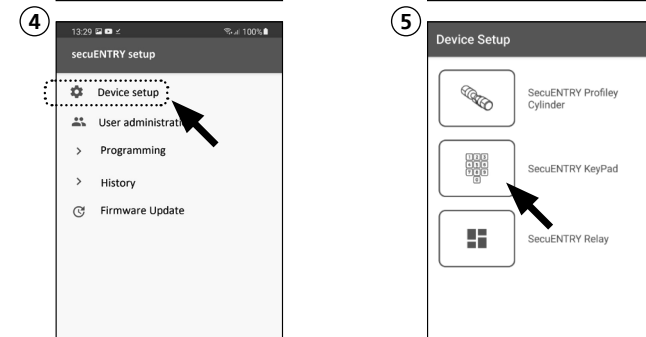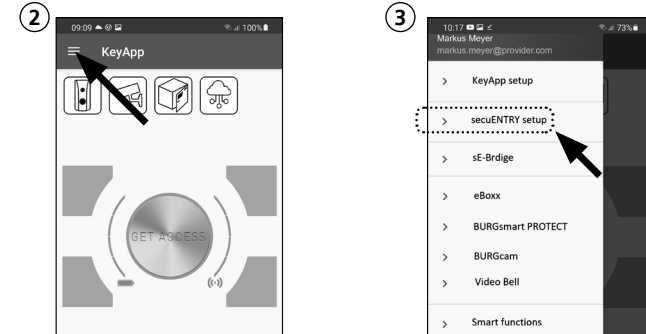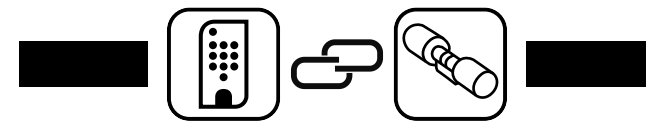

Quick Start
ENTRY 7711 Keypad PIN
ENTRY 7712 Keypad FP 3

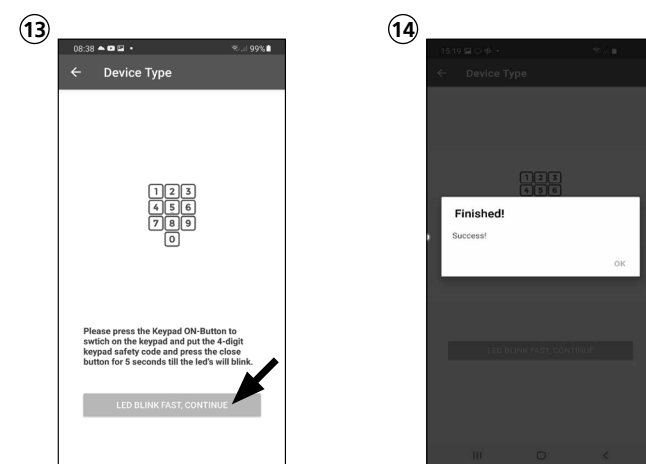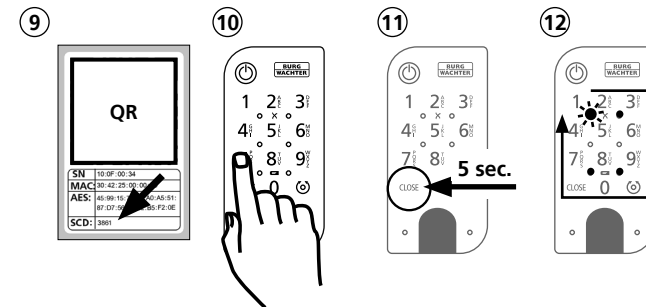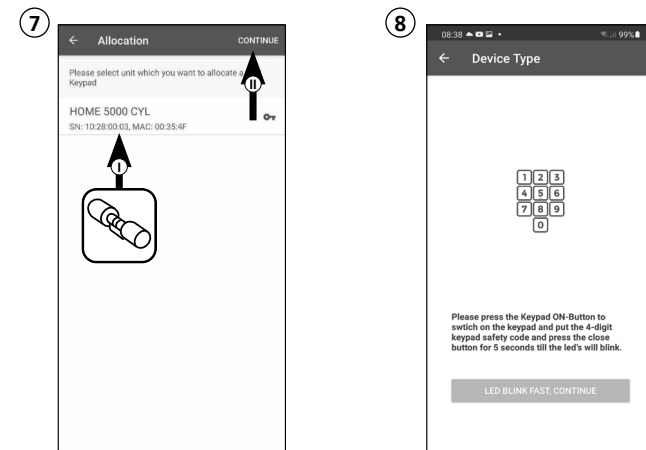

Quick Start
ENTRY 7711 Keypad PIN
ENTRY 7712 Keypad FP 4



1

2

3

①

②

③

ADM code


④

④.1

④.2

ENTRY 7712 Keypad FP:

Download:
Hauptanleitung
Main manual
Manuel Principal
Hoofdgebruiksaanwijzing

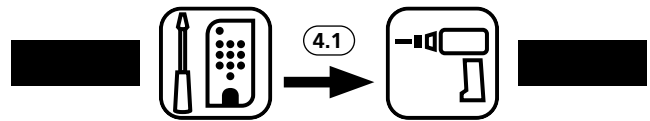

4.1

1

40 mm

61 mm

Ø 6 mm


2

3

4

4

5

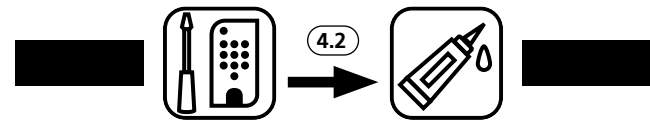

4.2

1


2

3



Quick start
secuENTRY
ENTRY 7711 Keypad PIN
ENTRY 7712 Keypad FP

secu **ENTRY**

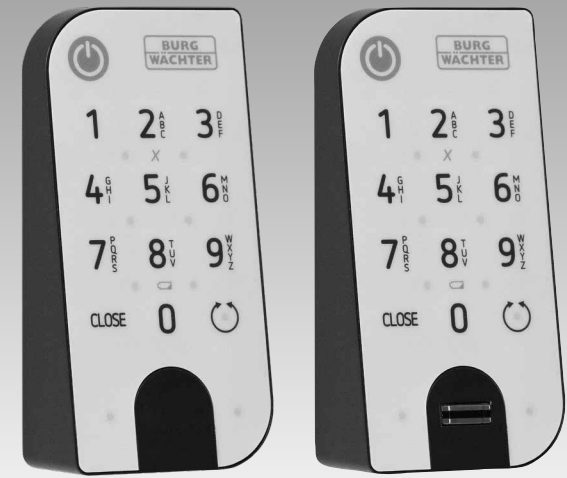

ENTRY 7711
Keypad PIN

ENTRY 7712
Keypad FP



Download:
Hauptanleitung
Main manual
Manuel Principal
Hoofdgebruiksaanwijzing