 
 
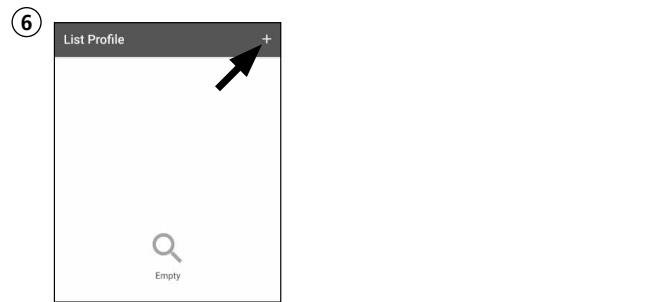 
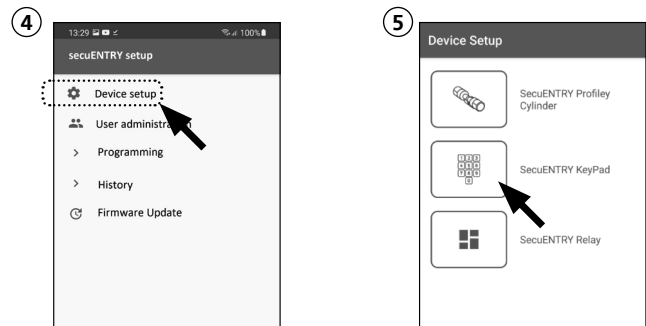 
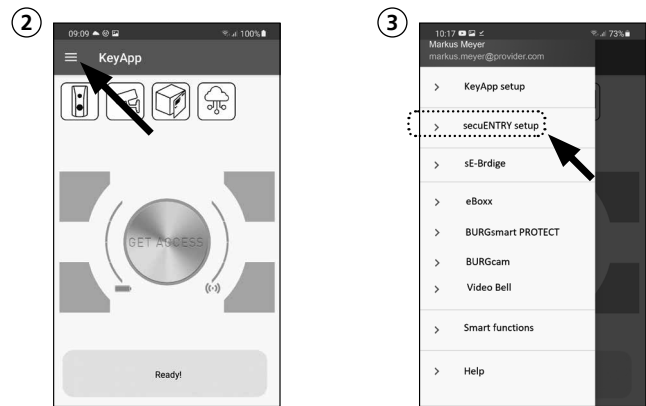 
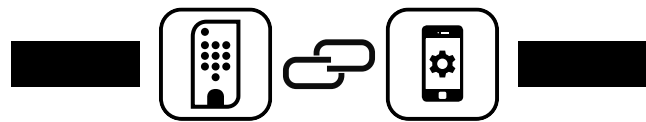 
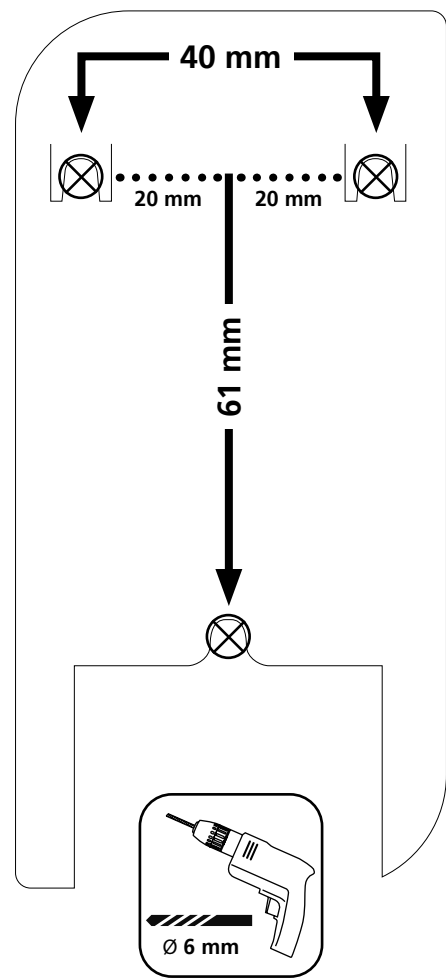 
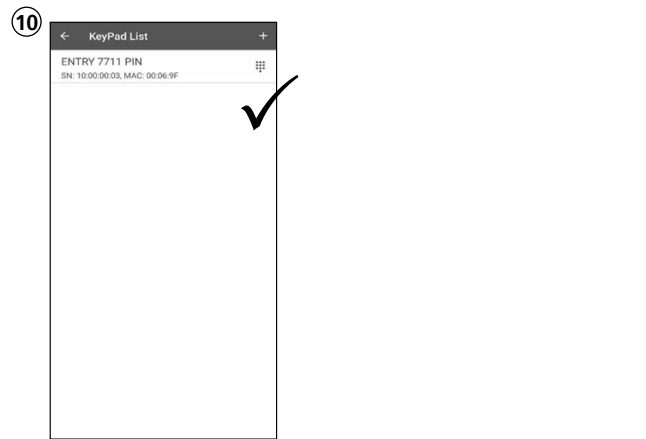 







1:1

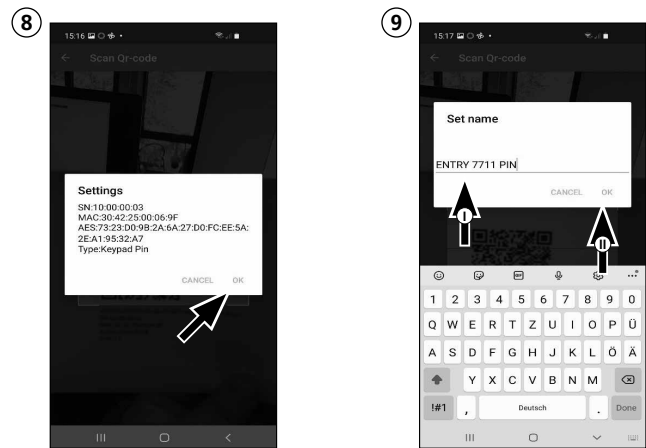




Quick Start
secuENTRY
ENTRY 7711 Keypad PIN **1**

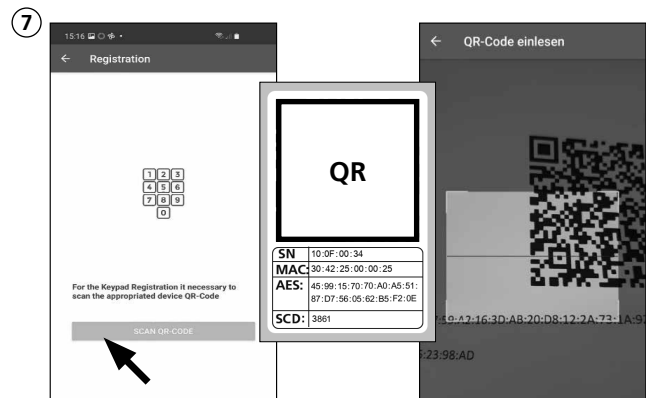

   
 
 
Quick Start
secuENTRY
ENTRY 7711 Keypad PIN **2**


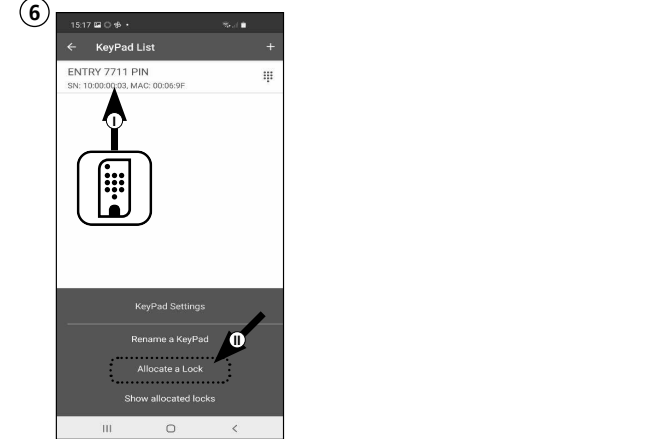
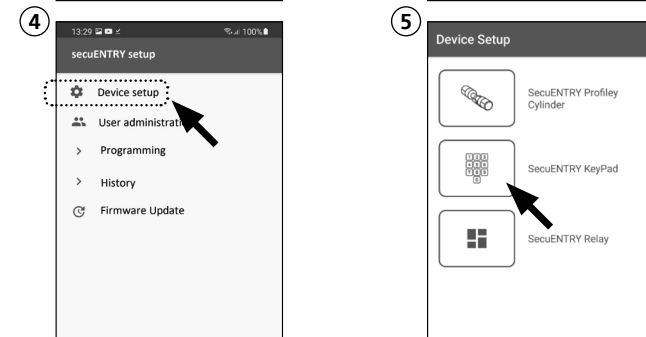
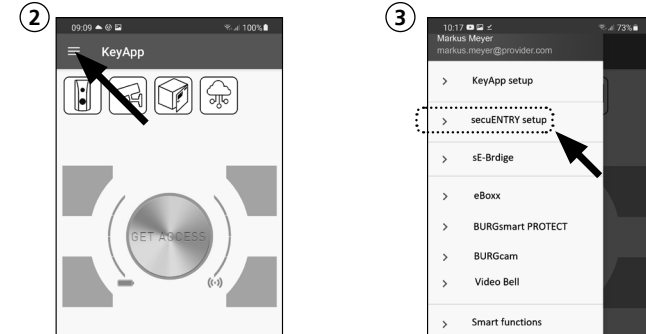

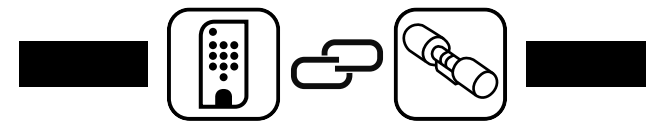


   Quick Start
secuENTRY
ENTRY 7711 Keypad PIN **3**

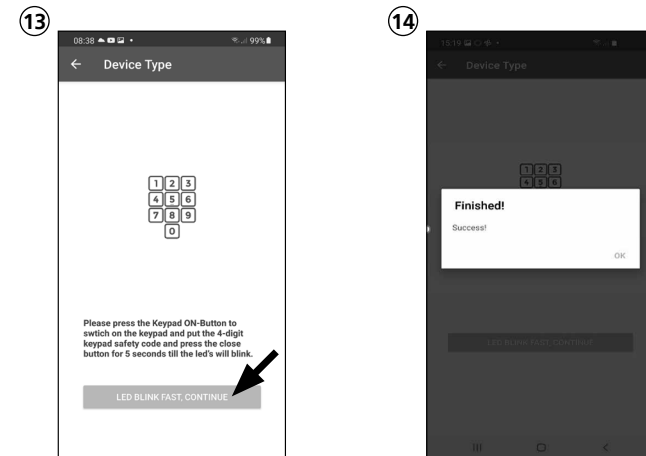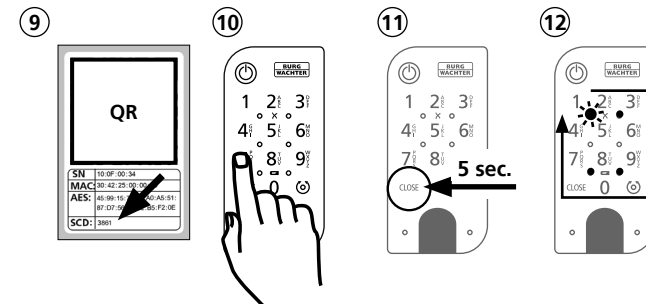
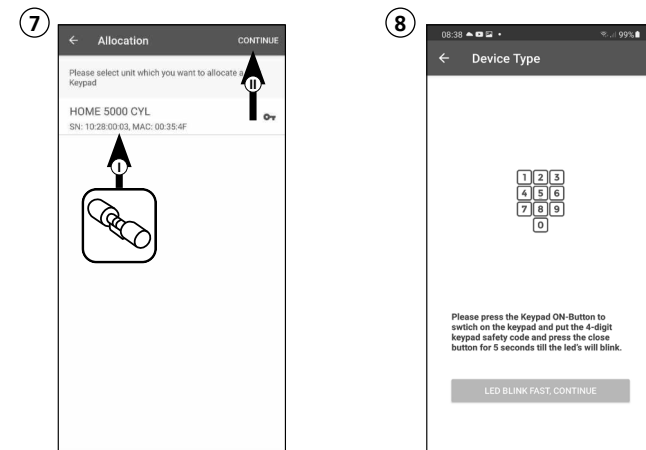


         Quick Start
secuENTRY
ENTRY 7711 Keypad PIN **4**

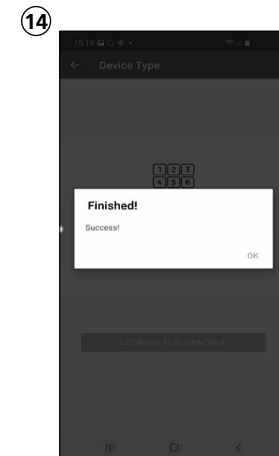
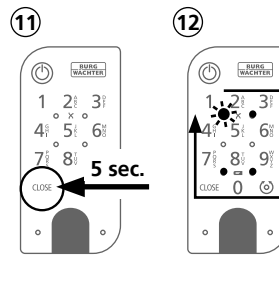
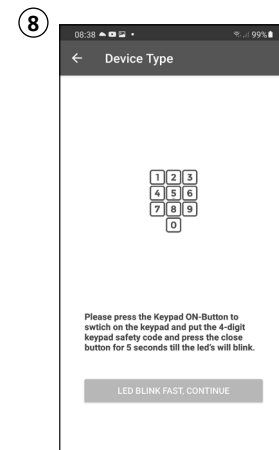


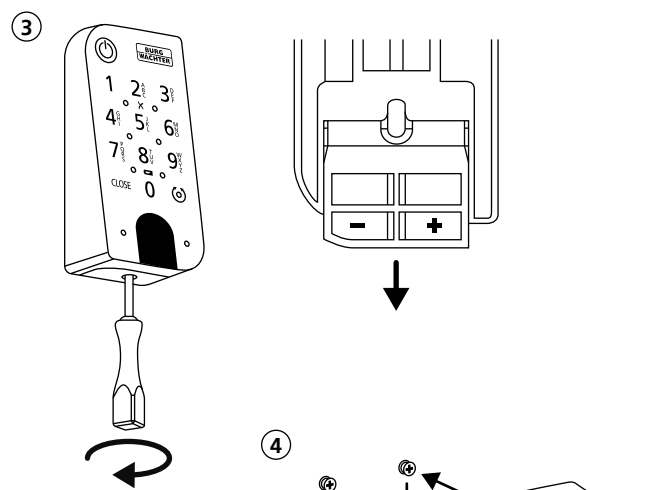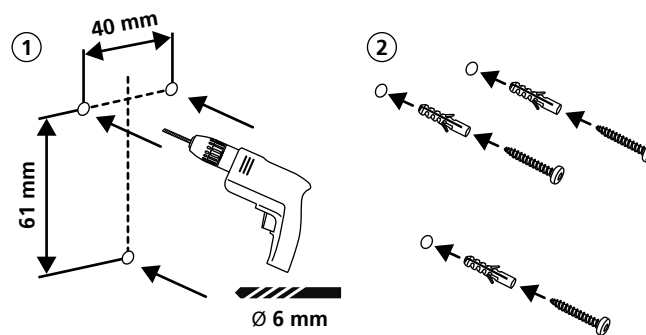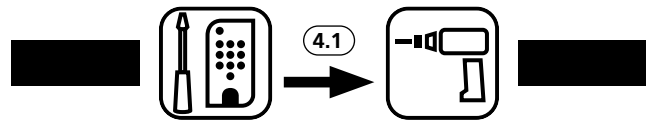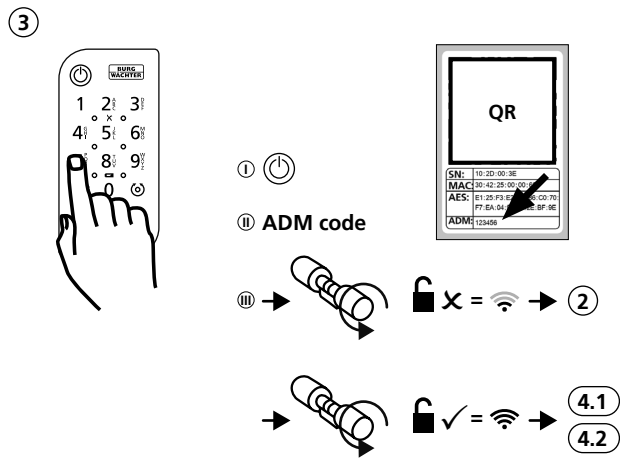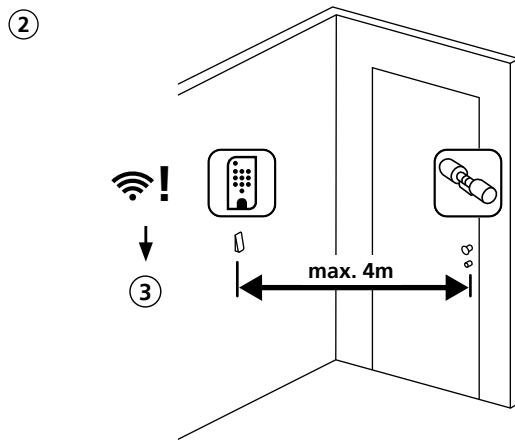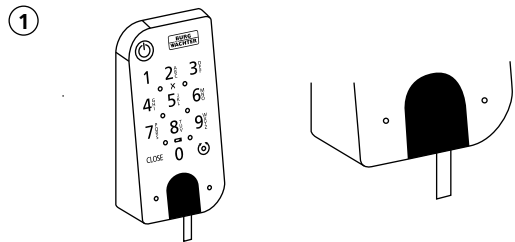


④

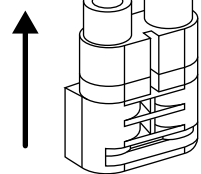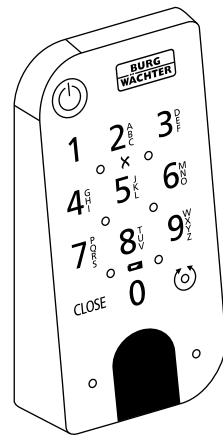  


⑤

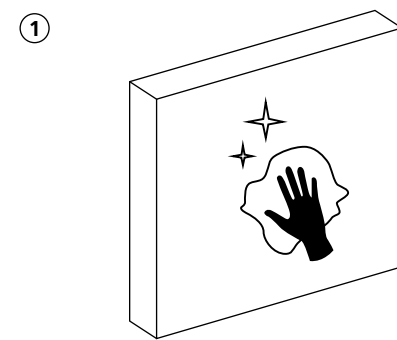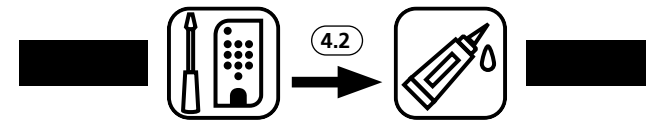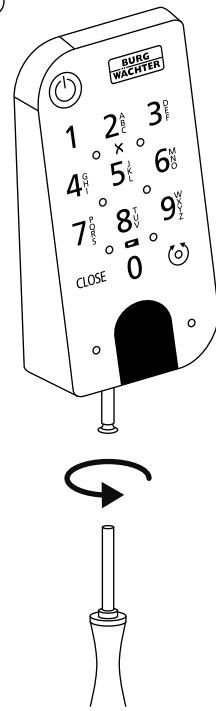   

②

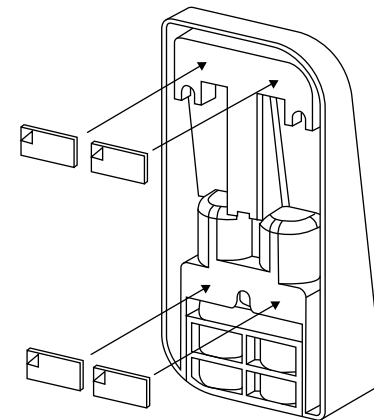 

③

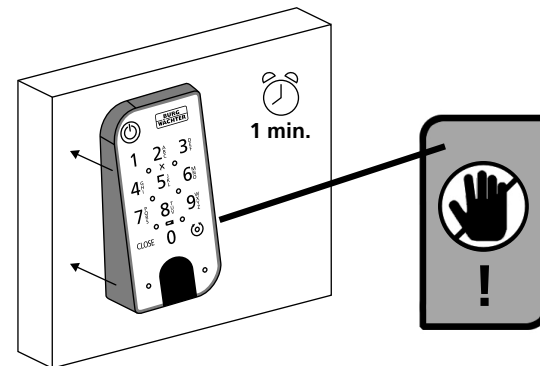 

Quick start
secuENTRY
ENTRY 7711 Keypad PIN

secu **ENTRY**



Hauptanleitung:
Main manual:
Manuel Principal :
Hoofdgebruiksaanwijzing: 