

RIVETNUT TECHNOLOGY SYSTEMS LIMITED

SER72M Manual tool for Rivetnuts




R.T.S. SALES LINE 01296 330331

For additional information and technical support please contact R.T.S. technical sales department . R.T.S. reserve the right to change specifications at any time . Information given is for guidance only and should not be used for specific design criteria without reference to our application engineers.

RIVETNUT TECHNOLOGY SYSTEMS LTD. DATA SHEET No 48SER72M



RIVETNUT TECHNOLOGY SYSTEMS LIMITED

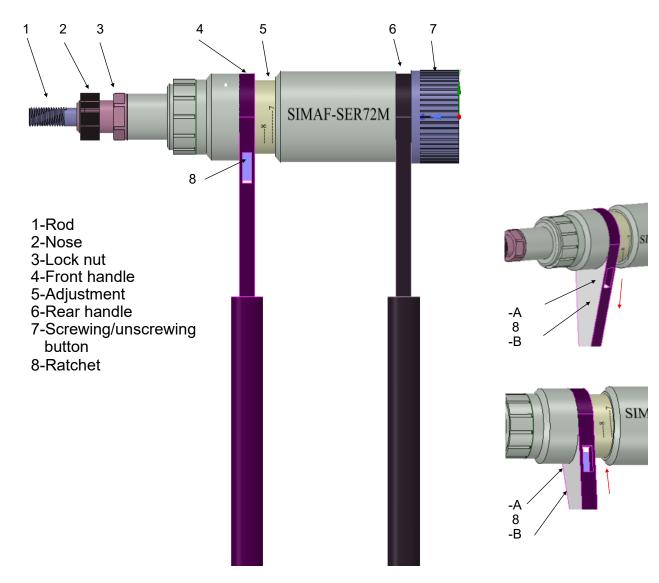

R.T.S. SALES LINE **01296 330331**

Put the Rivetnut on the rod (1). The nut must be in contact on the nose (2). The locknut (3) allows to adjust the length of the nut. Lock it firmly against the machine body.

Put the rachet (8) in position A or B and activate the handle (6) to display the desired stroke on the graduation (5).

Put the ratchet (8) in position A and activate the handles until the nut locks and crimps. To unscrew, put the Ratchet (8) in position B and unscrew the nut with the button (7).

For additional information and technical support please contact R.T.S. technical sales department . R.T.S. reserve the right to change specifications at any time . Information given is for guidance only and should not be used for specific design criteria without reference to our application engineers.

RIVETNUT TECHNOLOGY SYSTEMS LTD. DATA SHEET No 48SER72M