

# senelux

## INSTRUCTION MANUAL

### Oil Filled Heater with Wi-Fi control



Model: OH-200XA-9

**ENGLISH**

# TABLE OF CONTENTS

i.	Safety Precautions	02
ii.	Caster Wheel Assembly	04
iii.	Product Overview	05
iv.	Connecting The Wi-fi	08
v.	Specifications	13
vi.	Cleaning And Care	13
vii.	Advice On Disposal	14
viii.	Warranty	15
ix.	Information	15

## 1. SAFETY PRECAUTIONS

### General Precautions

- Carefully read this manual before operating the heater. Keep the manual accessible and transfer it to any new owner if you give the heater away.
- Inspect the heater and all included accessories to ensure they are present and in good condition before use.

### Installation

- Install the heater according to the provided installation instructions. It must be plugged into an electrical socket that meets the following requirements: AC 220V-240V, frequency 50Hz.

### Usage Guidelines

- This heater is designed for indoor use only. Using it outdoors is strictly prohibited.
- Never leave the heater unattended during operation. Keep it out of reach of children to prevent the risk of burns.
- Do not use external controllers with this heater. The heater should never be set to turn on automatically when unattended.
- Avoid using the heater near flammable or explosive materials due to the risk of fire or explosion.

### Safety Measures

- Do not insert any objects into the protective grill, as this poses a risk of electrical shock.
- The metal housing will become hot during operation. To avoid burns, allow sufficient time for the heater to cool before turning it off and storing it.
- Unplug the heater if you won't be using it for an extended period.
- Confirm the heater, casing, wire, and plug are undamaged before use. Do not operate if any of these components are damaged.

## Maintenance and Handling

- Check the heating element for damage before each use, especially if the heater has been dropped or bumped. Do not use it if the element is damaged.
- To unplug the heater, first turn off the power switch, then carefully remove the plug from the socket. Never pull on the cable to disconnect.
- Disassembling the heater without authorisation is strictly prohibited. If the heater is damaged, seek assistance from qualified service personnel.

## Special Considerations

- Avoid skin contact with the surface of the appliance while it's in operation to prevent burns.
- Do not plug other devices into the same socket as the heater to prevent overload and fire risk.

## CAUTIONS

- Never cover the heater. This can lead to overheating and fire hazards.
- Do not install the heater directly below an electrical outlet.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid potential hazards.

## Power Supply

- Do not use an extension lead with this heater, as it could overheat and pose a fire risk.

## Restricted Areas

- This heater is not designed for use in bathrooms, laundry rooms, or other areas where moisture is present. Do not place it near water sources like bathtubs or pools.

## Children and Vulnerable Individuals

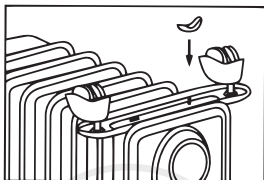 
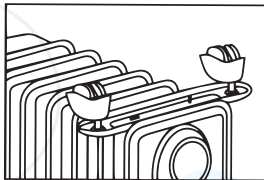 
- Children under 3 years should always be supervised around the heater.
- Persons aged 8 years and above or those with reduced physical, sensory, or mental capabilities may use this appliance if they have been given proper instruction and supervision.




## Final Caution

- Some parts of this appliance can become very hot and may cause burns. Exercise extra caution when children or vulnerable individuals are present.

## 2. CASTER WHEEL ASSEMBLY

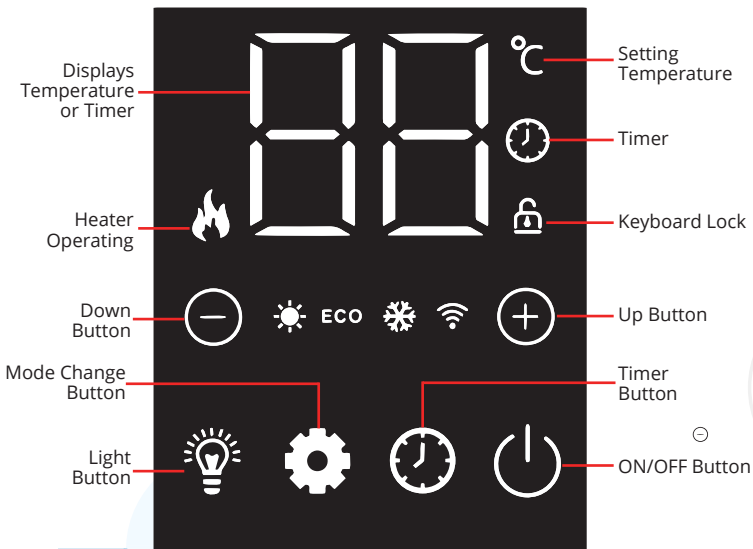 
1. Unpack the Castor Wheels and Arc-shaped Brackets from the heater's packaging.
2. Turn the radiator upside down on a scratch-free and stable surface to prevent damage to the paint finish or your flooring.
3. Fit the two Castor Wheels onto the radiator by placing the Arc-shaped Brackets between the outermost fins on each side of the radiator.
4. Securely fasten the Castor Wheels onto the radiator by screwing two Wing Nuts onto each bracket.
5. Once the Castor Wheel Assembly is fitted, turn the radiator back to its upright position.







Description	Drawing	Quantity
Castor Wheels		2
Wing Nut		2
Arc-shaped Bracket		2


### 3. PRODUCT OVERVIEW


#### CONTROL PANEL










- The heater will emit a beep as it powers on and starts in standby mode.
- Touch the  on/off button to activate the heater. When operational, an  icon will appear on the heater's display. When the heater is not operational, the icon will disappear. The mode icon will also be displayed, indicating whether you are in ECO<sup>eco</sup>,  Comfort, or Anti-frost mode .

**eco Eco Mode** – In this mode, the heater operates at half its maximum capacity. For example, if the heater has a total capacity of 2000W, it will operate at 800W in ECO mode.





 **Comfort Mode** – When in Comfort mode, the heater runs at its full capacity. For a 2000W heater, it will operate at 2000W.

 **Anti-frost Mode** – This mode activates to prevent frost. The heater will begin operating when the ambient temperature drops below 5°C and will automatically cease heating if the ambient temperature rises above 7°C.

### Adjusting Settings














- To change the heating mode, press the  MODE button to cycle through the ECO, <sup>eco</sup> Comfort  and anti-frost  modes. And the heater will be in the mode selected.
- To set the temperature of any mode, you can use the MINUS  and Plus  buttons to adjust the temperature within a range of 5°C to 50°C.
- To set the timer, press the  TIME button. The timer can be set between 0 to 24 hours. After setting, the digits will flash before returning to the heating mode display. A timer icon  will appear on the display, indicating that the timer has been set. The heater will automatically switch off when the timer elapses.

### Additional Features

- **Child Lock** - To set the child lock, Press and hold the  buttons until the Keyboard lock icon  appears on the screen. This will disable the control panel. To unlock, press and hold the  buttons until the icon disappears, restoring functionality to the control panel.
- **Display Light** - Press the 'LIGHT' button  once to dim the display to half luminance. Press it again to turn off the display entirely. Pressing it a third time will restore full luminance.

## OPERATING THE REMOTE CONTROL



- Press the ON/OFF  button to initiate heating.
- To change the heating mode, press the  MODE button to cycle through the ECO<sub>eco</sub>  Comfort , and anti-frost  modes. And the heater will be in the mode selected.
- To adjust the set temperature of any of the modes, you can press the Up  and Down  buttons to adjust the temperature. The temperature range is from 5-50°C.
- To set the timer, press the 'Timer' button  the digits will flash while setting this function. Repeatedly press this timer button to set the timer within a range from 0 to 24 hours. Then the screen will return to the heating mode
- To set the child lock function, Press the  button. The padlock icon  will appear on the display screen, and the control panel will now be locked, But the remote control still operates. To turn off the child lock, Press the  button again. The padlock icon  will disappear to indicate that the child lock function is inactive, and all buttons can be used again.
- To switch off the display light whilst the heater is in operation, Press the 'LIGHT'  button once to dim the display to half luminance. Press it again to turn off the display entirely. Pressing it a third time will restore full luminance.



## 4. CONNECTING THE WI-FI

### INSTALLATION AND SETUP OF THE "SMART LIFE" APP

Step 1: Download the "Smart Life" App

Utilise your mobile phone's camera to scan the QR code provided below, this will guide you to download the "Smart Life" app. Alternatively, you can manually find and download the app by typing "Smart Life" in your preferred app store such as Google Play or the Apple App Store



Step 2: Registration

After installing the app, open it and click on "Register". You can choose to register using either your phone number or email address. Once you have registered, log into the app with your new "Smart Life" account.

### Adding a Device

#### Step 1: Prepare Your Phone

Ensure your mobile phone is connected to your home wireless network and that Bluetooth is turned on. Make sure to connect to a 2.4GHz Wi-Fi network for optimal performance.

#### Step 2: Open the "Smart Life" App

Launch the "Smart Life" app on your device.



#### Step 3: Navigate to the App's Homepage

 
From here, click the "+" button to begin the process of adding a device. You will then see options for manual addition or automatic discovery.

#### Step 4: Automatic Discovery

With the appropriate permissions enabled (location, Wi-Fi and Bluetooth), the app can automatically find devices that are in network configuration state and powered on. If it failed to connect to the device automatically, please try adding it manually.

#### Step 5: Manual Addition

1. **Select Device Type:** In the app, choose the device type that matches your product. Use the sidebar to navigate through product categories, e.g., Small Home Appliances > Oil Heater (Wi-Fi).
2. **Pairing Mode:** Ensure the machine is on. Then press and hold the ON/ OFF button  for about 5 seconds until you hear a beep. A rapidly flashing indicator light  signifies the device is in pairing mode.
3. **Follow App Instructions:** Complete the setup by following in-app instructions and entering your Wi-Fi password.

**Wi-Fi Reset (if needed):** To reset the Wi-Fi network, press and hold the the ON/ OFF button  for 5 seconds while the Wi-Fi light is on.

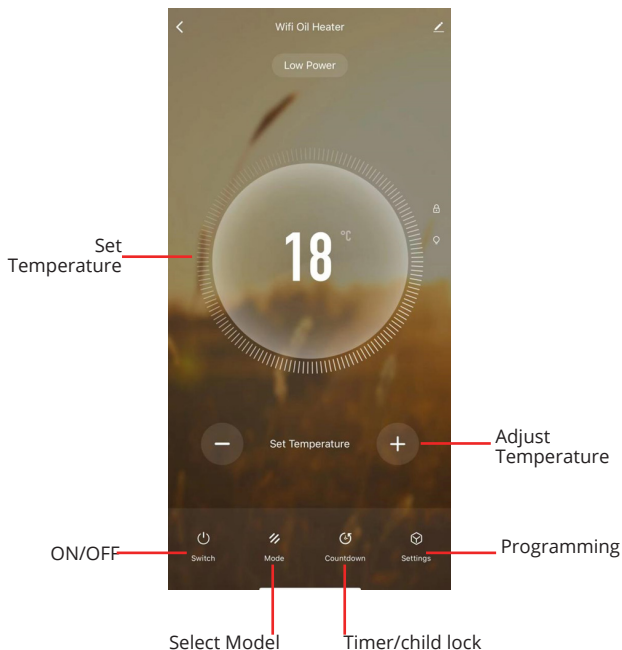 
### USING THE SMART LIFE APP

You can use the app to control multiple devices. The status of your devices is shown on the device list:

- Offline (device cannot communicate with the server)
- Turned Off (the device is in standby mode)
- Turned On (the device is in heating mode)

Tap the device name when the heater is online to access the control interface. Note: When the heater is offline, you cannot control it with the app.

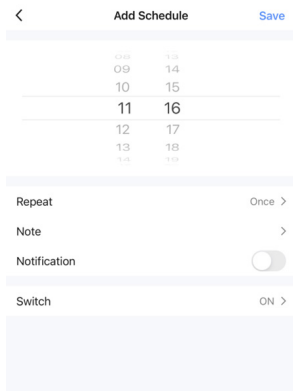 
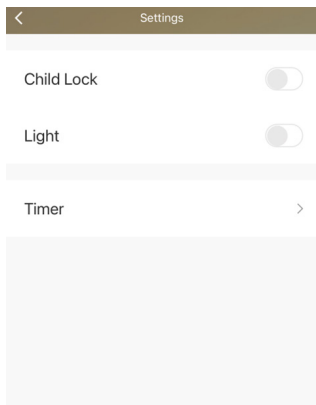 
## CONTROLLING THE HEATER



You can change the heater's current mode by tapping the mode buttons. You can adjust the mode's temperature using the + and - buttons when you're in that mode.

## SCHEDULING YOUR HEATING

You can program your heating by creating a schedule of “events” where the heater switches on or off. These events can be temporary, like setting a timer, or recurring schedule. Hence, the heater switches on at the same time every week. You can set unlimited events, switching the heater on and off across the week.



## SETTING UP HEATING EVENTS

1. **Specify Start Time:** For each event, you must set a starting time.
2. **Repetition:** Choose whether you'd like the event to be repeated.
  - If you want a one-time occurrence, select “Only Once” to set a timer.
  - For repeating events, specify which days you want the event to take place.

3. **On/Off State:** Decide whether you'd like the heater to switch on or off during this event.
4. **Confirmation:** Confirm your settings at each stage of the setup.
5. **Save:** Press the 'Save' button to finalise and store the event in the app.

### Managing Your Schedule

- Each event will appear in your schedule within the app.
- Use the toggle feature to activate or deactivate individual events.
- To delete an event, swipe left on it and tap 'Delete'.

### Additional Information

- The heater will emit a beep to indicate the beginning of a new heating event.
- The heater will operate in the last mode it was set to; scheduling mode changes is not an option.
- If you manually adjust the heater's settings during an active event—such as turning it on when it's scheduled to be off—the heater will maintain its current state until the next scheduled event commences.

## 5. SPECIFICATIONS

<b>Type</b>	<b>OH-200XA-9</b>
<b>Voltage</b>	<b>AC 220V-240V</b>
<b>Frequency</b>	<b>50Hz</b>
<b>Power</b>	<b>Comfort mode: 2000W (about) ECO mode: 800W (about)</b>
<b>Category</b>	<b>I</b>
<b>Net Weight</b>	<b>9.2kg</b>
<b>Gross Weight</b>	<b>10kg</b>
<b>Size</b>	<b>385×245×625mm</b>
<b>Packing Size</b>	<b>445×140×665mm</b>

The product is for household use only.

## 6. CLEANING AND CARE

### Maintenance

Always ensure the appliance is disconnected and completely cooled down before undertaking any maintenance. Utilise a vacuum cleaner to eliminate dust from the grilles. Wipe the external casing with a damp cloth and follow with a dry cloth to remove moisture. Never submerge the unit in water, nor allow water to seep into it.

### Storing

Before storing the appliance, make sure it is disconnected, cooled, and cleaned. If the device will not be in use for an extended period, return the appliance and the instruction manual to their original packaging. Store them in a dry, well-ventilated area. Do not place heavy objects on the carton, as this may cause damage to the appliance.

**⚠ WARNING**

To mitigate the risk of overheating, never cover the heater.

The heater must not be positioned immediately below or in front of an electrical socket outlet.

Avoid placing the appliance near curtains or other flammable materials.

This heater should only be used on a horizontal and stable surface, depending on its design, and intended use.

**7. ADVICE ON DISPOSAL**

This marking signifies that this product should not be mixed with other household waste across the European Union. In order to avert potential environmental or human health hazards from unregulated waste disposal, please recycle this product responsibly to encourage sustainable material reuse. To recycle your used device, you may utilise established return and collection systems or consult the retailer where you originally purchased the product. They are equipped to facilitate the environmentally responsible recycling of this item.



We are committed to contributing to a more sustainable future. The outer carton of our product is made of 100% recyclable cardboard and adheres to European guidelines on recyclability and environmental responsibility. Please recycle the outer carton to help reduce waste and conserve natural resources.

**Notice:**

Feel free to contact your customer service centre or us if you need more than the above sheet to solve your problems and maintenance. Our website has a live chat, and you will find many instruction guides on YouTube.

Do not disassemble the appliance to fix it yourself; doing so will invalidate warranties.

## 8. WARRANTY

All Senelux products are covered from the original purchase date by a standard 2-year warranty. To register your warranty, please visit [www.senelux.co.uk](http://www.senelux.co.uk).

If, in the unlikely event that your product has any manufacturing defect, please get in touch with our customer service team at [support@senelux.co.uk](mailto:support@senelux.co.uk). Please quote your order number and any other relevant details regarding your issues. FAQs and help regarding all our products are available on our website and YouTube channel.

Any unauthorised repair of this product invalidates your warranty.

## 9. INFORMATION

If you want further information regarding using this product or any of our products, don't hesitate to contact us via the details below.



Senelux Ltd  
Unit 5-6 105 Boundary Street  
Liverpool L5 9YJ  
United Kingdom  
Email – [info@senelux.co.uk](mailto:info@senelux.co.uk)  
Website – [www.senelux.co.uk](http://www.senelux.co.uk)



Be sure to tag us in your photos on social media using #seneluxathome to be featured



@senelux



@senelux



@Senelux



@senelux.official



Thank you very much for using our products.  
Please read the user manual carefully before use and keep it for future reference.