

MyStage Assembly Instructions

1. Lay MyStage down flat on one side and open. Unfold with top surface on the ground legs facing up.
2. Slide 2 sides support beams all the way forward, and twist to lock in place.
3. Can be used flat with legs folded minimum height
4. Unfold all 5 legs and lock securely in place using the clamps. Suggested to make center leg 1 notch lower than others.
5. Extend legs to desired height using extending button.
6. Flip over top side facing up, and logo facing front.
7. Adjust legs if needed to make flat level surface.
8. Connect multiple units by inserting pin into side holes and tightening clamp.
9. Make sure each MyStage unit is facing the same direction so the legs do not contact other legs.

Disassemble

1. Disconnect the connecting pins by unclamping the clamp on the side and removing the pin.
2. Flip over MyStage top side facing down.
3. Release the leg clamp and fold legs (in fully retracted position)
4. Loosen both sides support beams and slide back into retracted position and tighten.
5. Fold in half and attach shoulder strap for carrying if desired.

BEYOND TENT

866-296-3868 | sales@beyondtent.com