

PROGRAMMING MANUAL FLEX CONTROLLER SOFTWARE

This manual contains programming instructions for the FLEX Controller used on the vending machines listed below. Please refer to your service manual for other information.

VENDOR	MODEL
3 Wide	3603, 3603A
4 Wide	3604, 3604A
5 Wide	3605, 3605A
6 Wide	3606, 3606A

TABLE OF CONTENTS

INTRODUCTION2			
SERVICE MODE2			
Service Mode Button2			
Keypad3			
Service Mode Menu3			
PRICE MENU4			
Set Price All Items4			
Set Price Range of Items4			
Set Price Individual Item5			
Set Calorie6			
COUPON/TOKEN 6			
All Items6			
Range Of Items7			
Individual Item8			
DISCOUNT 9			
All Items9			
Range of Items9			
Individual Item10			
Discount Schedule11			
COMBO VEND			
PROMO VEND			
ACCOUNTING MENU			
View Historical All Items17			
View Historical Range of Items18			
View Historical Individual Item18			
View Resettable All Items19			
View Resettable Range of Items 19			
View Resettable Individual Item20			
Reset21			
Full DEX21			
Tiny DEX22			
Read Reset22			
CONFIGURATION MENU			
Motor Pairing22			
Pair Reset			
SHUTDOWN			
All Items			
Range of Items25			
Individual Item26			
Shutdown Schedule27			
Reset Shutdown Schedule29			
SPACE TO SALES			
All Items30			
Range of Items30			
Individual Item31			
Reset STS Schedule32			
Auto Reinstate33			
Time Settings57			
OPTICAL VEND			
All Items33			
Range of Items34			
Individual Item35			
Fail OOS35			
Coin Light36			
DIAGNOSTIC MENU38			
Motor Count 39			

TEST VEND	38
All items	38
Range of Items	
Individual Item	
TEST RELAY	41
DOOR MENU	42
Motor Homing	42
Show Errors	42
Door Alert	42
HELP MENU	43
About	43
Location	43
Asset Number	44
Event Log	45
Diag Log	45
OPTION MENU	46
Force Vend	46
Bill Escrow	46
Multi Vend	47
AUDIO	47
Beeper	47
Talker	47
FREE VEND	48
CASH OPTIONS	49
Exact Change	49
Maximum Change	
ADVANCED	
Password reset	
Set defaults	53
Advanced Config	54
Language	55
Refrigeration	
Time Settings	
Elevator Set	

Record the Model Number and Serial Number of your machine below. The Model and Serial numbers are needed to obtain quick service and parts information for your machine. The numbers are available on the identification plate located on the backside of the cabinet of the machine.

MODEL NUMBER: SEF	RIAL NUMBER:
-------------------	--------------

Revision History:

Rev	<u>Date</u>	Reason
Α	07/24/16	Initial Document
В	10/04/16	Additions/Corrections
С	02/01/17	Additions/Corrections
D	02/15/18	Rename to FLEX

INTRODUCTION

This manual covers the operator accessible service mode features, options (also called "modes") settings and diagnostic/data logs.

The FLEX controller hardware utilizes a 3.5 inch screen, as a key feature visible from the outside of the vending machine. Optional hardware features include a 10" iCart touch screen.

SERVICE MODE


Use **Service Mode** to program and change settings. Use the keypad as an input device and watch the display for information while performing Service Mode functions.

SERVICE MODE BUTTON

To enter **Service Mode**, press the **Service Mode Button** located in the lower left hand corner of the control board. See figure 1. To exit Service Mode, press the Service Mode Button again or press the key 3 times.

IMPORTANT NOTES:

If no key is pressed for approximately 1 minute while in **Service Mode**, the controller will automatically return to **Sales Mode**.

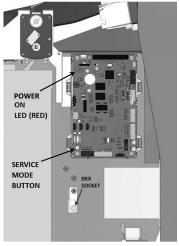


P/N 4225134 Rev. C

Figure 1 - Service Mode Button

KEYPAD


To program the vendor, use the buttons on the keypad to navigate as directed in the instructions below.

Buttons 2, **8**, **4**, **6**, **#** and ***** are used to move between the various modes, menus and submenus; 2=Move Up; 8=Move Down, 4=Move Left; 6=Move Right; **#**=Enter; *****=Go Back/Escape See Figure 2.

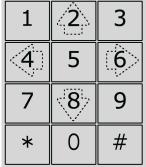

SERVICE MODE MENU

Figure 2 - Keypad

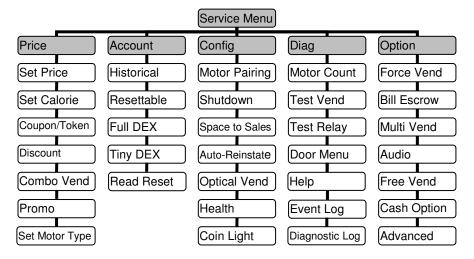

Important Note: The FLEX controller does not utilize a **TUBE FILL MODE**; the controller uses the tube amounts that are reported by the coin changer.

PRICE MENU

The **Set Price** menu allows three (3) methods for assigning prices:

- ALL ITEMS.
- · RANGE OF ITEMS.
- INDIVIDUAL ITEM

The maximum price that can be set is \$655.35.

SET PRICE ALL ITEMS

This menu allows you to set the selection price of every item in the machine at the same time.


Time Saving Tip: Use the all items option to set the most common price in the machine; then go back and set the different price of each item or row.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Set Price.	Set Price
4.	Press 6 to highlight All Items.	All Items
5.	Press # to enter.	All Items: (Current Price) *- exit # - save
6.	Use the keypad to enter the new price.	All Items: (Current Price) *- exit # - save
7.	Press # to save the new price.	DB Update in Progress Please wait
8.	Display will update to show the new price.	All Items: (New Price) *- exit
9.	Press * three times to exit.	

SET PRICE RANGE OF ITEMS

 This menu allows you to set the price of a range of items such as an entire tray at the same time.

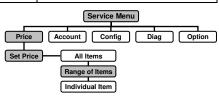

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Set Price.	Set Price
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Range of items.	Range of Items
6.	Press # to enter.	Range of Items: Enter Item Start Number *- exit # - save

7.	Enter the First Item number.	Range of Items: Enter Item Start Number XX *- exit # - save
8.	Press # to enter.	Range of Items: Enter Item End Number *- exit # - save
9.	Enter the End Number.	Range of Items: Enter Item End Number XX *- exit # - save
10.	Press # to enter.	Range of Items: (Current Price) X.XX *- exit #- save
11.	Use the keypad to enter the new price.	Range of Items: (Current Price) *- exit # - save
12.	Press # to save the new price.	DB Update in Progress Please wait
13.	Display will return to the Enter Item Start Number screen.	Range of Items: Enter Item Start Number *- exit # - save
14.	Return to step 7 to enter the next Range of Items or Press * three times to exit.	

SET PRICE INDIVIDUAL ITEM

This menu allows you to set the price of an individual item.


Service Menu			
Price Account Config Diag Option			
Set Price All Items			
Range of Items			
Individual Itam			

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Set Price.	Set Price
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Individual Item.	Individual Item
6.	Press # to enter.	Individual Item: Enter Item Number *- exit #- next
7.	Enter the Item number.	Individual Item: Enter Item Number XX *- exit #- next
8.	Press # to enter.	Individual Item: XX Enter New Price *- del/exit #- save
9.	Use the keypad to enter the new price.	Individual Item: XX Enter New Price X.XX *- del/exit #- save
10.	Press # to save the new price.	DB Update in Progress Please wait

11.	Display will return to the Enter Item Number Screen.	Individual Item: Enter Item Number *- exit #- next
12.	Return to step 7 to enter the next item to price or Press * three times to exit.	

SET CALORIE

 This menu allows you to set the nutritional information for each selection in the machine.




	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Set Calorie.	Set Calorie
4.	Press # to enter.	Calorie Menu: Enter Item Number *- exit #- Next
5.	Use the keypad to enter the selection number.	Calorie Menu: Enter Item Number XX *- exit #- Next
6.	Press # to enter.	Enter New Calorie *- del/exit #- next
7.	Use the keypad to enter the calories.	Enter New Calorie XXXX *- del/exit #- next
8.	Press # to enter.	Item # XX Set Calorie XXX
9.	Return to step 7 to enter the next Calorie Content or press three times to exit.	

COUPON/TOKEN

This mode allows you to designate the value of the coupon/token and allows you to choose the selections that will be available when the coupon/token is inserted.

ALL ITEMS

 This menu allows you to set all selections as available when the coupon/token is inserted.




	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Coupon/Token.	Coupon/Token

4.	Press 6 to highlight All Items.	All Items
5.	Press # to enter.	Coupon/Token All Items Enter Coupon #(1-5) or Token (6-10) *- exit # - save
6.	Press 1 for Coupon1 (Press corresponding number 2-5 for additional coupons or 6-10 for tokens).	Coupon All Items Enter Coupon #(1-5)/(6-10) 1 *- exit # - save
7.	Press # to enter.	Coupon All Items Enter Coupon/Token Value # *- del #- save
8.	Enter Coupon Value.	Coupon All Items Enter Coupon/Token Value # X.XX *- del #-save
9.	Press # to save.	Coupon All Selections Coupon/Token Assigned *- exit
10.	Press * three times to exit.	

RANGE OF ITEMS

 This menu allows you to set a range of items as available when the coupon/token is inserted.



	Coupon/Tok	Individual Item
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Coupon/Token.	Coupon/Token
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Range of Items.	Range of Items
6.	Press # to enter.	Coupon/Token Range of Items Enter First Selection *- exit # - next
7.	Enter Item Start Number	Coupon/Token Range of Items Enter Start Number XX *- exit # - next
8.	Press # to enter.	Coupon Range of Items Enter Last Selection XX *- del #- next
9.	Enter the last selection	Coupon Range of Items Enter Last Selection XX *- del #- next
10.	Press # to enter.	Coupon Range of Items Enter Coupon #(1-5) or Token (6-10) X *- del # - save

11.	Press 1 for Coupon1 (Press corresponding number 2-5 for additional coupons or 6-10 for tokens).	Coupon Range of Items Enter Coupon/Token #(1-5)/(6-10) 1 *- exit # - save
12.	Press # to enter.	Coupon Range of Items Enter Coupon/Token Value # *- del # - save
13.	Enter Coupon/Token Value.	Coupon Range of Items Enter Coupon/Token Value # X.XX *- del # - save
14.	Press # to save.	Coupon Range of Items Coupon/Token Assigned *- exit
15.	Press * three times to exit.	

INDIVIDUAL ITEM

This menu allows you to set individual items Price as available when a coupon/token is inserted.

Set Price Account Config

Set Price All Items
Range of Items
Individual Item

Service Menu

Diag

Option


	Coupon/Token	H (Individual Item)
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Coupon/Token.	Coupon/Token
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Individual Item.	Individual Item
6.	Press # to enter.	Coupon/Token Individual Item Enter Selection *- exit # - next
7.	Enter selection number.	Coupon Individual Item Enter Start Number XX *- exit # - next
8.	Press # to enter.	Coupon Individual Item Enter Coupon #(1-5) or Token (6-10) X *- exit # - save
9.	Press 1 for Coupon1 (Press corresponding number 2-5 for additional coupons or 6-10 for tokens).	Coupon Individual Item Enter Coupon/Token #(1-5)/(6-10) 1 *- exit # - save
10.	Enter Coupon Value.	Coupon Individual Item Enter Coupon Value # X.XX *- del # - save
11.	Press # to save.	Coupon Individual Item Coupon/Token Assigned *- exit
12.	Press * three times to exit.	

DISCOUNT

This mode allows you to set a discounted price for selections in the machine.

ALL ITEMS


This menu allows you to set the discount on all items in the machine.

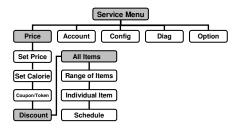

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Cash Discount.	Discount
4.	Press 6 to highlight All Items.	All Items
5.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
6.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
7.	Press # to enter.	Discount All Selections Enter Schedule #(1-6) to Activate: *- exit #- enter
8.	Press 1 for Schedule1 (Press corresponding number 2-6 for additional schedules).	Discount All Selections Enter Schedule #(1-6) to Activate: 1 *- exit #- enter
9.	Press # to enter.	Current Discount Assigned to Schedule X.XX
10.	Enter the new discount amount.	Discount All Selections Enter Discount # X.XX *- del #- save
11.	Press # to save.	Discount All Selections Schedule Updated *- exit
12.	Press * three times to exit.	

RANGE OF ITEMS

 This menu allows you to set the cash discount on a range of items, such as an entire shelf in the machine.




	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	

2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Cash Discount.	Discount
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Range of Items.	Range of Items
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press # to enter.	Discount Range of Items Enter First Selection: *- exit #- next
9.	Use the keypad to enter the first selection number.	Discount Range of Items Enter First Selection: XX *- exit #- next
10.	Press # to enter.	Discount Range of Items Enter Last Selection: *- del #- next
11.	Use the keypad to enter the last selection number.	Discount Range of Items Enter Last Selection: XX *- del #- next
12.	Press # to enter.	Discount Range of Items Enter Schedule #(1-6) to Activate: *- del # - save
13.	Press 1 for Schedule1 (Press corresponding number 2-6 for additional schedules).	Discount Range of Items Enter Schedule #(1-6) to Activate: 1 *- del # - save
14.	Press # to enter.	Current Discount Assigned to Schedule X.XX
15.	Enter the discount amount.	Discount Range of Items Enter Discount # X.XX *- exit #-save
16.	Press # to save.	Discount Range of Items Schedule Updated *- exit
17.	Return to step 8 to enter the next range of items, or Press * three times to exit.	

INDIVIDUAL ITEM

This menu allows you to set the cash discount on individual items.

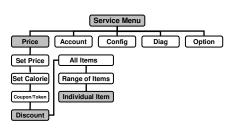

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Cash Discount.	Discount
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Individual Item.	Individual Item
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press # to enter.	Discount Individual Item Enter Selection: *- exit #- next
9.	Enter the selection number.	Discount Individual Item Enter Selection: XX *- exit #- next
10.	Press # to enter.	Discount Range of Items Enter Schedule #(1-6) to Activate: *- exit #- save
11.	Press 1 for Schedule1 (Press corresponding number 2-6 for additional schedules).	Discount Range of Items Enter Schedule #(1-6) to Activate: 1 *- exit #- save
12.	Press # to enter.	Current Discount Assigned to Schedule X.XX
13.	Enter the discount amount.	Discount Range of Items Enter Discount # X.XX *- exit #-save
14.	Press # to save.	Discount Range of Items Schedule Updated *- exit
15.	Return to step 8 to enter the selection, or Press * three times to exit.	

DISCOUNT SCHEDULE

Use this mode to set the time and days that the cash discount will be in effect.




STEP		HIGHLIGHTED
1	Press Service Mode Button.	
2	Press 4 or 6 until Price is highlighted.	Price

3.	Press 8 to highlight Cash Discount.	Cash Discount
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight schedule.	Schedule
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press # to enter.	Star End OhjOM SU MO TU WE TH FR SA
9.	Press 8 or 2 to move the arrow to the start time field of the schedule you want to edit.	Discount Schedule Settings SCH
10.	Press # to enter.	
11.	Use the keypad to enter the start time (Using 24 hour military time). This is the time you want the discount to begin.	Discount Schedule Settings SCH
12.	The arrow will automatically move to the end time after entering the start time.	
13.	Use the keypad to enter the end time (Using 24 hour military time). This is the time you want the discount to end and the machine to revert to normal pricing.	Discount Schedule Settings SCH
14.	Press # to enter.	
15.	After entering the end time the schedule will automatically be turned on.	Discount Schedule Settings Start End On/OFF SU MO TU WE TH FR SA
16.	You now need to designate which days of the week the discount will be active.	
17.	Press 6 or 4 to move the arrow to the day of the week you want the discount to be active.	Discount Schedule Settings SCH Start End On/Off SU MO TU WE TH FR SA SH1 (13500 14:30) W On/Off SU MO TU WE TH FR SA SH2 (00:00 00:000
18.	Press # to turn that day on.	Discourt Schedule Settings SCH
19.	Continue to use 6 and # to turn on any other days of the week you want the discount active.	Discount Schedule Settings SCH Start End On/Off SU MO TU WE TH FR SA SH1 [13:00] [14:30] V V V V SH2 [10:000] [10:000] [10:000] V V V V V V V V V

		Discount Schedule Settings
20.	Press * then press 8 or 2 to move the arrow to Close then press # to return to the Price menu.	Start End SCH
21	Press * three times to exit.	

COMBO VEND

This menu allows you to set multiple items to vend for one unassigned selection number and price.

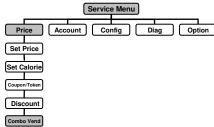


	Combo Ver	nd
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Combo Vend.	Combo Vend
4.	Press # to enter.	Combo Vend Range 1 Range 2 Range 3 Range 4 Range 5 Range 1 Range 2 Range 3 Range 4 Range 5 Range 5 Range 6 Range 6 Range 7 Range 7 Range 8 R
5.	Press 8 or 2 to move the arrow to the Item field.	
6.	Press # to enter. The row you are editing will be highlighted.	
7.	Use the keypad to enter the Item number. Note: This number must be a selection that is currently unassigned in the machine.	Combo Vend Range 1 Range 2 Range 3 Range 4 Range 5 75 0 00 to 00
8.	The arrow will automatically move to the price field.	Combo Vend Range 1 Range 2 Range 3 Range 4 Range 5 75 0

9.	Use the keypad to enter the desired price. Note: This is the price the customer will pay to receive both items	
10.	Press # to enter.	
11.	Use the keypad to enter the first range of items available when the customer selects the combo. Note: To offer a single selection for the Range you would enter the same selection number in the Range, 10 to 10 for example.	Combo Vend
12.	Use the keypad to enter the 2 nd range of items available when the customer selects the combo.	Combo Vend
13.	Use the keypad to enter the selections for Range 3, 4 and 5 if necessary, or press to end the editing of the combo selection continue on to step 14 to save the combo selection.	Towns Combo Vend
14.	Press 8 or 2 to move the arrow to save and exit.	Rem
15.	Press # to save and return to the service menu, or press the * three times to exit without saving.	

PROMO

This allows a free promotional product to be given to a customer in response to their purchase of another product.

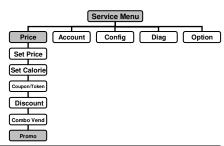

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Price is highlighted.	Price
3.	Press 8 to highlight Promo Vend.	Promo Vend


		Forter Deserved
	#	Enter Password
4.	Press # to enter.	Password ****
		#- Enter *- Exit
	Enter the password.	Enter Password
5.	(default password is 2314)	Password 2314
	(deladit password is 2014)	#- Enter *- Exit
		Promo Vend
6.	Press # to enter.	Enter Item Number
	1 1000 — 10 0 men	*- exit # - next
		Promo Vend
7.	Enter the first item number.	Enter Item Number
٧.	Litter the hist item number.	XX
		*- exit # - next
	Press # to enter.	Promo Vend
8.		
٥.	Note: The display will briefly show the	Enter 0 – OFF ,1 - ON
	current state of promo vend for the item entered.	*- exit # - save
	enterea.	D 1/ 1
	Press 1 to turn on the promo vend or press	Promo Vend
9.		Enter Coupon #(1-6)
	to turn off a previously set promo.	1
	' '	*- exit # - save
	Use the keypad to enter the free promotional	Promo Vend
10.	item number. Note: This is the selection the	Enter Promo Selection
	customer will receive for free when they	XX
	purchase the first selection.	*- exit # - next
11.	#	Promo Vend
	Press # the screen will briefly show the	XX to YY
	promo selections and status.	Promo Status ON
		*- exit
4.0	Enter the next promo vend or Press * three	
12.	Enter the next promo vend or Press three times to exit.	
	umes to exit.	

SET MOTOR TYPE

This mode allows you to designate the type of motor and sensor used for product dispensing.

ALL ITEMS

 This menu allows you to set all selections to have one type of motor sensor system.




	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Set Motor Types is highlighted.	Set Motor Types
3.	Press 6 to highlight All Items.	All Items
4.	Press # to enter.	

5.	Number on the screen corresponding to type	Press the number on the screen as to the motor type in use. *- exit # - save
6.	Press # to save.	
7.	Press * three times to exit.	

RANGE OF ITEMS

 This menu allows you to set a range of items to have one type of motor sensor system.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button .	
2.	Press 4 or 6 until Set Motor Types is highlighted.	Set Motor Types
3.	Press 6 to highlight All Items.	All Items
4.	Press 8 to highlight Range of Items.	Range of Items
6.	Press # to enter.	Range of Items Enter First Selection *- exit # - next
7.	Enter Item Start Number	Range of Items Enter Start Number XX *- exit #- next
8.	Press # to enter.	Range of Items Enter Last Selection XX *- del # - next
9.	Enter the last selection	Range of Items Enter Last Selection XX *- del #- next
10.	Number on the screen corresponding to type	Range of Items Press the number on the screen as to the motor type in use. *- exit #- save
11.	Press # to save.	Coupon Range of Items Coupon/Token Assigned *- exit
12.	Press * three times to exit.	

INDIVIDUAL ITEM

This menu allows you to set individual items to have one type of motor sensor system.



Service Menu

Option

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	

2.	Press 8 to highlight Set Motor Types.	Set Motor Types
3.	Press 6 to highlight All Items.	All Items
4.	Press 8 to highlight Individual Item.	Individual Item
5.	Press # to enter.	Individual Item Enter Selection *- exit # - next
6.	Enter selection number.	Individual Item Enter Selection Number XX *- exit # - next
7.	Number on the screen corresponding to type	Individual Item Press the number on the screen as to the motor type in use. *- exit #- save
8.	Press # to save.	Individual Item *- exit # - save

ACCOUNTING MENU

Use this menu to gain access to menus that display or reset data for various types of cash and vend totals. Counters can be viewed by individual items, rows or as the whole machine.

Historical totals: These are the counts since the initialization of the machine. They <u>cannot</u> be reset.

Resettable totals: These are totals since the last reset. These can be reset at any time.

IMPORTANT NOTE: Clearing by item or range will only clear the item or range entered.

VIEW HISTORICAL ALL ITEMS

Note: This includes satellite machines.


This menu displays the historical total sales value and total vend count for the entire machine.

Price Account Config Diag Option
Historical All Items

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Historical.	Historical
4.	Press 6 to highlight All Items.	All Items
5.	Press # to enter.	Historical Accounting All Items: 1. Total Vends: 2. Total Cash: 3. Total Card Vends: 4. Total Card Value: 5. Total 2 nd Attempts: 6. Total Bills: 7. Total Free Vends: 8. Total Cash in Tube
6.	Press * one time to return to the Account menu or three times to exit.	

VIEW HISTORICAL RANGE OF ITEMS

 
This menu displays the historical total sales value and total vend count for a range of items.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Historical.	Historical
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Range.	Range
6.	Press # to enter.	Range of Items: Enter Item Start Number *- exit
7.	Use the keypad to enter the first selection number.	Range of Items: Enter Item Start Number *- exit XX
8.	Press # to enter.	Range of Items: Enter Last Item *- del #- save
9.	Use the keypad to enter the last selection number.	Range of Items: Enter Last Item *- del #- save XX
10.	Press # to enter. The display briefly flashes the first and last item number then changes to the range of items accounting screen.	Accounting Range Items: 1. Total Vends: 2. Total Cash: 3. Total Card Vends: 4. Total Card Value: 5. Total 2nd Attempts: 6. Total Free Vends:
11.	Use the keypad to enter the next range of items then press # to enter or Press * one time to return to the Account menu or three times to exit.	

VIEW HISTORICAL INDIVIDUAL ITEM

 This menu displays the historical total sales value and total vend count by item.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account

		,
3.	Press 8 to highlight Historical.	Historical
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Item.	Item
6.	Press # to enter.	Individual Item: *- exit
7.	Use the keypad to enter the selection number.	Individual Item: XX
8.	Press # to enter. The display will show the accounting for the item entered.	Accounting Individual Items 1. Total Vends: 2. Total Cash: 3. Total Card Vends: 4. Total Card Value: 5. Total 2nd Attempts: 6. Total Free Vends:
9.	Use the keypad to enter the next selection number you would like to view then press # one time to return to the Account menu or three times to exit.	

VIEW RESETTABLE ALL ITEMS

This menu displays the resettable total sales value and total vend count for the entire machine.

Price Account Config Diag (
Historical All Items
Resettable

Service Menu

Option

Note: This includes satellite machines.

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Resettable.	Resettable
4.	Press 6 to highlight All Items.	All Items
5.	Press # to enter.	Resettable Accounting All Items: 1. Total Vends: 2. Total Cash: 3. Total Card Vends: 4. Total Card Value: 5. Total 2 nd Attempts: 6. Total Bills: 7. Total Free Vends:
6.	Press * one time to return to the Account menu or three times to exit.	

VIEW RESETTABLE RANGE OF ITEMS

STEP

This menu displays the resettable total sales value and total vend count for a range of Price items.



1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Resettable.	Resettable
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Range.	Range
6.	Press # to enter.	Resettable Acc. Range of Items: Enter First Selection *- exit #- next
7.	Use the keypad to enter the first selection number.	Resettable Acc. Range of Items: Enter Item Start Number XX *- exit #- next
8.	Press # to enter.	Resettable Acc. Range of Items: Enter Last Selection *- del #- next
9.	Use the keypad to enter the last selection number.	Resettable Acc. Range of Items: Enter Last Item XX *- del #- next
10.	Press to enter. The display briefly flashes the first and last selection number then changes to the range of items accounting screen.	Resettable Acc. Range Items: 1. Total Vends: 2. Total Cash: 3. Total Card Vends: 4. Total Card Value: 5. Total 2nd Attempts: 6. Total Free Vends:
11.	Use the keypad to enter the next range of items then press # to enter or Press * one time to return to the Account menu or three times to exit.	
		Service Menu

VIEW RESETTABLE INDIVIDUAL ITEM

This menu displays the resettable total sales value and total vend count by item.


EM	Service Menu		
Price	Account Config Diag Option Historical All Items Resettable Range		
	Item		

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Resettable.	Resettable
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Item.	Item
6.	Press # to enter.	Resettable Acc. Individual Item: *- exit #- next

		1
7.	Use the keypad to enter the selection number.	Resettable Acc. Individual Item: XX *- exit #- next
8.	Press # to enter. The display will show the accounting for the item entered.	Resettable Acc. Individual Items 1. Total Vends: 2. Total Cash: 3. Total Card Vends: 4. Total Card Value: 5. Total 2nd Attempts: 6. Total Free Vends:
9.	Use the keypad to enter the next selection number you would like to view then press or Press one time to return to the Account menu or three times to exit.	

RESET

 This menu allows you to reset the resettable counters.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Resettable.	Resettable
4.	Press 6 to highlight Reset.	Reset
5.	Press # to enter.	Reset Interval Accounting: #- enter *- exit
6.	Display will change to Reset complete	Reset completed *- exit
7.	Press * one time to return to the Account menu or three times to exit.	

FULL DEX

With the Full DEX feature turned OFF (no checkmark) the DEX download file is shortened to fields required for machine sales and active machine error messages to reduce the file size.


Service Menu		
Price Account Config Diag	Option	
Historical		
Resettable		
Full DEX 🗸		

STEP		HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Full DEX.	Full DEX

4.	Press # to enter to turn off/on the Full DEX option. Note: Check mark is on / unchecked is off.	
5.	Press * three times to exit.	

TINY DEX

 
With the Tiny DEX feature turned ON (with checkmark) the DEX download file is set to only the fields required by card reader companies. This is the smallest possible DEX read.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Full DEX.	Full DEX
4.	Press # to enter to turn off/on the Full DEX option. Note: Check mark is on / unchecked is off.	
5.	Press * three times to exit.	

READ RESET

This option allows the operator to choose whether to reset the resettable totals after a successful DEX download.

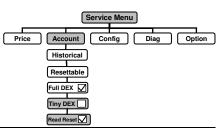

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Account is highlighted.	Account
3.	Press 8 to highlight Read Reset.	Read Reset
4.	Press # to turn off/on the Read Reset option. Note: Check mark is on / unchecked is off.	
5.	Press * three times to exit.	

CONFIGURATION MENU

MOTOR PAIRING

This function is so two adjacent motors, on the same shelf, can be run at the same time. This allows for wider items to be vended. Price Account Config Diag Option

Motor Pairing Motor Pair

Page 22

Note: Only for use in spiral machines.

<u>IMPORTANT NOTE:</u> The first motor is even, the 2nd motor must be odd. Motors 12 and 13 will turn together to vend the product. Motor 13 will need to be a motor that runs in the opposite direction from motor 12. Both motors have to be on same shelf.

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Motor Pairing.	Motor Pairing
4.	Press 6 until Motor Pair is highlighted.	Motor Pair
5.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
6.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
7.	Press # to enter, the current Motor Pairing status is displayed. Note: A previously set pair will be shown as XX-YY where XX is the first motor and YY is the second motor in the pair.	Current Motor Pairing Status 10-13,14,16,18, 20,22,24,26,28, 30,32,34,36,38 40,41,42,43,44,45,46,47,48,49 50,51,52,53,54,55,56,57,58,59 60,62,64,66,68 Press any key to continue
8.	Press any key to continue.	MOTOR PAIRING: Enter First Selection: *- exit To un-pair enter the same value for paired motor
9.	Use the keypad to enter the first selection number. Note: to un-pair a previously set paired motor selection enter the same selection number into both the first and second motor fields.	MOTOR PAIRING: Enter First Selection: XX *- exit
10.	Press # to enter.	MOTOR PAIRING: Enter the 2 nd motor number *- exit #- save
11.	Use the keypad to enter the last selection number.	MOTOR PAIRING: Enter the 2 nd motor number Press # to enter.
12.	Press # to save.	Pair XX to YY *- exit #- save
13.	Press # to save.	Paired XX to YY
14.	Return to step 7 to enter the next paired motor selections, or Press three times to exit.	

PAIR RESET

This function is used to reset all previously set pairs at one time.

Price Account Config Diag Option

Motor Pairing Motor Pair

Page 23

P/N 4225134 Rev. D

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Motor Pairing.	Motor Pairing
4.	Press 6 until Motor Pair is highlighted.	Motor Pair
5.	Press 8 to highlight Pair Reset.	Pair Reset
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press to enter, the current Motor Pairing status is displayed. Note: A previously set pair will be shown as XX-YY where XX is the first motor and YY is the second motor in the pair.	Current Motor Pairing Status 10-13,14,16,18, 20,22,24,26,28, 30,32,34,36,38 40,41,42,43,44,45,46,47,48,49 50,51,52,53,54,55,56,57,58,59 60,62,64,66,68 Press any key to continue
9.	Press any key to continue.	MOTOR PAIRING: Pairing Reset In-Progress Please wait
10.	Press # to enter.	MOTOR PAIRING: Pairing set to Default *- exit
11.	Press * three times to exit.	

SHUTDOWN-Engy

 
This option allows the controller to shut down a range of selections or the entire machine based on six (6) time-of-day intervals. If the time falls within one of these intervals and the entire machine has been selected for shutdown then the message "VENDING OPERATION TO RESUME AT hh.mm" is displayed.

If a range of selections has been chosen for shutdown that does not encompass the entire machine, the same message displays once every time the customer makes a selection that falls within the range.

IMPORTANT NOTE: The correct time and date <u>must</u> be set for the Shutdown to operate correctly.

ALL ITEMS


This menu allows you to set a shutdown for all selections in the machine at one time.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Shutdown.	Shutdown
4.	Press 6 to highlight All Items.	All Items
5.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
6.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
7.	Press to enter. Note: After pressing enter the display will briefly show any previously set up shutdowns.	Shutdown All Selections Enter Schedule #(1-6) to Activate: *- exit #- enter
8.	Press 1 for Schedule1 (Press corresponding number 2-6 for additional schedules).	Shutdown Schedule Assigned: *- exit
	Press * one time to return to the Config menu or three times to exit.	
9.	Note: In order for this shutdown to function you must set the times and choose the days of the week it will be active in the Shutdown Schedule menu (see page 24).	

RANGE OF ITEMS

 This menu allows you to set the shutdown on a range of items, such as an entire shelf in the machine




	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Shutdown.	Shutdown
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Range of Items.	Range of Items
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit

8.	Press to enter. Note: After pressing enter the display will briefly show any previously set up shutdowns.	Shutdown Range of Items: Enter First Selection: *- exit #- enter
9.	Use the keypad to enter the first selection number.	Shutdown Range of Items: Enter First Selection: XX *- exit #- enter
10.	Press # to enter.	Shutdown Range of Items: Enter Last Selection: *- del #- next
11.	Use the keypad to enter the last selection number.	Shutdown Range of Items: Enter Last Selection: XX *- del #- next
12.	Press # to enter.	Shutdown Range of Items: Enter Schedule # (1-6) to Activate: *- del #- save
13.	Press 1 for Schedule1 (Press corresponding number 2-6 for additional schedules).	Shutdown Range of Items: Enter Schedule # (1-6) to Activate: X *- del #- save
14.	Press # to save.	Shutdown Range of Items: Schedule Assigned: *- exit
	Press * one time to return to the Config menu or three times to exit.	
15.	Note: In order for this shutdown to function you must set the times and choose the days of the week it will be active in the Shutdown Schedule menu (see page 25).	

INDIVIDUAL ITEM

 This menu allows you to set the shutdown by an individual item.




	STEP	HIGHLIGHTED
1.	Press Service Mode Button .	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Shutdown.	Shutdown
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Individual Item.	Individual Item
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit

7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press to enter. Note: After pressing enter the display will briefly show any previously set up shutdowns.	Shutdown Individual Item: Enter Selection: *- exit #-Next
9.	Use the keypad to enter the selection number.	Shutdown Individual Item: Enter Selection: XX *- exit #- enter
10.	Press # to enter.	Shutdown Individual Item: Enter Schedule # (1-6) to Activate: *- exit #- save
11.	Press 1 for Schedule1 (Press corresponding number 2-6 for additional schedules).	Shutdown Individual Item: Enter Schedule # (1-6) to Activate: X *- del #- save
12.	Press # to save.	Shutdown Individual Item: Schedule Assigned: *- exit
	Press * one time to return to the Config menu or three times to exit.	
13.	Note: In order for this shutdown to function you must set the times and choose the days of the week it will be active in the Shutdown Schedule menu (see page 25).	

SHUTDOWN SCHEDULE

 This menu allows you to set the time of day and the days of the week the machine will be shutdown.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button .	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Shutdown.	Shutdown
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight schedule.	Schedule
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit

8.	Press # to enter.	Shatown Interval Settings Light Chapter Chapter
9.	Press 8 or 2 to move the arrow to the start time field of the schedule you want to edit.	Shutdown Interval Settings Light Ou/Ort SU MO TU WE TH FR SA SD1 10000 100
10.	Press # to enter.	
11.	Use the keypad to enter the start time (Using 24 hour military time). This is the time you want the shutdown to begin.	Shutdown Internal Settings
12.	The arrow will automatically move to the end time after entering the start time.	
13.	Use the keypad to enter the end time (Using 24 hour military time). This is the time you want the discount to end and the machine revert to normal pricing.	Shutdown Interval Settings Light Start End On/Orf SU MO TU WE TH FR SA SD1 08:00 16:00
14.	Press 6 to move to the Light On/Off field.	Shutdown Internal Settings Start End On/Orf SU MO TU WE TH FR SA SD1 00:00 00:00 O0:00 O0:
15.	This field allows you to turn the lights off when the shutdown is active. Press # to turn on/off the lights. Note: Check Mark = lights will turn off. No check mark = lights will stay on.	Shutdown Interval Settings Light
16.	Press 6 or 4 to move the arrow to the day of the week you want the shutdown to be active.	Shutdown Interval Settings
17.	Press # to turn that day on.	Start End On/OFF SU MO TU WE TH FR SA On/OFF SU MO TU WE TH FR SA SD1 00:0000
18.	Continue to use 6 and # to turn on/off any the other days of the week.	Shutbown Interval Settings Light Only Only

19.	Press * then press 8 or 2 to move the arrow to Close, press # to return to the Config menu.	Shutdown Interval Settings Light On/OFF SU MO TU WE TH FR SA
20.	Press * three times to exit.	
Use	this menu to reset all previously set down schedules.	Service Menu Account Config Diag Option Motor Pairing All Range of Items Individual item Schedule Reset Schedule
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Shutdown.	Shutdown
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight schedule.	Schedule
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press # to enter. The display will scroll through the previously assigned schedules.	Reset Schedule Item: Enter Schedule # *- exit #- next
9.	Use the keypad to enter the Schedule number you want to reset.	Reset Schedule Item: Enter Schedule # XX *- exit #- next
10.	Press # to enter.	DB Update in Progress
	Enter the next Cahadula you would like to recat	

SPACE TO SALES

or Press

to the Config menu or three times to exit.

Space to sales allows you to program two or more selections to operate as one in an alternating method i.e. each selection will vend in sequence in a FiFo fashion

one time to return

ALL ITEMS

Press

Press

Press

Press

1. 2.

3.

4.

5.


This menu allows you to set all selections in the machine to operate in a space to sales manner.

Press Service Mode Button.

to enter.

STEP

to highlight All Items.

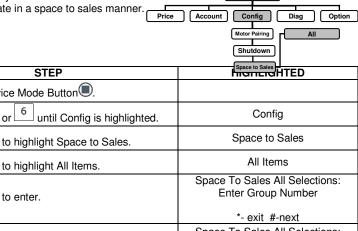

Service Menu

6.	Use the keypad to enter the group number. Note: The group number will be the first selection number in the STS group.	Space To Sales All Selections: Enter Group Number XX *- exit #- next
7.	Press # to enter.	Space To Sales All Selections: XX *- exit #- save
8.	Press # to save.	Space to Sales All Selections Assigned to: # XX

one time to return to the Config 9. menu or three times to exit.

RANGE OF ITEMS

This menu allows you to set a range of selections, such as an entire tray to operate in a space to sales manner.

Service Menu			
Price	Account Co	nfig Diag Option	
	Shu	Pairing All I I I I I I I I I I I I I I I I I I	

XX *- exit

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Space to Sales.	Space to Sales
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Range of Items.	Range of Items
6.	Press # to enter.	STS Range of Items: Enter Group Number
		*- exit #-next

7.	Use the keypad to enter the group number. Note: The group number will be the first selection number in the STS group.	STS Range of Items: Enter Group Number XX *- exit #- next
8.	Press # to enter.	STS Range of Items: Enter Last Selection *- exit #- next
9.	Use the keypad to enter the last selection.	STS Range of Items: Enter Last Selection XX *- del #- save
10.	Press # to save.	STS Range of Items: Assigned to: # XX *- exit
11.	Use the keypad to enter the next STS Group or Press * one time to return to the Config menu or three times to exit.	

INDIVIDUAL ITEM

This menu allows you to set individual items to operate in a space to sales manner.


Service Menu			
Motor	Diag Option Pairing All down Range of Items to Sales Individual item		

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Space to Sales.	Space to Sales
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Individual Item.	Individual Item
6.	Press # to enter.	STS Individual Item: Enter Group Number *- exit #-next
7.	Use the keypad to enter the group number. Note: The group number will be the first selection number in the STS group.	STS Individual Item: Enter Group Number XX *- exit #- next
8.	Press # to enter.	STS Individual Item: Enter STS Selection *- exit #- next

9.	Use the keypad to enter the STS selection.	STS Individual Item: Enter STS Selection XX *- del #- save
10.	Press # to save.	Space to Sales All Selections Assigned to: # XX *- exit
11.	Use the keypad to enter the next STS selection, or Press one time to return to the Config menu or three times to exit.	

RESET STS SCHEDULE

This menu allows you to reset any previously set Space to Sales selection's back to their normal individual operation.

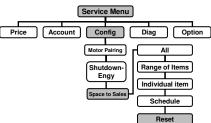


		Reset
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Space to Sales.	Space to Sales
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Reset.	Reset
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press # to enter.	Reset STS: Enter Group Number Removes Space To Sale from Selection *- exit #-next
9.	Use the keypad to enter the STS Group number to reset.	Reset STS: Enter Group Number XX Removes Space To Sale from Selection *- exit #-next
10.	Press # to enter. Note: The display will show the STS selections you are resetting then switch to DB Update in Progress.	DB Update in Progress
11.	Enter the next STS Group you would like to reset and press # or Press * one time to return to the Config menu or three times to exit.	

AUTO REINSTATE

Normally, when an empty selection is detected during an attempted vend, that selection is recorded as inoperative and requires resetting before it can be vended again.

 A selection reset with Auto-Reinstatement OFF (Box un-checked) requires a door switch to open or to go into the controller Service Mode. Programming the machine with **Auto-Reinstatement** ON (Box Checked) eliminates the necessity of manually resetting the controller after re-loading a selection that is in a **Sold Out** condition.




	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Auto Reinstate.	Auto Reinstate ☑
	Press # to turn ON/OFF.	
4.	On = Check mark. Off = No check mark.	Auto Reinstate ☑
5.	Press * one time to return to the Config menu or three times to exit.	

Sensor Settings

Optical Sensor Control Options (iVend) - This submenu provides the operator with options for designating product items or rows that are monitored for product delivery by an optical sensor. Default is ALL selections "ON" unless changed.

ALL OPTICS

Use this menu to set the optics on/off for all items at the same time.

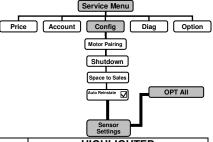


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Optical Vend.	Optical Vend
4.	Press 6 to highlight All Items.	All Items
5.	Press # to enter. The Current setting is displayed.	All Items (Current Setting) XX 3- edit *-next

		All Items (New Setting)
6.	Press 3 to turn On/Off.	XX Press 3 to toggle ON/OFF 3- edit *-next
7.	Press # to save.	DB Update in Progress
		Please wait
		All Items (New Setting)
8.	Press * one time to return to the Config menu or three times to exit.	XX Press 3 to toggle ON/OFF *- exit #- save

RANGE OF OPTICS


Use this menu to set the optics on/off for a range of items, such as an entire tray at the same time.

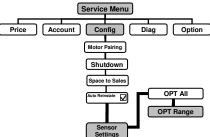

	OTED	Settings
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Optical Vend.	Optical Vend
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Range of Items.	Range of Items
6.	Press # to enter.	Optical Vend Range of Items: Enter First Selection
7.	Use the keypad to enter the group number.	*- exit #-next Optical Vend Range of Items: Enter First Selection XX *- exit #- next
8.	Press # to enter.	Range of Items: Enter Last Selection *- exit #- next
9.	Use the keypad to enter the last selection.	Range of Items: Enter Last Selection XX *- del #- save
10.	Press # to save.	Range of Items: Assigned to: # XX *- exit
11.	Press * one time to return to the Config menu or three times to exit.	

INDIVIDUAL OPTICS


Use this menu to set the optics on/off for individual items.

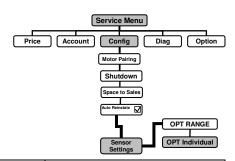

	STEP	HIGHLIGHTED
1.	Press Service Mode Button .	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Optical Vend.	Optical Vend
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Individual Item.	Individual Item
6.	Press # to enter.	Optical Vend Individual Item: Enter Selection *- exit #-next
7.	Use the keypad to enter the selection number.	Optical Vend Individual Item: Enter Selection XX *- exit #- next
8.	Press # to save.	Optical Vend Individual Item Assigned to: # XX *- exit
9.	Use the keypad to enter the next Optical Vend selection, or Press * one time to return to the Config menu or three times to exit.	

FAIL OOS

When this option is turned on the entire machine will go out of service if the controller believes there is a problem with the iVend system.

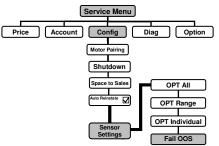


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Optical Vend.	Optical Vend

4.	Press 6 to highlight All Items.	All Items	
5.	Press 8 to highlight Fail OOS.	Fail OOS	
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit	
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit	
8.	Press # to enter. The current state On/Off will be displayed.	Optical Sensor Fail Out Of Service (Current Setting) XXX	
		3- edit *- exit	
		Optical Sensor Fail Out Of Service (Current Setting)	
9.	Press 3 to toggle On/Off.	XXX	
0.	Press to toggle On/Off.	Press 3 to toggle ON/OFF	
		*- exit #- save	
		Optical Sensor Fail Out Of Service (Current Setting)	
10.	Press * one time to return to the Config	XXX	
	menu or three times to exit.	Press 3 to toggle ON/OFF	
		*- exit #- save	

VIBE SETTINGS

When this option is turned on the entire machine will go out of service if the controller believes there is a problem with the iVend system.

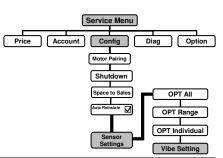


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Optical Vend.	Sensor Setting
4.	Press 6 to highlight All Items.	All Items
5.	Press 8 to highlight Fail OOS.	Vibe Setting
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit

7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press # to enter a different setting.	Vibration Call Setting ###
		*- exit #- next Vibration Call Setting XXX
9.	Press * to exit.	Press 3 to toggle ON/OFF *- exit #- save

COIN LIGHT

Use this menu to change the color of the optional lighting around the user interface area.

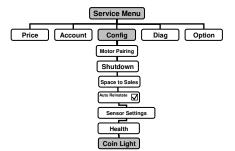


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Config is highlighted.	Config
3.	Press 8 to highlight Coin Light.	Coin Light
4.	Press # to enter.	Coin Light Color Blue Green White Red Off
5.	Press 8 to move the arrow to the color you would like the Coin Light to be.	Coin Light Color Blue Green White Red Off

6.	Press # to select it (check mark). Note: any previously selected color will automatically be turned off when you select a new color.	Coin Light Color Blue Green White Red Off	
7.	Press * one time to return to the Config menu or three times to exit.		

DIAGNOSTIC MENU

MOTOR COUNT

 Use this menu to count and instate the motors in the machine.




	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Motor Count.	Motor Count
4.	Press # to enter. The current Motor Count will be shown	Current Motor Count XX
5.	The display will then show the Current Motor Status. The motors that are present in the machine will be green while the motors that are not in the machine will be grey.	10,11,12,13,14,15,16,17,18,19, 20,21,22,23,24,25,26,27,28,29, 30,31,32,33,34,35,36,37,38,39, 40,41,42,43,44,45,46,47,48,49, 50,51,52,53,54,55,56,57,58,59, 60,61,62,63,64,65,66,67,68,69,
6.	Press # to run a new Motor Count.	Current Motor Count XX
7.	The controller will count the motors, display DB update in progress then display the new motor count.	Motor Count XX Coin Return Motor Present *- Exit
8.	Press * one time to return to the Diag menu or three times to exit.	

TEST VEND

ALL ITEMS

 Use this menu to test vend all motors in the machine. The selection number displays with the test vend. If a test vend attempt on a particular motor fails, the controller will beep 3 times*.




*The beeper must be turned on in the option menu.

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Test Vend.	Test Vend
4.	Press 4 to highlight All Items.	All Items
5.	Press # to enter. The controller will run each motor in the machine starting with the left most motor on the top shelf. Note: Press * at any time to stop the test and return to the Diag Menu.	Test Vend All Selections Testing Selection # XX *- exit #- next
6.	Press * one time to return to the Diag menu or three times to exit.	

RANGE OF ITEMS

 Use this menu to test vend a range of motors. The selection number displays with the test vend. If a test vend attempt on a particular motor fails, the controller will beep 3 times*.



* The beeper must be turned on in the option menu.

	oren	LUCULIOUTED
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Test Vend.	Test Vend
4.	Press 4 to highlight All Items.	All Items
5.	Press 8 to highlight Range.	Range
6.	Press # to enter.	Test Vend Range of Items: Enter First Selection
		*- exit #-next
7.	Use the keypad to enter the first selection to test.	Test Vend Range of Items: Enter First Selection XX *- exit #- next
8.	Press # to enter.	Range of Items: Enter Last Selection
<u></u>		*- del #- save
9.	Use the keypad to enter the last selection to test.	Range of Items: Enter Last Selection XX
		*- del #- save

10.	Press # to save.	Testing Selection # XX
11.	Press * one time to return to the Diag menu or three times to exit.	

INDIVIDUAL ITEM

Use this menu to test vend individual motors. The selection number displays with the test vend. If a test vend attempt on a particular motor fails, the controller will beep 3 times*.

Price Account Config Diag Option

All Items Motor Count

Range Test Vend

Individual

* The beeper must be turned on in the option menu.

optiv	on menu.	
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Test Vend.	Test Vend
4.	Press 4 to highlight All Items.	All Items
5.	Press 8 to highlight Individual.	Individual
6.	Press # to enter.	Test Vend Individual Item: Enter Selection
7.	Use the keypad to enter the selection to test.	*- exit #-next Test Vend Range of Items: Enter First Selection XX *- exit #- next
8.	Press # to test.	Testing Selection # XX
9.	Press * one time to return to the Diag menu or three times to exit.	

TEST RELAY

This menu provides functions that allow the operator to test the operation of the individual relay lines 1 through 6.

Service Menu					
Price	Account	Config	Diag	Option	
			Motor Count		
			Test Vend		
			Test Relay		

Relay	1	_	TBA
Relay	2	_	TBA
Relay	3	_	TBA
Relay	4	_	TBA
Relay	5	_	TBA

Relay 6 - TBA


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Test Relay.	Test Relay
4.	Press # to enter.	Relay 1
5.	Press 2 or 8 to move the arrow to the relay you would like to test.	Test Relay Relay 1 Relay 2 Relay 5 Relay 3 Relay 6
6.	Press # to turn the relay on/off. Check mark = on No check mark = off	Test Relay Relay 1 Relay 2 Relay 3 Relay 6
7.	When finished testing the relays press or to move the arrow to close and press to return to the Diag menu.	Test Relay Relay 4 Relay 2 Relay 5 Relay 3 Relay 6

DOOR MENU

Use this menu to show errors, home motors or to alert you when the door is open.

MOTOR HOMING

 With this feature set to ON every time the door of the machine is opened all motors not in the home position will be moved to the home position. This feature requires the machine to have a door switch installed. To purchase a door switch assembly please contact Vendnet Parts by phone at 1-800-833-4411.



SHOW ERRORS

With this feature set to ON every time the door of the machine is opened any errors present in the log will be shown on the display screen.

DOOR ALERT

With this feature set to ON every time the door of the machine is left open for 30 minutes an alert will sound.


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Door Menu.	Door Menu
4.	Press # to enter.	On Door Open Motor Homing Show Errors Door Alert
5.	Press 2 or 8 to move the arrow to the option you would like to turn on/off.	On Door Open Motor Homing Show Errors Door Alert
6.	Press # to turn the option on/off. Check mark = on No check mark = off	On Door Open Motor Homing Show Errors Door Alert
7.	Press * one time to return to the Diag menu or three times to exit.	

HELP MENU

Use this menu to find out the software version of the controller, set the Location and Asset number.

ABOUT


Use this menu to display the software version loaded on the controller.

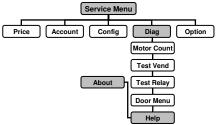

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Help.	Help
4.	Press 4 to highlight About.	About
5.	Press # to enter. Note: The information shown on your controller may be different than the example shown.	About Evoke Controller Evoke 1.0 Controller SW Ver. 1183 WTN12345678912345678 Rev Date: July 19 4016 06:25:44 (c) 2015-2016 Wittem www.wittem.com 3.5 inch Disp Model
6.	Press * one time to return to the Diag menu or three times to exit.	

LOCATION

Use this menu to set the location number.

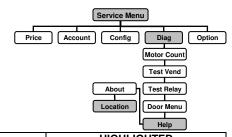


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Help.	Help
4.	Press 4 to highlight About.	About
5.	Press 8 to highlight Location.	Location

		Asset Location
6.	Press to enter. The current Asset Location	x
	number is displayed.	* '' "
		*- exit #- edit Enter Location Code:
		Enter Essation Sode.
7.	Press # to enter.	
		*- exit #- save
		Enter Location Code:
8.	Use the keypad to enter in the location id up to 30 digits.	xxxxx
		*- exit #- save
9.	Press # to save.	Location Code: (New) XXXXX *- exit
10.	Press * one time to return to the Diag menu or three times to exit.	

ASSET NUMBER

 Use this menu to set the Asset number of the machine.




		Asset Help
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Help.	Help
4.	Press 4 to highlight About.	About
5.	Press 8 to highlight Asset.	Asset
		Asset Number (Current)
6.	Press # to enter. The current Asset number is displayed.	Х
		*- exit #- edit
		Enter Asset Number:
7.	Press # to enter.	
		*- exit #- save
		Enter Asset Number:
8.	Use the keypad to enter the Asset number up to 20 digits.	xxxxx
		*- exit #- save

9.	Press # to save.	Asset Number: (New) XXXXX *- exit
10.	Press * one time to return to the Diag menu or three times to exit.	

EVENT LOG


Use this menu to view the event log.

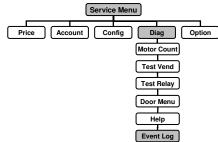

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Event Log.	Event Log
4.	Press # to enter.	The last 50 events will be shown.
5.	Press 8 or 2 to scroll through the events.	
6.	Press * one time to return to the Diag menu or three times to exit.	

DIAG LOG

Use this menu to view the Diagnostic log.

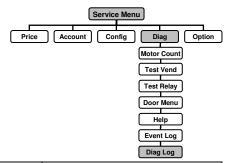

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Diag is highlighted.	Diag
3.	Press 8 to highlight Diag Log.	Diag Log
4.	Press # to enter.	The last 50 events will be shown.

5.	Press 8 or 2 to scroll through the events.	
6.	Press * one time to return to the Diag menu or three times to exit.	

OPTION MENU

This option forces the customer to complete a purchase/take one vend once they have deposited money of any form.

Service Menu

Price Account Config Diag Option

Force Vend

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Force Vend.	Force Vend
	Press # to turn Force Vend ON/OFF.	
4.	On = Check mark. Off = No check mark.	Force Vend ☑
5.	Press * three times to exit.	

Price

Account

Service Menu

Config

Diag

Bill Escrow 🗸

BILL ESCROW

This option allows the last bill accepted to be returned, provided the bill acceptor is capable of such a feature.


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Bill Escrow.	Bill Escrow □
4.	Press # to turn Bill Escrow ON/OFF.	
	On = Check mark. Off = No check mark.	Bill Escrow ☑
5.	Press * three times to exit.	

MULTI VEND

This option allows the customer to purchase more than one product if enough credit has been deposited.

When this option is active, any credit remaining after a vend attempt is **not** automatically returned. At this point, the customer has the option of:

 - Making another selection if there's enough credit.
- Depositing more money (cash credit from a changer or bill acceptor); or
- Pressing coin return to return remaining credit.



	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Multi Vend.	Multi Vend □
	Press # to turn Multi Vend ON/OFF.	
4.	On = Check mark. Off = No check mark.	Multi Vend ☑
5.	Press * three times to exit.	

AUDIO

 
Use this option to control the beeper and the optional talker unit.

BEEPER

Use this option to choose whether a sound is heard when keypad buttons are pressed.

TALKER

The optional talker assists the vision impaired to service the machine. A special device must be hooked up to the machine and this option must be turned on in order for it to work To purchase a talker unit please contact Vendnet parts by phone at 1-800-833-4411.




	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Audio.	Audio

4.	Press # to enter.	Audio Settings Beeper ON OFF Talker ON OFF
5.	Press 8 to move between Beeper and Talker.	Audio Settings Beeper ON/OFF Talker ON/OFF Ok
6.	Press to turn the option selected ON/Off. Check mark = on No check mark = off	Audio Settings Beeper ON OFF Talker ON OFF
7.	Press 8 to move arrow to OK to return to the Option menu.	Audio Settings Beeper ON OFF Talker ON OFF
8.	Press * three times to exit.	

FREE VEND

This option allows you to set the <u>whole</u> <u>machine</u> to Free Vend. With Free Vend On, every product is vended at no cost, no money will be accepted and the message "FREE ON US" will be displayed when a selection is made.

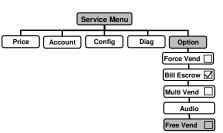


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Free Vend.	Free Vend □
4.	Press # to enter.	Enter Password Password **** #- Enter *- Exit

5.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
6.	Press # to enter and turn Free Vend ON/OFF. On = Check mark. Off = No check mark.	Free Vend ☑
7.	Press * three times to exit.	


Cash Options

EXACT CHANGE

Sets the coin tube value that will trigger the display of the "Please Use Exact Change" message. Example: If Exact Change is set to \$5.00. The "Please Use Exact Change" message will come on when the total of change available (nickels, dimes and quarters) in the coin tubes is at or below \$5.00.

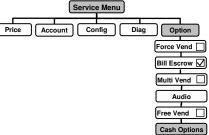


		Cash Options
	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Change (M/E).	Cash Options
4.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
5.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
6.	Press # to enter.	Max - Exact Change Exact Change: 000,00 Max Change: 000,00 Max Change ON/OFF Close
7.	The arrow should be on Exact Change, if not press 8 to move the arrow to Exact Change.	

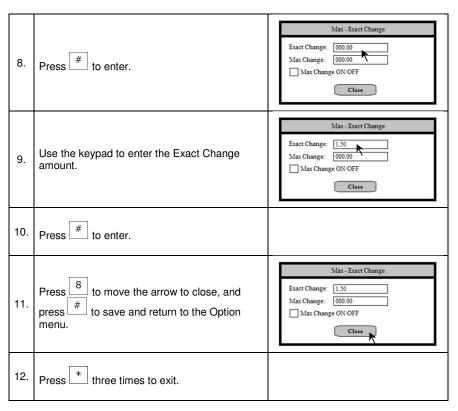


MAXIMUM CHANGE

This option prevents change from being returned to the customer until the amount of (credit has been reduced to a value less than or equal to the programmed maximum change limit.

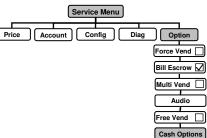


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Change (M/E).	Cash Options
4.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
5.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit

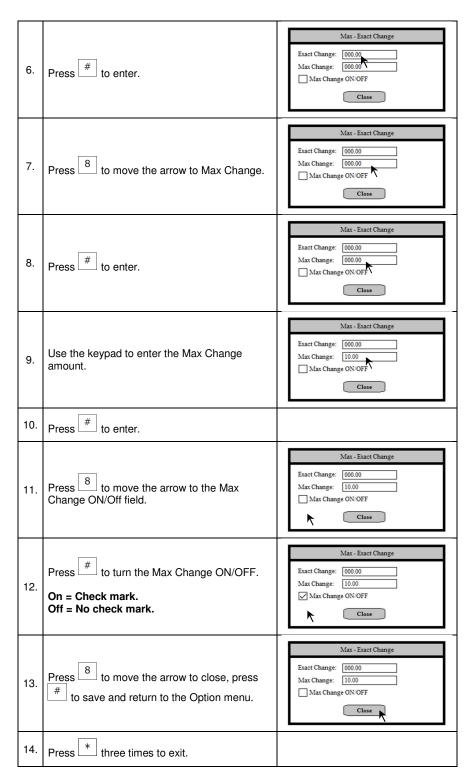

ADVANCED

PASSWORD RESET

Use this menu to change the password. **Note: default password is 2314.**

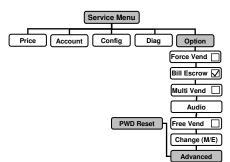


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Advanced	Advanced
4.	Press 4 to highlight Password Reset.	PWD Reset
5.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
6.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
7.	Press # to enter.	Password Change Mode Enter New Password
8.	Use the keypad to enter the new password,	Enter Password XXXX
9.	Press # to save the new password.	New Password is set to XXXX *- exit
10.	Press * one time to return to the Option menu or three times to exit.	

SET DEFAULTS

Use these steps to reset the defaults.

IMPORTANT NOTE:


If you have previously changed your password, this will reset it back to the factory default of 2314

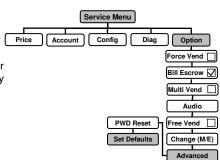

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Advanced	Advanced
4.	Press 4 to highlight Password Reset.	PWD Reset
5.	Press 8 to highlight Set Defaults	Set Defaults
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Press # to enter.	System Restore Mode: All database will be deleted *- exit #- next
9.	Press # to enter.	System Restore in Progress Please Wait
10.	When complete screen will change to.	System reset to default state *- exit
11.	Press * one time to return to the Option menu or three times to exit.	

ADVANCED CONFIGURATION


Use these steps access advanced features.

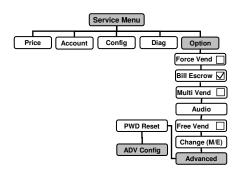

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Advanced	Advanced
4.	Press 4 to highlight Password Reset.	ADV Config
5.	Press 8 to highlight Set Defaults	Set Defaults
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Choose Preferred Selection digit #	Selection Digit # 2 3 4 Display Off Promo Coin/Cash
9.	Change other settings if needed.	
10.	Press * one time to return to the Option menu or three times to exit.	

LANGUAGE


Use these steps to change language.

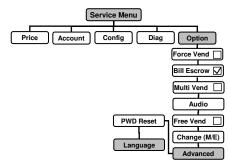

	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Advanced	Advanced
4.	Press 4 to highlight Password Reset.	PWD Reset
5.	Press 8 to highlight Set Defaults	Language
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Choose Preferred Language	English - NA English - UK Spansh – Castillian Spanish – Latin American French – Canadian
10.	Press * one time to return to the Option menu or three times to exit.	

REFRIGERATION


Use these steps to change refrigeration settings.

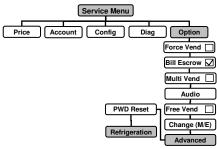


	STEP	HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Advanced	Advanced
4.	Press 4 to highlight Password Reset.	PWD Reset
5.	Press 8 to highlight Set Defaults	Refrigeration
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Customize cooler settings.	Cold Cold Food SZ Cold Food DZ Cold Food SZ Frozen DZ Frozen DZ Frozen UZ Temp [99]
10.	Press * one time to return to the Option menu or three times to exit.	

TIME SETTINGS

Use this menu to set the time and date.

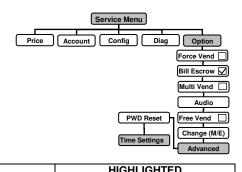


	STEP	HIGHLIGHTED	
1.	Press Service Mode Button.		
2.	Press 4 or 6 until Config is highlighted.	Config	
3.	Press 8 to highlight Time Settings.	Time Settings	
4.	Press # to enter.	Time & Date Settings Time HH:MM Date MM/DD/YYYY Display Time 24Hr Mode Close	
5.	Press to highlight the time field. Note: Time settings are in 24 hour military time.	Time & Date Settings Time HH:MM	
6.	Use the keypad to enter in the hours and minutes, using 24 hour military time.	Time & Date Settings Time 13:10	
7.	Press to save the new setting. The arrow will automatically move to the date field.	Time & Date Settings Time 13:10 Date MM/DD/YYYY	
8.	Press # to highlight the date field.	Time & Date Settings Time 13:10 Date MM/DD/YYY	
9.	Use the keypad to enter in the month, day and year.	Time & Date Settings Time 13:10 Date 07/14/2016	
10.	Press # to save the new setting. The arrow will move to the Display Time box.	Time & Date Settings Time 13:10	

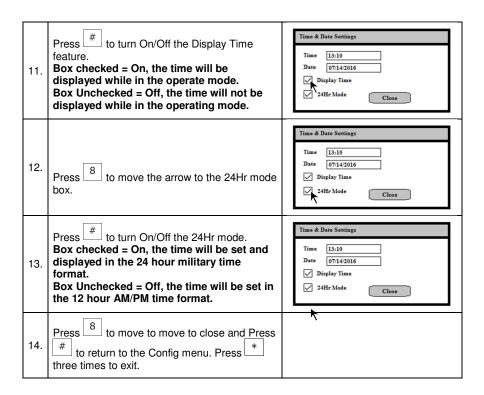

ELEVATOR

Use these steps to change Elevator settings.

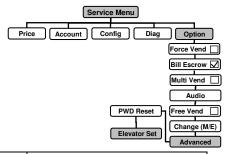

STEP		HIGHLIGHTED
1.	Press Service Mode Button.	
2.	Press 4 or 6 until Option is highlighted.	Option
3.	Press 8 to highlight Advanced	Advanced
4.	Press 4 to highlight Password Reset.	PWD Reset

5.	Press 8 to highlight Set Defaults	Elevator Set
6.	Press # to enter.	Enter Password Password **** #- Enter *- Exit
7.	Enter the password. (default password is 2314)	Enter Password Password 2314 #- Enter *- Exit
8.	Customize Elevator settings.	Enable/Disable RESET BAFFLE OUT STANDBY BAFFLE IN PARK VEND Go To Tray# [###]
10.	Press * one time to return to the Option menu or three times to exit.	

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.



VendNetTM

165 North 10th Street Waukee, Iowa 50263 United States of America



	USA & Canada	International
Service	(800) 833-4411	+1 515 274-3641
Parts	(888) 259-9965	
Email	vendnet@vendnetusa.com www.vendnetusa.com	
Web Site		