

euoo

## Rechargeable Hair Clipper

Model Code: EFM-1010RHC



## USER MANUAL

Important: Please read before use and keep this for future reference.

## **FEATURES:**

- Dual sharpened blades for a faster cut
- Advance trimming function
- Adjustable clipping combs: 3mm to 30mm for a precise cut
- Charging Time: 8 hours (initial charge of 12 hours)
- Running Time: 60minutes

## **SPECIFICATIONS:**

- Voltage: 220V ~ 60hz

## **ELECTROMAGNETIC FIELDS (EMF):**

This EUROO appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## **HOW TO USE:**

The hair length settings are indicated in millimeters, the comb cuts the hair to a length of 3mm to 30mm. The settings correspond to the remaining hair length after cutting.

Be careful when you trim your hair for the first time. Do not move the trimmer too fast. Make smooth and gentle strokes while trimming.

*Tip: Start trimming at a high length setting and reduce the*

*length setting gradually until you have reached your desired hair length.*

### Switching the appliance on and off

- To switch on/off the appliance, slide the power button.

### Trimming with a Comb

- Attach the comb onto the appliance.
- Slide the taper level to the desired length setting.
- To trim most effectively, move the trimmer against the hair growth direction. Make sure the surface of the comb always stays in contact with the skin.

### Trimming without a Comb

You can use the appliance without the comb to contour your beard, mustache, sideburns, or neckline to a length of 0.5mm.

*Tip: Be careful when you trim without a comb because the cutting elements remove every hair it touches.*

- Slide the comb off the appliance.
- Switch on the appliance.
- Make well-controlled movements. Touch the hair lightly with the trimmer.

### Charging

- Insert the power supply adaptor into the appliance and plug into a power supply.
- When the appliance has been charged for 8

hours, it has a cordless operating time of up to 60 minutes.

### Cleaning and Maintenance

- Never use scouring pads, abrasive cleaning agents, or alcohol to clean the appliance.
- Clean the cutting element with the brush provided. Do not wipe the cutting element with a cotton towel, as this may damage the blades.

### TROUBLESHOOTING:

| <b>Problem</b>                                   | <b>Possible Cause</b>   | <b>Solution</b>  |
|--|---|--|
| The appliance produces an uneven cutting result. | <ul style="list-style-type: none"><li>• The comb does not touch the skin when you move the appliance through the hair.</li><li>• The setting of the comb has changed during trimming.</li></ul> | <ul style="list-style-type: none"><li>• Make sure the comb is always fully in contact with the skin when you move the appliance through the hair.</li><li>• Check the setting of the comb. If you push the appliance too hard onto the scalp, you may accidentally change the setting.</li></ul> |

|   |   |   |
|---|---|---|
| <p>The appliance makes a strange noise.</p> | <p>The attachment is not assembled correctly.</p> | <ul style="list-style-type: none"><li>• Detach the attachment and reattach it.</li><li>• Clean the shaving heads and hair chamber thoroughly before you continue.</li></ul> |
|---|---|---|

### **IMPORTANT:**

1. Always turn off this appliance immediately after use.
2. This appliance is not washable. Never immerse in water and do not rinse it under the tap. Only use this appliance for its intended purpose as shown in the user manual.
3. For hygienic reasons, the appliance should only be used by one person.
4. To charge the battery, only use the detachable supply unit provided with the appliance.
5. Do not open the appliance to replace the rechargeable battery.

### **WARNING:**

- This appliance is not intended for use by a person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

- To avoid risk, the appliance must be repaired or replaced by EUROO's authorized service center if it is not working properly.

## RECYCLING:



This symbol means that this product shall not be disposed of with normal household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote sustainable re-use of material resources.



[www.eurooglobal.com](http://www.eurooglobal.com)  
FB/IG: euroo.ph/eurooglobal