 


8-INCH MINI CHAINSAW

User Manual

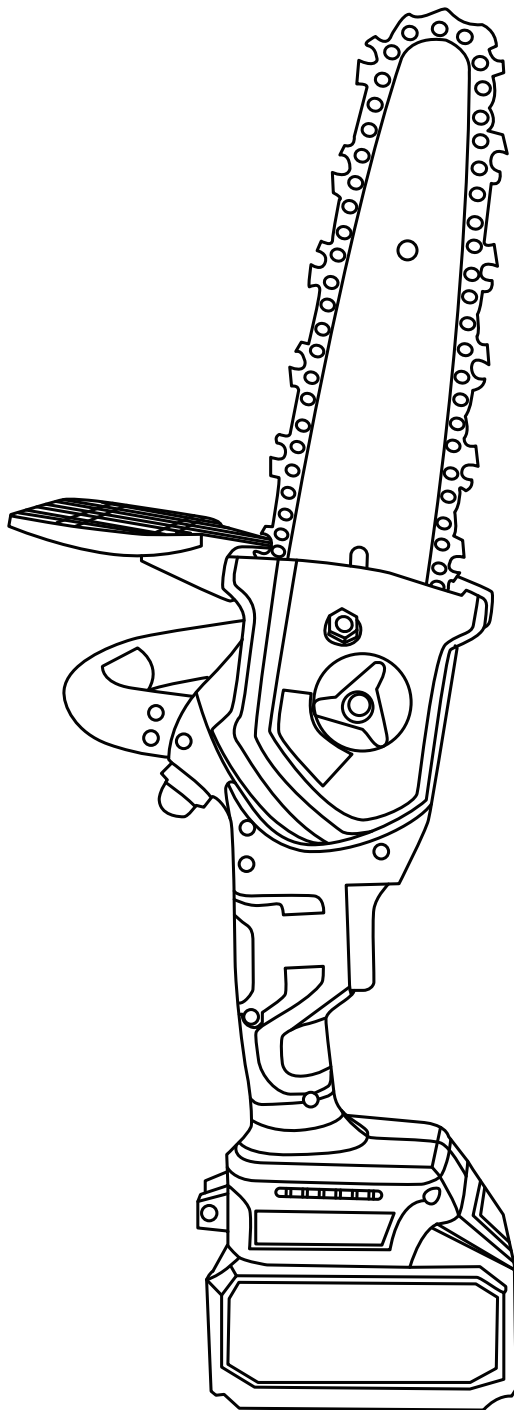

Read all safety rules and instructions carefully before operating this tool.

General Power Tool Safety Warnings

WARNING!

Read and understand all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated(cordless) power tool.

1. Work area safety

- a. Keep work area clean and well lit. Cluttered or dark areas may lead to accidents.
- b. Do not operate the chainsaw in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Sparks created by the chainsaw may ignite dust or fumes.
- c. Keep children and bystanders away while operating a chainsaw. Distractions can cause you to lose control.

2. Electrical safety

- a. Chainsaw plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (ground-ed) power tools. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- b. Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c. Do not expose the chainsaw to rain or wet conditions. Water entering power tool will increase the risk of electric shock.
- d. Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the chainsaw. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e. If operating the chainsaw in a damp location is unavoidable,

use a residual current device (RCD) protected supply to reduce risk of electric shock.

3. Personal safety

- a. Stay alert, watch what you are doing and use common sense when operating a chainsaw. Do not use the chainsaw while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating chainsaw may result in serious injury.
- b. Use personal protective equipment. Always wear eye protection, protective equipment such as dust mask, non-skid safety shoes, helmet, or hearing protection used for appropriate conditions will reduce personal injuries.
- c. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the chainsaw.
- d. Remove any adjusting key or wrench before turning the chainsaw on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e. Do not overreach while using. Keep proper footing and balance at all times. This enables better control of the chainsaw in unexpected situations.
- f. Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.

4. Chainsaw use and care

- a. Do not forced use the chainsaw. Apply the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- b. Do not use the chainsaw if the switch can not be turned on and off. Any chainsaw that cannot be controlled with the switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source and/or the battery pack from the chainsaw before making any adjustments, changing accessories, or storing chainsaw. Such preventive safety measures reduce the risk of unexpected start.

 
- d. Store idle chainsaw out of the reach of children. Do not allow persons unfamiliar with the chainsaw or these instructions to operate the chainsaw. Chainsaws are dangerous in the hands of untrained users.
- e. Maintain chainsaw. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the chainsaw's operation. If damaged, have the chainsaw repaired before use. Many accidents are caused by poorly maintained chainsaws.
- f. Keep cutting tools sharp and clean. Properly maintain cutting tools with sharp cutting edges are less likely to bind and easier to control.
- g. Use the chainsaw and accessories in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the chainsaw for operations different from intended use could result in a hazardous situation.
- h. Children should be supervised to ensure that they do not play with the chainsaw.

5. Battery tool use and care

- a. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b. Do not open the battery. Prevent the danger of short-circuiting.
- c. Protect the battery from heat, such as continuous strong sunlight, fire, water and moisture. Prevent the danger of explosion.
- d. Use the chainsaw only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- e. When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together

may cause burns or fire.

- f. Under abusive conditions, liquid may be ejected from the battery, please avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help immediately. Liquid ejected from the battery may cause irritation or burns.

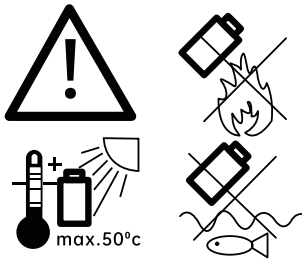

CAUTION! RISK OF EXPLOSION!

Never charge non-rechargeable batteries!

Protect the rechargeable battery from heat, such as continuous strong sun-light, fire, water and moisture.

Prevent the danger of explosion.

Safety Warnings for Charger

- Do not allow any liquid to come into contact with the charger. Danger of electric shock may occur.
- Do not place tools or chargers near the sink, washbasin, toilet, or any other places near water.
- Do not spill liquid of any kind on the chainsaw or the charger. Doing so may short out parts, cause damage to the product and create the risk of fire or electric shock.
- The most suitable temperature to charge the battery packs are between 68°F -77°F. During charging, batteries must be placed in well ventilated area.
- The chainsaw is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision instructions.
- Children must be supervised not to play with the appliance.
- Do not recharge non-rechargeable batteries!

Electrical Safety



Always check the voltage of the power supply corresponds to the voltage on rating plate

Product Information

Intended use

This appliance is suitable for gardening pruning, bush pruning, small branch pruning, wood cutting, widely used in gardens, parks, farms, highways, pastures, orchards, greenhouses. Any other uses or modifications to the machine are deemed to be improper usage and may result in serious physical injury. The manufacturer accepts no responsibility for damages attributable to misuse.


Technical Specifications

8 Inch Mini Chainsaw	
Max. cutting diameter	200mm
Guide Plate Length	8 Inch
Weight	2KG
Battery Pack	
Battery pack type	Li-Ion
Voltage	21V
Capacity	3.0AH 55Wh
Charging time	2H
Working time	1H


Assembly



 Only insert the rechargeable battery once the device is completely assembled.
If the device is switched on accidentally, there is a danger of injury.

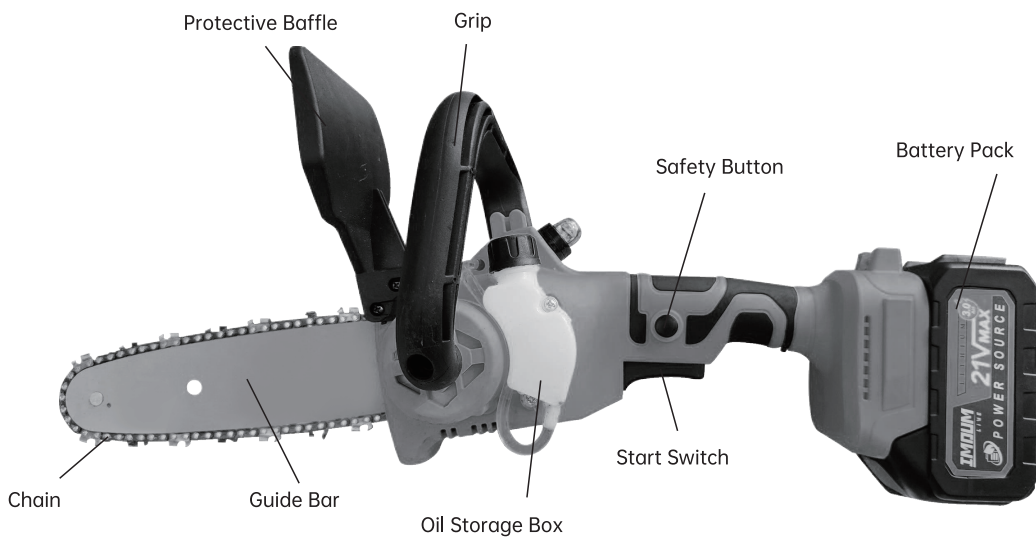



Removing the Chain

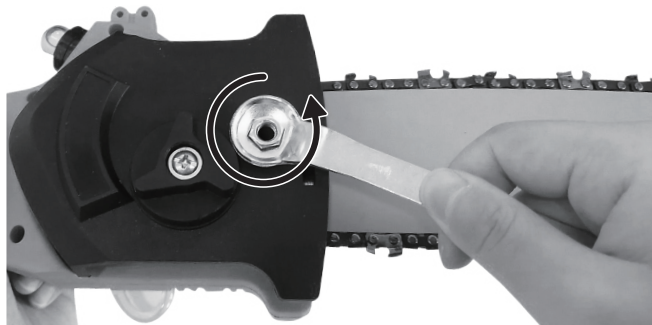 

1. Loosen the cover screw counterclockwise.
2. Remove the side cover
3. Remove the guide plate and chain


Installing the Chain

  Chain Blade Directon

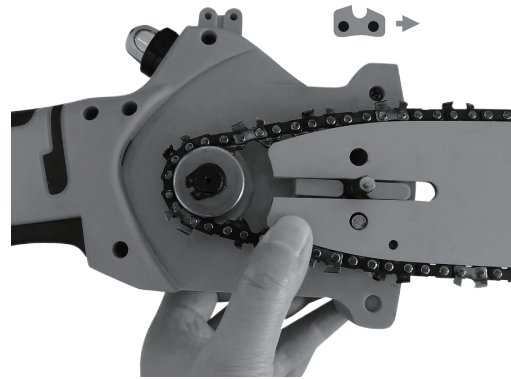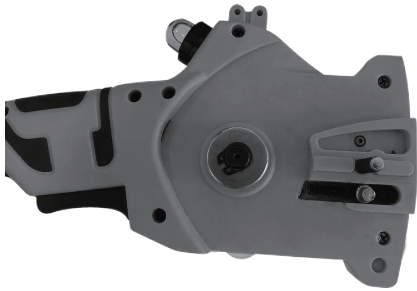


1. Clean the motor to ensure that there is no debris.

 2. Install the guide plate and chain to ensure that the direction of the chain blade is correct.

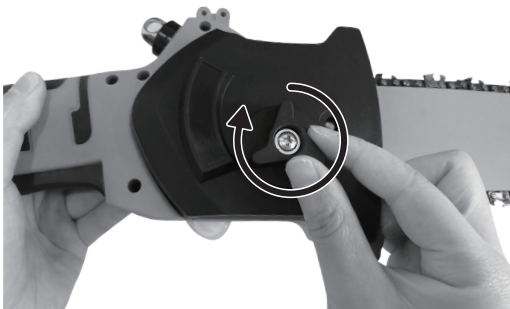

 3. Adjust the position of the buckle on the baffle.

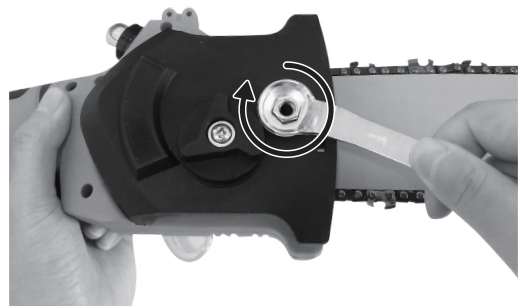


4. Tighten the cover screw clockwise.

Adjusting Tightness of the Chain

Please adjust the tightness of the chain before using the device. If the chain is too loose or too tight, it is easy to cause the chain to fall off or the device to jam.

 Please adjust according to the following tips.

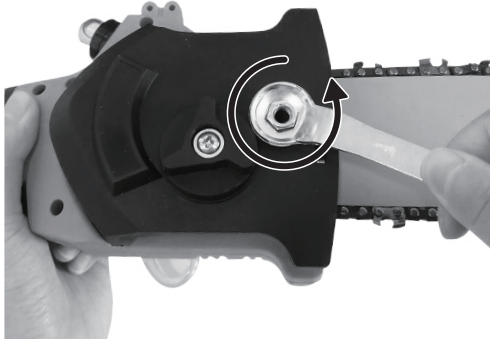

1. Loosen the cover screw counterclockwise.



2. Adjust the tightness of the chain by turning the cover screw to ensure that there is only a 0.3cm gap when pulling the chain, otherwise the chain will fall off or cause the machine to jam.



3. Tighten the cover screw clockwise

 
"NOTICE:

Slowly turn the screw to adjust the chain. If you want to fix the gap between the chain and the guide plate to ensure that it will not loosen during use, then forcefully tighten the cover plate nut."

⚠ "Do not continue to loosen the tightening screws!"

⚠ "Do not use an electric drill to loosen the screws!"

Oiling the Chain

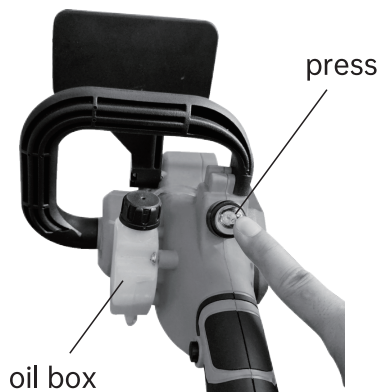

1. Add ordinary chain oil & lubricating oil to the oil box.
2. Oil the chain by pressing the bubble.

Installing the Battery into the Mini Chainsaw



Ensure that the exterior of the battery is clean and dry before connecting to the charger or machine.



Insert the battery into the base of the machine as shown in the picture. Push the battery further forward until it clicks into place.
(Battery: pay attention to align the slots and inserts.)

Removing the Battery from the Mini Chainsaw

Push the battery unlock button.
Pull the battery out of the Chainsaw.



Charging the Battery with the Charger

Do not expose the battery to extreme conditions such as high temperature or shock. Otherwise, it will cause personal injury due to the leakage of the electrolytic solution.

Before charging, check that the surface of the battery is clean and dry.

Before using for the first time, the battery needs to be fully charged.



Indicator Light	Status
Red	Charging
Green	Charging completed

After the battery is fully charged remove the charger plug from the outlet and remove the battery from the charger.

***Note:**

 
If you have any questions about the operation and use of the equipment, please contact our online customer service on the purchase platform.

Cutting Skills

- When the chainsaw is running, keep your other hand at least 6 inches away from the cutting area of the blade, and the hand must not be put into the cutting edge.
- To ensure the best service life of the chain saw, please do not overload the equipment and do not cut branches with a diameter of more than 100mm(4 inches). Otherwise the chain may become stuck.
- To protect the battery pack in cold or wet weather, place it under waterproof clothing.
- Be sure to unplug the battery pack after the cutting is completed.
- Do not use this equipment on rainy days.

Extended function

This product can be combined with a tall pole to form a Pole saw, allowing you to use the most cost-effective cost to meet the needs of users in different scenarios:

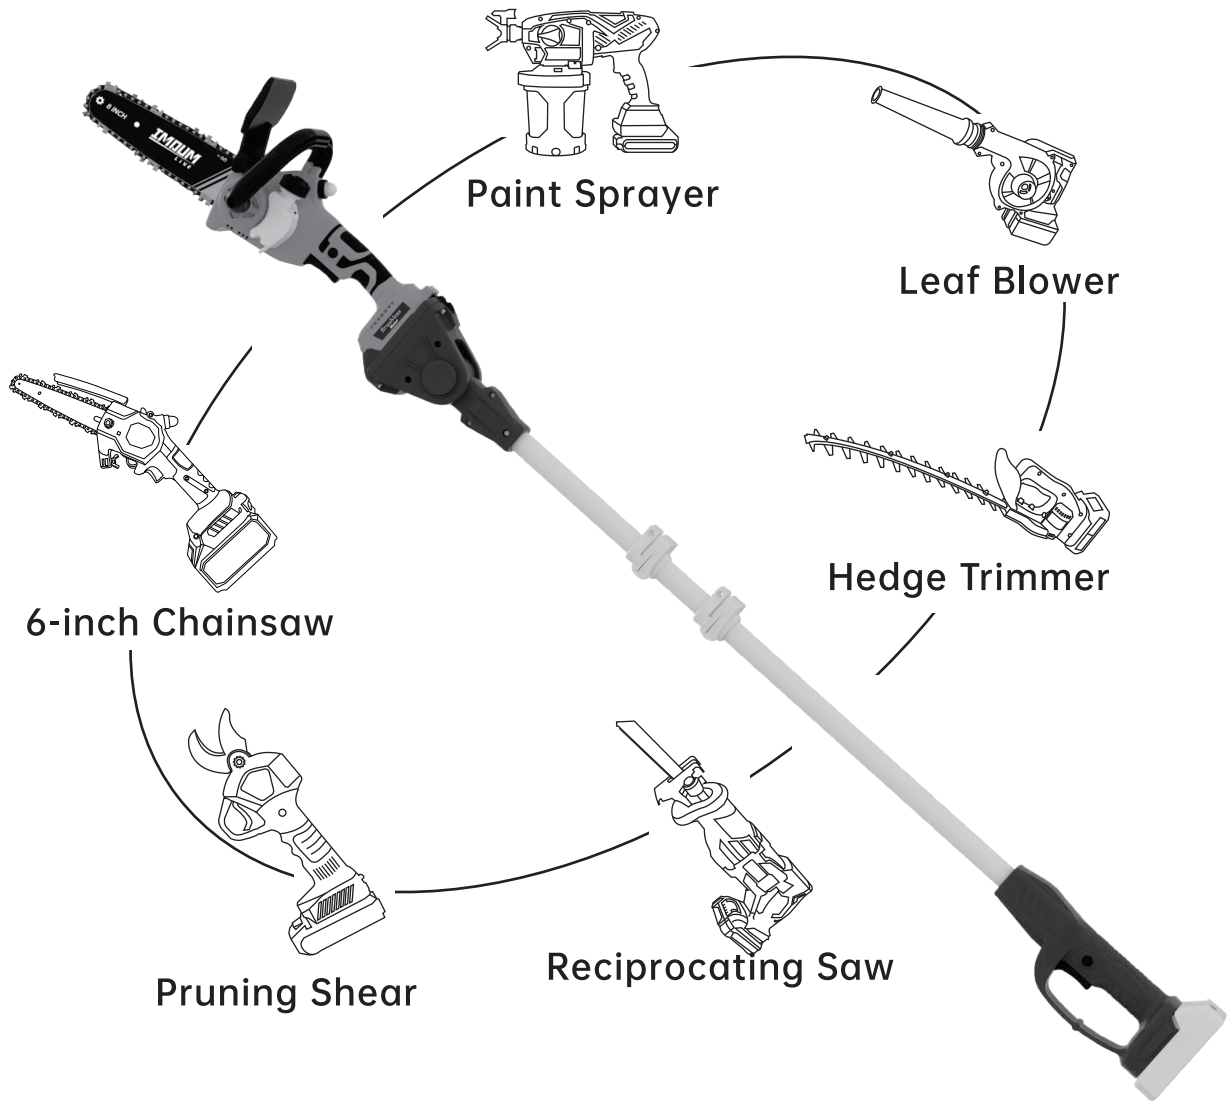

! NOTE:

THE PACKAGE DOES NOT INCLUDE THE HIGH ROD, YOU CAN VISIT THE IMOUMLIVE BRAND IN THE AMAZON STORE TO BUY THIS ACCESSORY!

Maintenance and Cleaning



Before cleaning and maintenance, always switch off the chainsaw and remove the battery.

- Clean the chain carefully after each use.
- Wipe the chain with lubricating oil and spray with metal protection spray.
- Do not spray the equipment with water or break it into the water, otherwise it may cause electric shock.
- Clean the machine casings regularly with a soft cloth, preferably after each use, keep the ventilator, motor room and equipment handle clean.
- Remove persistent dirt using a soft cloth moistened with soapsuds. Do not use any solvents such as gasoline, alcohol, ammonia, etc. Chemicals such as these will damage the synthetic components.

Environment



Faulty and/or discarded electrical or electronic apparatus have to be collected at the appropriate recycling locations.

Warranty Terms

The warranty period of this product is 12 months, this clause does not include the following points:

1. Any natural wear and tear, overload work.
2. Damage caused by lack of daily maintenance.
3. Improper use and other man-made damage.
4. A product modified or dismantled by an illegal repairman.
5. Severe impact damage.
6. Use non-original accessories and batteries.

WEEE recycling instructions

Information on electrical and electronic equipment

The following information is intended for private end users who use electrical and/or electronic equipment.

1 Separate collection of waste equipment

Electrical and electronic equipment that has become waste is referred to as old equipment. Owners of waste equipment must dispose of it separately from unsorted municipal waste. In particular, old appliances do not belong in the household waste, but in special collection and return systems.

2 Batteries and rechargeable batteries

As a rule, owners of old appliances must separate old batteries and accumulators that are not enclosed in the old appliance from the latter before handing them in at a collection point. This does not apply if the waste equipment is handed over to public waste management authorities and separated from other waste equipment there for the purpose of preparation for reuse.

3. options for returning old equipment

If you have old equipment, you can hand it in at the facilities set up and available by public waste management authorities for the return or collection of old equipment for the purpose of proper disposal of the old equipment. If necessary, it is also possible to hand in electrical and electronic equipment there for the purpose of reusing the equipment. For more information, please contact the respective collection or take-back point.

4. data protection notice

Old devices often contain sensitive personal data. This applies in particular to information and telecommunications technology devices such as computers and smartphones. In your own interest, please note that each end user is responsible for deleting the data on the old devices to be disposed of.

5. meaning of the symbol "crossed-out dustbin

The symbol of a crossed-out wheeled garbage can regularly displayed on electrical and electronic equipment indicates that the respective device must be collected separately from unsorted municipal waste at the end of its service life.

WEEE recycling instructions

"The symbol of the crossed-out garbage can on batteries or accumulators indicates that they must not be disposed of with household waste at the end of their life. If batteries or accumulators contain mercury (Hg), cadmium (Cd) or lead (Pb), you will find the respective chemical symbol below the symbol of the crossed-out trash can. You are legally obliged to return old batteries and accumulators after use. You can do this free of charge in a retail store or at another collection point near you. Addresses of suitable collection points can be obtained from your city or local government.

Batteries may contain substances that are harmful to the environment and human health. Special care should be taken when handling batteries containing lithium due to the particular risks involved. The separate collection and recycling of old batteries and accumulators is intended to avoid negative impacts on the environment and human health.

Please avoid the generation of waste from old batteries as much as possible, e.g. by preferring batteries with a longer life or rechargeable batteries. Please avoid littering public spaces by not carelessly leaving batteries or electrical and electronic equipment containing batteries. Please consider ways to reuse a battery instead of disposing of it, for example by reconditioning or repairing the battery.

IMOUM

L i V E



Brand: IMOURLIVE

Product name: Mini Chainsaw

Model number: DLJ08

WEEE-Reg.-Nr. DE 45049658

Manufacture: Chongqing Mouma Keji You Xian GongSi

Address: 4-1, 131Hao, Tian Chi Da Dao, Ba Nan Qu, Chongqing,
401320, China

EC REP

EU Responsible Person: C&E Connection E-Commerce (DE) GmbH

Address: Zum Linnegraben 20, 65933, Frankfurt am Main, Germany

E-mail: info@ce-connection.de

Contact Us: support@imoum.com

FC CE UK RoHS    
MADE IN CHINA