
Thank you for your purchase!

We hope you love your pressure washer as much as we do

Cordless Pressure Washer User Manual (Model:GYQXJ)

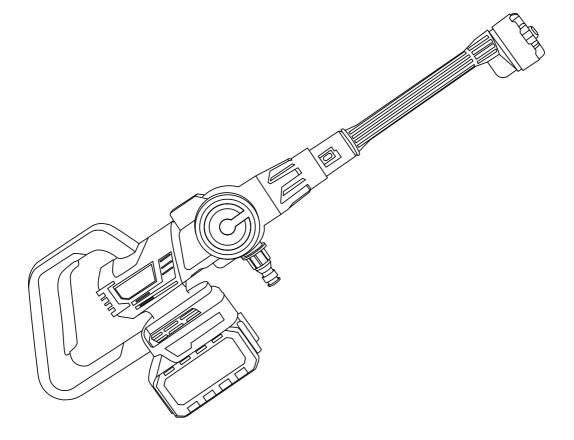



Questions or Concerns? Contact IMOUMLIVE via **support@imoum.com**

Read all safety rules and instructions carefully before operating this tool.

Catalog

Product Description	——— EN.1
Installation Procedure and User Requirements	—— EN.1-3
Instructions for faucet connectors	—— EN.3-4
Cordless Pressure Washer use tips	——— EN.5
Foam sprayer and nozzle usage instructions ———	—— EN.5-6
Operation Precautions	——— EN.6
Product component introduction	——— EN.7
Battery charging information	——— EN.7
Electrical Safety and Product Information	——— EN.8
User Safety Warning!	——— EN.9
Safety Precautions for Battery Packs	— EN.9-10
How to Clean Your Vehicle Quickly	—— EN.10
Extend Your Warranty by 1 Year —	—— EN.10
Repair and Maintenance ————————————————————————————————————	—— EN.11
Troubleshooting	—— EN.11

Product Description

Research and development, design, manufacture and product development of lithium battery wireless handheld cleaning machine: Based on the principle of user experience first and quality first, it is a custom-developed product for the majority of car enthusiasts and home cleaning and cleaning, pursuing the advantages of convenience, speed, portability and energy saving. Wireless products are not affected by the working radius of the plug, and the battery is strong and stable , can be carried with you, suitable for multi-scenario applications, saving power and saving you time and cleaning costs anytime, anywhere. Its high efficiency will bring you DIY cleaning fun and quality experience.

Installation Procedure and User Requirements



Warning: Please read the instructions carefully before operating the pressure washer.


WARNING: DO NOT AIM THE SPRAY GUN AT HUMAN BODY. OR SPRAY DIRECTLY ON LIVE EQUIPMENT.

Open the box and confirm that the machine and the corresponding model are in good condition. Take out the accessories one by one and put them in the machine. Please install and use according to the operating rules!




Step 1:

As shown in the figure, insert the gun head correctly into the machine and rotate. (Two-way force insert rotary tightening).

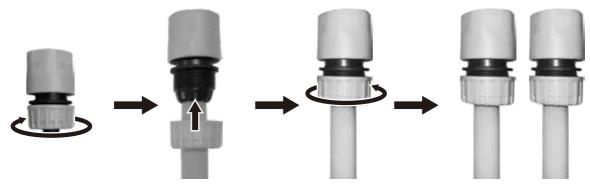

Step 2:

As shown in the picture, first turn the lower knob in the indicated direction to loosen it, then thread the hose through the lower knob and insert it into the upper interface, finally tighten it in the indicated direction to complete the hose installation (The assembly method for both ends of the hose interface is the same).

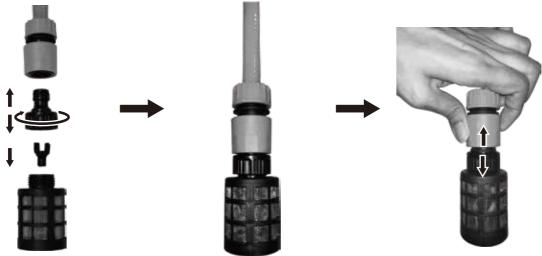

Step 3:

 Assemble the filter basket in the direction shown and insert it into the hose interface. You will hear a clicking sound when the installation with the filter basket is completed.
To remove the filter basket, pull up the fixed part of the hose interface and pull down the filter basket.



Step 4:

Insert the water gun inlet into the hose interface as shown in the picture, and you will hear a clicking sound once the installation is completed. Step 5:

To install the filter basket clip, insert the squeezed hose into the clip (the clip can be fixed to the wall of the water container to prevent the filter basket from floating on the water surface).





Step 6:

As shown in the figure, insert the battery pack into the machine correctly, and the charging time is about 3 hours to be fully charged, please do not overcharge).

Instructions for faucet connectors

Faucet Interface: In general, you will receive an assembled interface. If it is a dispersed accessory, assemble it according to the instructions in the diagram.

(Note: Keep the two silicone circles in the interface properly to prevent water leakage after connecting the water pipe!)




		When the black and yellow interfaces are combined, they can be used to connect a faucet with a diameter of 3/4 inch (19.05mm).
7		When the black and yellow interfaces are separated, the yellow interface alone can be used to connect a faucet with a diameter of 1 inch (24.5mm).



1. Taking this faucet as an example, some faucets require unscrewing their own connectors before the conversion interface can be attached.

2.Choose the appropriate conversion interface based on the diameter of the faucet, then screw it onto the faucet by rotating it in line with the threads. (Note: When screwing, gently tighten it after aligning with the threads to avoid overtightening and damaging the threads!)

3.Finally, insert the hose interface into the conversion interface until you hear a clicking sound, indicating the installation is complete.

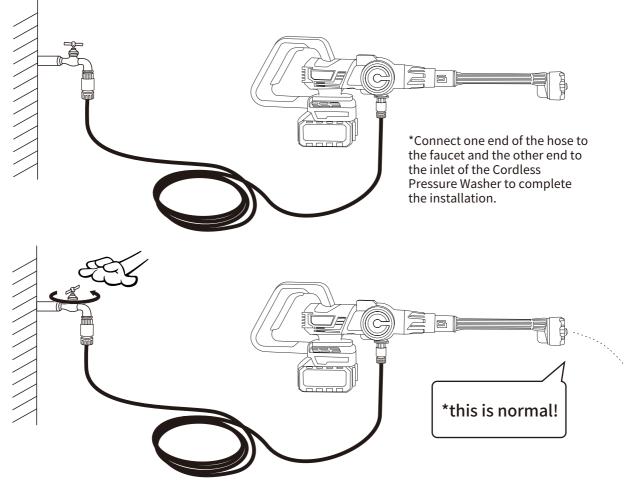


After connecting to the faucet, you need to turn on the faucet switch to use it normally. When you turn on the faucet switch, a small amount of water will come out of the pressure washer nozzle (this is normal!). It means that the pressure washer hose and the machine are already filled with water, and you can proceed with normal operation at this point.

Cordless Pressure Washer use tips

If you find that the water tap conversion adapter we provided does not match your household water tap, you can use the method shown in the figure.

You can use a slightly larger bucket to collect the water from your garden faucet and connect a cordless pressure washer with a filter basket to the bucket for water suction. With both the faucet and the pressure washer working together, you can have a continuous water supply! Your home faucet can be connected to the garden hose (length depends on the length of your hose) to achieve long-distance cleaning operations!

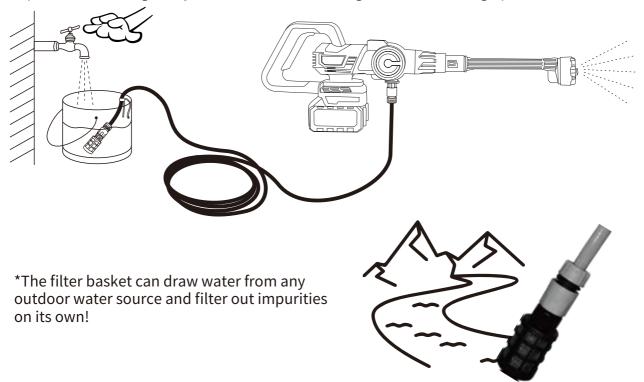

Foam sprayer and nozzle usage instructions



Foam sprayer usage instructions: The foam sprayer is mainly used to clean oil stains on cars. Before using the sprayer, add one-third of the capacity of detergent to the sprayer, and then insert it into the cleaning gun according to the installation instructions (the foam volume of the detergent can be adjusted by the knob above).

Instructions for use of the 6-in-1 nozzle:



Note: 1. Nozzle needs to be inserted in the direction shown in the diagram, otherwise it will affect the mode switching. 2. Make sure the nozzle is switched into place during mode switching, otherwise water leakage may occur.

1.The 1.0° nozzle is the strongest water pressure mode and is mainly used for cleaning stubborn stains.


2. The 15° nozzle is the second strongest water pressure mode, with slightly less pressure than 0° but a larger cleaning area, and can be used for cleaning walls or floors.

3. The 25° nozzle is the third strongest water pressure mode, with slightly less pressure than 15° but a larger cleaning area, and can be used for washing cars.

4.The 40° nozzle is the fourth strongest water pressure mode, with slightly less pressure than 25° but a larger cleaning area, and can be used for cleaning bicycles.

5.The Shower nozzle is a shower mode that can be used for watering plants and cleaning windows.


6. Intermittent nozzles are used in intermittent mode to save water.

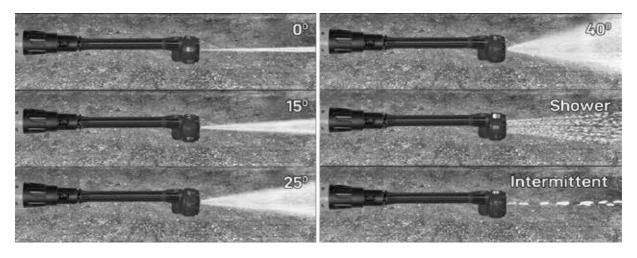

Operation Precautions

(1. After assembly, press and hold the trigger for 10 seconds to 15 seconds to empty the air in the intake pipe (if there is still no water, check whether the intake port is connected well or the intake pipe is full of water).	、
T	2. Do not use water guns on children and animals to avoid injury.	Т
I I	3. In winter, the water in the water pipe should be drained immediately to prevent the water gun from freezing.	I I
I I	4. Due to excessive pressure, it is strictly forbidden for children to operate the car wash water gun to avoid injury.	l J
	·	-

Product component introduction and battery charging information

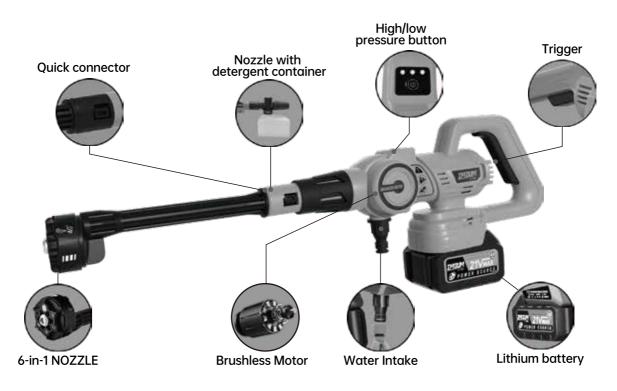

Charging the Battery with the Charger

Do not expose the battery to extreme conditions such as high temperature or shock. Otherwise, it will cause personal injury due to the leakage of the electrolytic solution. Before charging, check that the surface of the battery is clean and dry.

Before using for the first time, the battery needs to be fully charged.



Indicator Light	Status
Red	Charging
Green	Charging completed

After the battery is fully charged remove the charger plua from the outlet and remove the battery from the charger.

Electrical Safety



Always check the voltage of the power supply corresponds to the voltage on rating plate

Product Information

Intended use

This equipment is suitable for gardening watering, shrub watering. Washing cars, Cleaning boats, flushing stains, widely used in gardens, parks, farms, highways, pastures, orchards, greenhouses. Anyother uses or modifications to the machine are deemed to be

improper usage and may result in serious physical injury.

The manufacturer accepts no responsibility for damages attributable to misuse.

Technical Specifications

Cordless Pressure Washer		
Model No	GYQXJ	
Power	400W	
Pumping capacity	6L/MIN	
Weight	1.85KG	
Battery Pack		
Battery Pack Type	Li-lon	
Voltage	21V	
Capacity	4.0AH 74Wh	
Charging time	3H	
Working time	45MIN	

User Safety Warning!

Before using this product, please read the safety regulations and related safety warnings carefully! The following signs and instructions can cause electric shock, fire or personal injury! Be sure to keep the warning notes for unfamiliar operators! Hand-held lithium battery cleaning machine use safety warning!

1. When using the machine, please ensure that it is the original machine and accessories (charger and battery pack).

2. Avoid water flowing to people and live parts during use.

3. Make sure the battery pack is charged out of reach of children.

4. If the battery pack and charger are dropped, bumped or wet, please stop using them immediately!

5. The battery pack must be charged under supervision.

6. The charger must be an original charger (other charging accessories or charging methods are prohibited without authorization or as suggested by the original factory).

7. Do not charge in high temperature or unattended or within the reach of children.

8. Please check the charger, battery pack, and main unit of the Cordless Pressure Washer regularly. If there is any abnormality, damage or failure, please do not modify or disassemble at will.

9. Batteries contain lithium. In order to protect the environment, used batteries should be sorted and recycled, and should not be discarded at will!

10. Do not expose to water and fire (or near fire).

Instructions Safety Precautions for Battery Packs

1. Do not disassemble, open or shred the battery pack.

2. Do not expose the battery pack to heat sources or high temperature sunlight.

3. Do not short-circuit the battery pack (connect the positive and negative poles), and do not put the battery pack in the drawer of the box to avoid short-circuiting with other batteries or other metal objects.

4. Do not remove the battery or battery pack from its original packaging before use.

5. Avoid dropping the battery pack or subjecting it to mechanical shock.

6. If the battery leaks, avoid direct contact with the leaked fluid on your eyes or skin. In case of accidental contact, immediately rinse the contact area with water and seek medical attention promptly.

7. Do not use non-original chargers and battery packs. (May cause machine failure or unexpected personal injury)

8. Pay attention to the positive and negative symbols on the battery pack to ensure that the connection is correct.

9. Keep the machine and battery pack away from children.

10. To purchase a matching battery pack or charger, you must purchase it according to the manufacturer's instructions.

11. Ensure that the battery pack is clean and dry. (If there is dust or residual moisture, please wipe it with a clean cloth or air dry immediately, do not use a hair dryer or heat gun to dry it)

12. The battery pack must be charged before use, using the correct charger and referring to the manufacturer's operating instructions or original equipment instructions.

13. Do not charge the battery pack for a long time when the machine is not in use. Note that the green light is fully charged and the red light is charging.

14. The battery pack should undergo multiple charge/discharge cycles for optimum performance when the machine is not in use for extended periods of time.

15. The battery pack has the best performance at room temperature (20°C+5°C).

16. This product is only suitable for cleaning home doors and windows, courtyards, vehicles and gardens. Not intended for commercial or clocked mobile operation, must not exceed battery life or high frequency forced use.


17. When the machine is not in use, remove the battery pack, disconnect it from the main unit, and place it in a dry place out of the reach of children.

18. When the battery pack is damaged due to human error, collision, high temperature, etc., it should be properly handled and restored. Do not discard it at will, so as not to pollute the environment.

How to Clean Your Vehicle Quickly

Wet the vehicle with a fan nozzle (spray from top to bottom), wash off the dust on the surface, then use a high-pressure straight pipe to wash off the dirty parts such as thick soil, and use a foaming pot to spray foam the entire body. Then use a car wash sponge to scrub thevehicle .Finally, wash the vehicle with a car washer.

Car washing machine, the standard car washing time is 10-20 minutes, and the water is 25-40 liters (2-3 buckets of water).

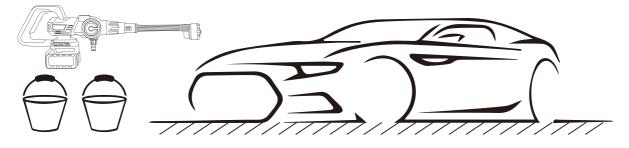

Extend Your Warranty by 1 Year

Register your product within 14 days of purchase at www.imoum.com to extend your 1-year warranty by an additional year.

Repair and Maintenance

1. Before each use, check the machine and parts for damage. If damaged, stop using the machine immediately.

2. The intake pipe and filter must be cleaned after each use, and the bag must be stored to avoid oxidation for future use.

3. After use, run the machine empty for a few seconds to drain the residual moisture inside the machine, avoid oxidative dirt and weather freezing, and store it in a dry and cool place.

4. Waste disposal: Damaged accessories and packaging materials must be sorted, recycled and marked.

5. In hot weather, do not store in the trunk of the car to avoid fire caused by high temperature.



Warning: Do not use chemical acids and muddy water, always use clean, impurity-free water.

Troubleshooting

FAQ	Cause Analysis	Solutions
The machine does not absorb water	1. The machine is too high from the water surface	As low as 1.5 meters below the ground
	2. The filter is blocked by foreign matter	Remove filter and clean
	3. The connection between the inlet pipe and the machine is faulty, or the intake pipe is broken	Check and replace air pipes
	4. bending water inlet pipe	Straighten the intake pipe and reconnect
	5. The pump was frozen due to the cold weather	Reboot after defrosting
Sudden increase of water pressure or abnormal shape of water	A foreign object blocks the head of the water gun	Prick the nozzle with a needle or replace it with a new head
	1. No battery pack installed	Reinstall
The machine won't start	2. The battery pack is out of battery	Charge or replace the battery pack with a new one
	3. Damaged battery pack	Replace the battery pack
The battery pack does not charge	A mismatched or damaged charger	Replace the supporting charger
The pressure of the	1. There is air in the pump	Check that fittings and pipes are in good condition
machine is not continuous	2. The machine is in low voltage mode	Normal at low pressure, no need to do anything
Machine stops automati-	1. The battery pack is out of battery	Charge or replace the battery pack
cally	2. The gun head is blocked. Current protection	Clean or replace the head
Internal leakage	Chemical acid source or assembly reason	Avoid chemical liquids



Brand: IMOUMLIVE Product name: Cordless Pressure Washer Model number: GYQXJ WEEE-Reg.-Nr. DE 45049658 Manufacture: Chongqing Mouma Keji You Xian GongSi Address: 4-1, 131Ha0, Tian Chi Da Dao, Ba Nan Qu, 401320,Chongqing, China

EC REP

EU Responsible Person: C&E Connection E-Commerce (DE) GmbH Address: Zum Linnegraben 20, 65933, Frankfurt am Main,Germany E-mail: info@ce-connection.de

