


HY40KG-A

Concealed hinge system for unrebated interior doors

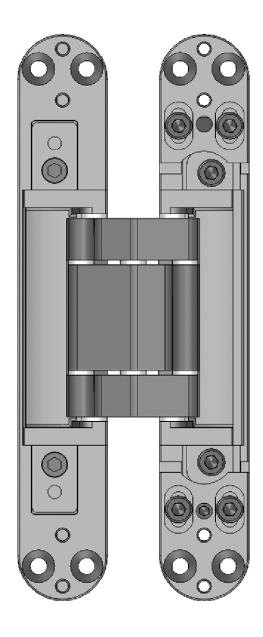

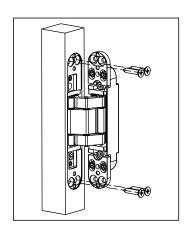


Conduct the routing, cutter 24 mm \varnothing , collar ring 30 mm \varnothing , screw hinge door part (marked as door)using 5 mm \varnothing wood screws

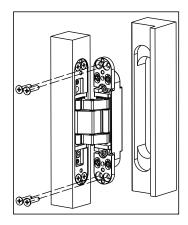

Fasten hinge frame part depending on the frame type.

If required, please loose slightly the upper clamping screws for the height adjustment.

Block frame:Screw with $5 \text{ mm } \varnothing$ wood screws For further frame types,see page 2

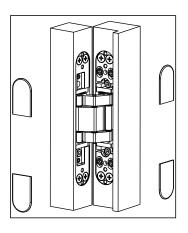


Screw the small cover plates using the enclosed tapping screws onto frame and door part.

Double-check the fastening of all clamping and fixing screws after installation.

HY40KG-A

Concealed hinge system for unrebated interior doors

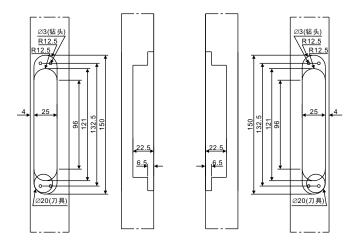

Adjustment screws

Height adjustment Depth adjustment Side adjustment


Side adjustment Depth adjustment Height adjustment

Height adjustment

- Slightly loosen the clamping screws
- Adjust the vertical position of the door by turning the lower height adjustment screw (turn the upper height adjustment screw in the opposite direction if necessary)
- Retighten the clamping screws

Installation situations of further frame types

Wooden casing frame

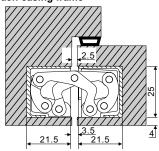


Screw the hinge using the enclosed M 5 screws. Depending on the frame design, use the small spacer plates.

Depth adjustment

- Slightly loosen the fixing screws
- Put the door to the correct compression
- Retighten the clamping screws


Steel frame

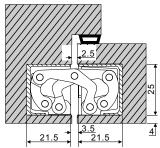

The steel frame must be equipped with a receiver

for fastening.

Aluminium frame: with the receiver of the frame manufacturer

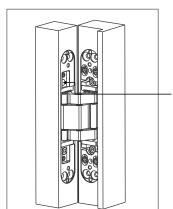

Side adjustment

- Adjust the adjusting spindles using a 4 mm Allen key
- Twist left towards hinge (max. 3 mm)
- Twist right towards lock (max. 3 mm)