SONDER

LIVING

CHARLIE CHARLIE MEDIA UNIT

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have loosened inside the carton during shipment and place on a non-abrasive surface.


IMPORTANT: These parts can be cumbersome and heavy to some people, therefore, the assistance of two or more people are recommended in order to prevent personal injury and insure the furniture is not damaged during the assembly Process.

PART LIST

- A. [1] MEDIA
- B. [2] LEGS
- C. [2] REMOVABLE SHELF PANELS

INSTRUCTIONS

- 1. Lay the Media (A) on a flat surface.
- 2. Attach the legs (B) to the bottom of the Media by using Allen bolts (1), lock washers (2) and flat washers (3). See **FIGURE 01**.
- 3. Turn the assembled furniture to an upright position.

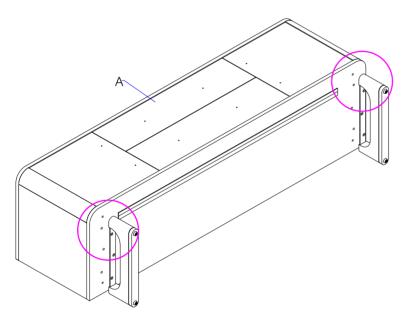


TOOLS NEEDED


Phillips Screwdriver (Not provided)



HARDWARE INCLUDED

NO	DE	SCRIPTION	QTY
1	AL	LEN HEAD BOLT	6
2	0	LOCK WASHER	6
3	0	FLAT WASHER	6
4		ALLEN WRENCH	1
5		DOOR HANDLE	2
6	D	RAWER HANDLE	2
7	{ mmmmmmmm	PHILLIPS BOLT M4X25MM	4
8	{\mmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmmm	PHILLIPS BOLT M4X40MM	4
9		SHELF HOLDER	8
10	ROUI	ND HEAD SCREW M4X15MM	8

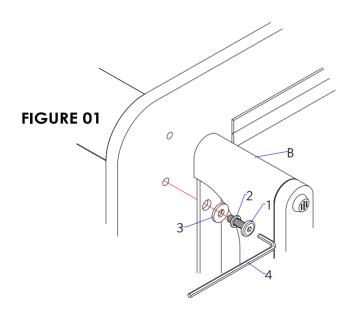

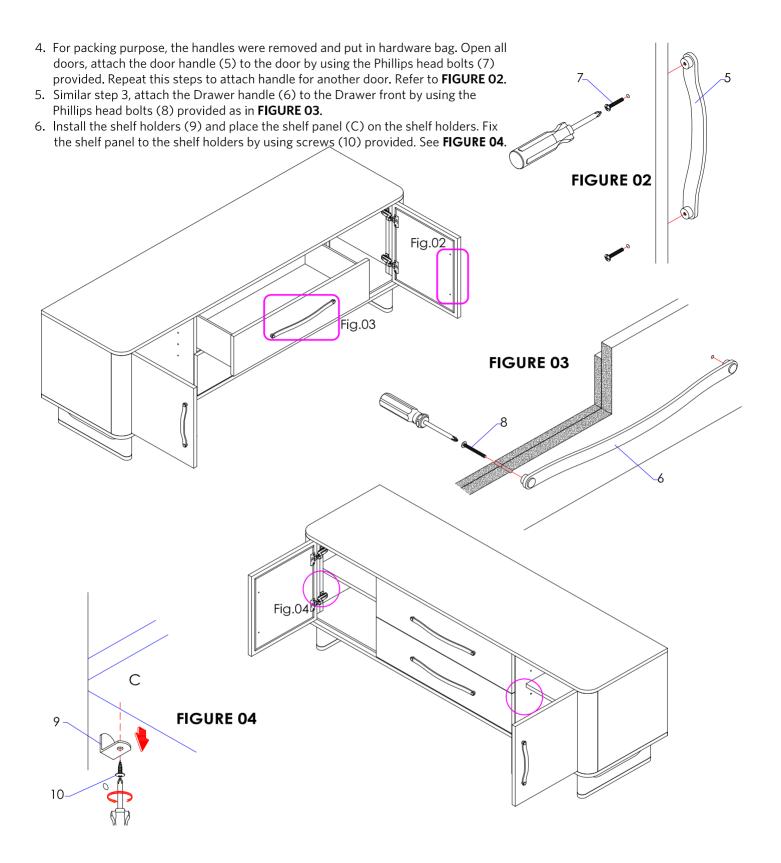

CARE INSTRUCTIONS

- 1. Dust often using a clean, soft, dry and lint-free cloth.
- 2. Blot spills immediately and wipe with a clean, damp, cloth.
- 3. We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Please read all instructions carefully before assembling.
- 2. Keep instructions for future use.
- 3. Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.