


ECLIPSE FLOOR LAMP



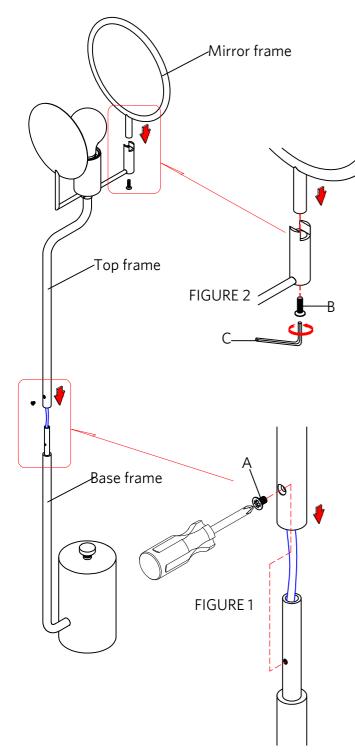

IMPORTANT SAFETY INSTRUCTIONS:

- •This fixture has been rated 40-watt maximum TYPE A standard bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- •If the plug does not fit securely into outlet, do not force it contact a professional electrician.
- •Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- The manufacturer and distributor accepts no liability for incorrect installation.
- Maximum Supply Current 1 A

WARNINGS

- All wires are connected; do not remove the lamp from its packaging by pulling on the power cord, as a bad connection may result.
- •Do not connect electricity until the lamp is fully assembled.
- •To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- •Do not touch bulb when fixture is turned on or look directly at lit bulb.
- •Keep flammable materials away from lit bulb.
- •Suitable for indoor use only.
- •If the external flexible cable or cord of this luminaire is damage, it shall be exclusively replace by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

INSTRUCTIONS

- 1. Open the parts bag and place all on a flat surface.
- 2.Attach the Top frame to the top of the Base frame. Align and insert Phillip bolt (A) through to the holes on the side of top frame. Tighten the bolt by using Phillip screwdriver . See Figure 1.
- 3. Attach the Mirror frame to the arm of the Lamp. Align and insert Allen bolt (B) through to the holes on the bottom of arm. Tighten the bolt by using Allen wernch (C). See Figure 2.

CARE INSTRUCTIONS:

Avoid the use of all polishers, cleaners, and abrasives, as they will damage the finish of your lamp. To remove dust or fingerprints, wipe gently with a soft, clean cloth.