Switch Knob Α 60

Benton Adjustable Desk Lamp

Item # RL 3450

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- 1. Carefully remove all parts from the carton.
- 2. Insert the specified light bulb (not included) into socket.
- 3. Remove protective plastic (C) from electrical plug (B).
- 4. Plug lamp into wall outlet.

To Adjust:

- 1. Loosen adjustment keys (A).
- 2. Adjust lamp shade or lamp arms to desired position.
- 3. Tighten adjustment keys (A).

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

RALPH LAUREN

