

## **Amazon Alexa User Manual**



#### **NOTICE:**

- 1. You should add lock to the AUSLOCK APP;
- 2. You should connect the Gateway;
- 3. You should connect the Alexa to your phone.



#### 1. Pair Your Lock


## 1.1 Download and Register AUSLOCK









- 1) Android mobile phone, please scan the left QR code as above
- 2) Apple mobile phone, please scan the right QR code as above
- 3) You can also search for AUSLOCK in the APP store or Google play for download
- 4) Register a new account (phone number or email) or login with an existing account.
- 5) Touch the locks screen to light up the buttons, on App click "+ Add Lock"
- 6) The lock nearby will appear on the phone screen, Click "+"
- 7) Re name the lock
- 8) The lock is added successful

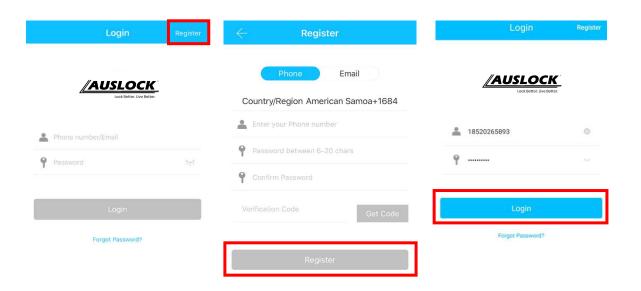

1-1 1-2 1-3



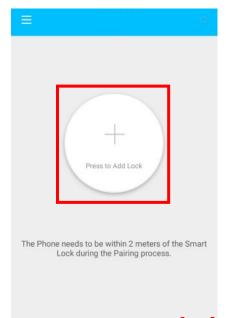

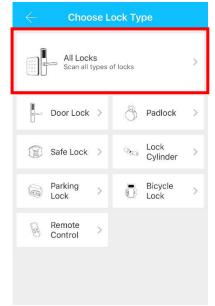




1-4

1-5

1-6

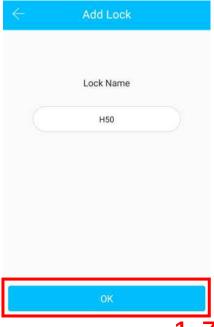



1-7



## 2.Pair Your Gateway

# **Light Status**

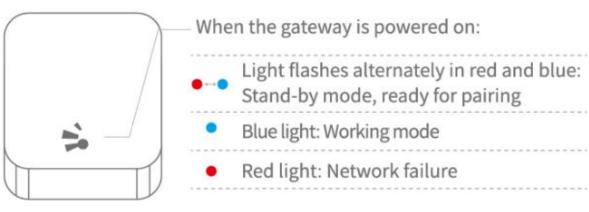

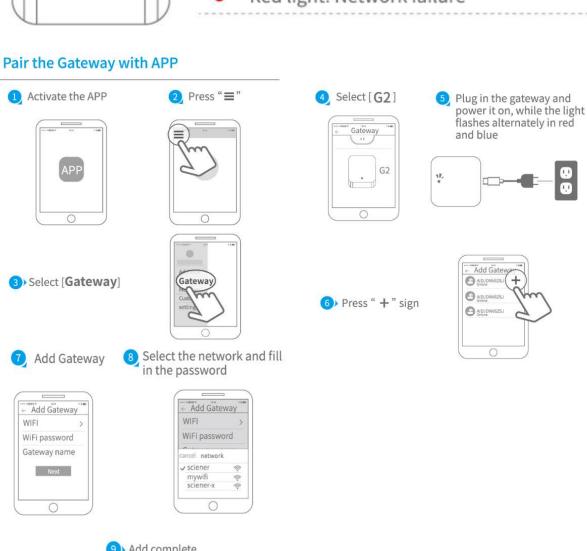


9) Add complete

▲ Notice: If times out, please power off and try it again.



- 3. Download and Sign up of Amazon Alexa
- 3.1 Search directly in the APP store
- 3.2 Sign up (you can log in directly if you already have an account with Alexa)

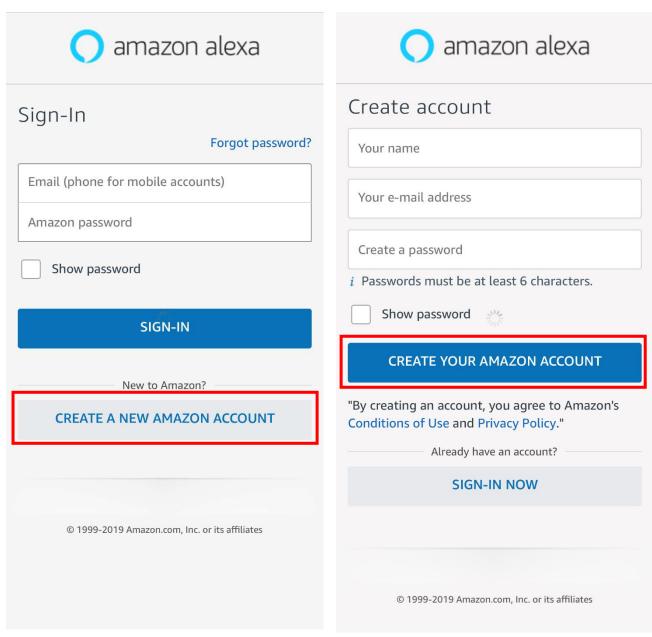



3-2-2



### 4. Enable Alexa Skill: ScienerSmart

## 4.1 Choose the "Skills & Games" option to get into the skill store

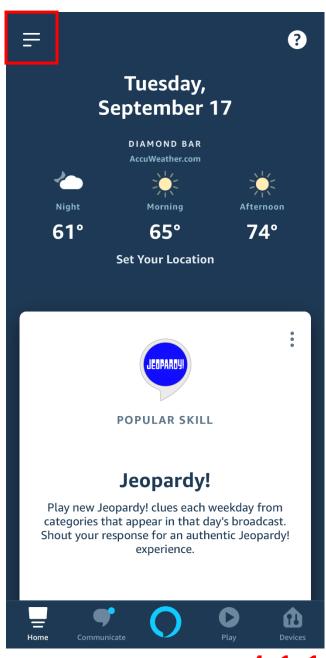


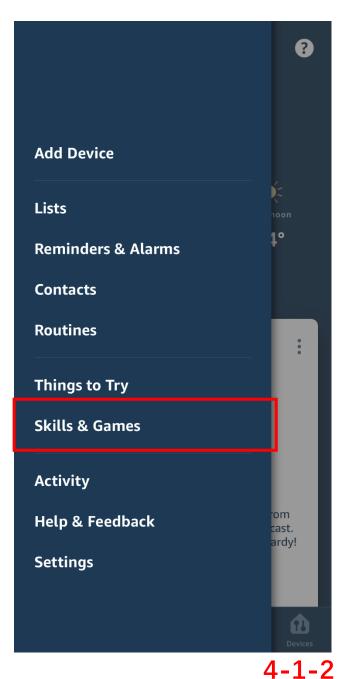


4-1-1



## 4.2 Input the "ScienerSmart" in the search bar

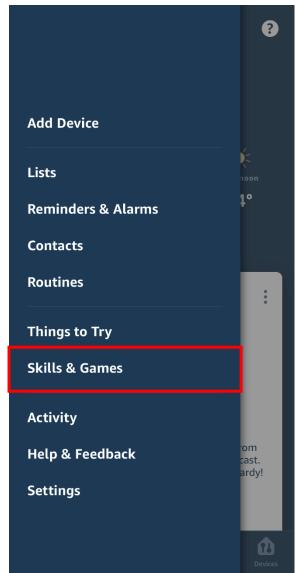


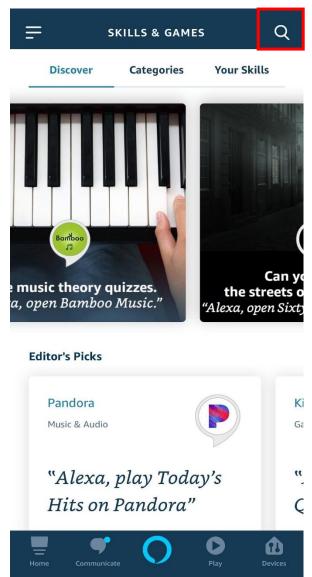

4-2-1 4-2-2




## 4.3 Click ScienerSmart in the search result and click "ENABLE TO USE"

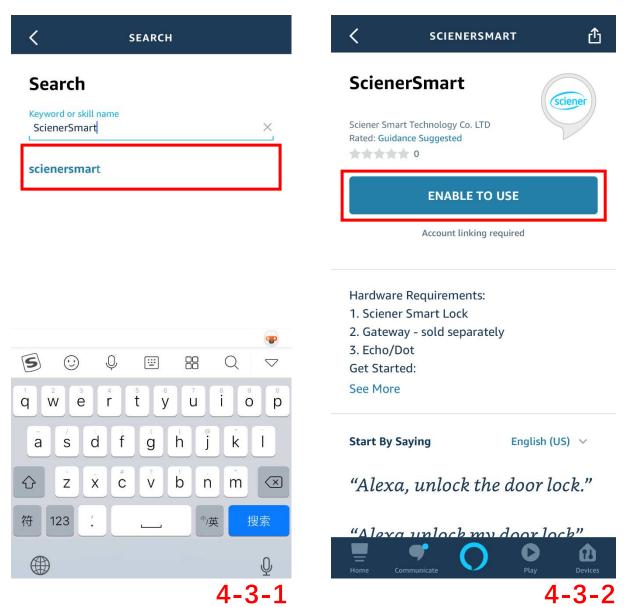




## 4.4 Input your sciener account for authorization

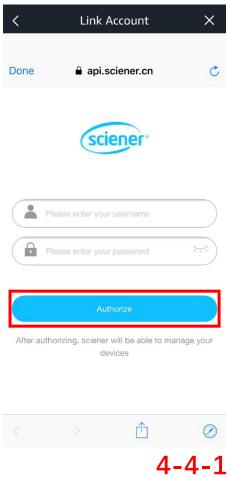





# 4.5 When the authorization is complete, return to the Amazon Alexa APP to click the "Discover device" or cancel

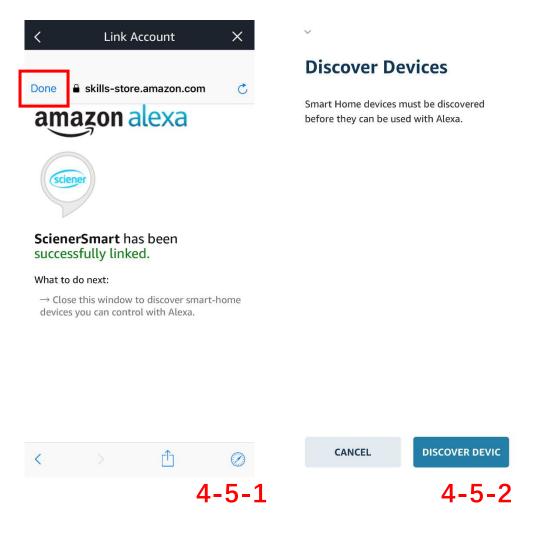




4.6 If you choose discover device you can find nearby devices and add it. If the search fails, you don't need to worry. If you choose cancel please do the following:

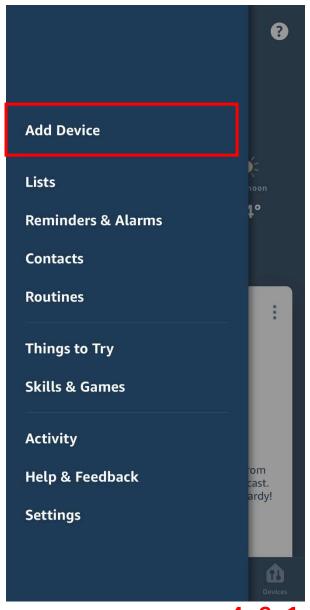

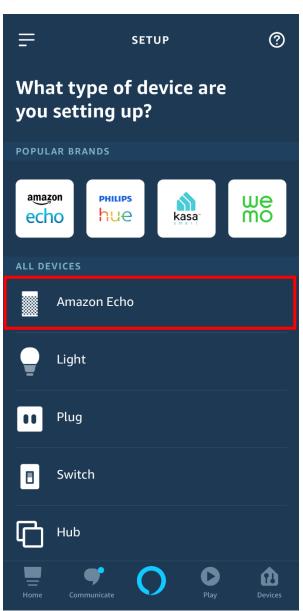



4-6-1 4-6-2



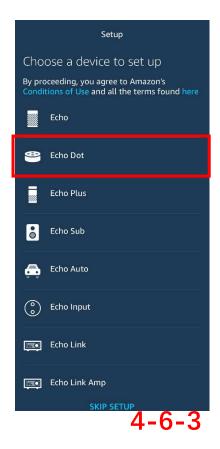




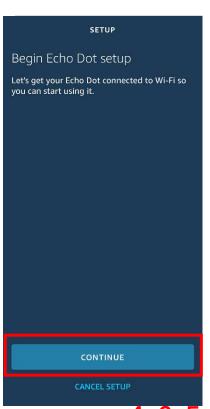


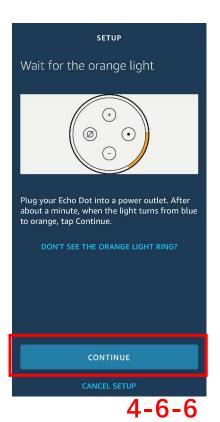







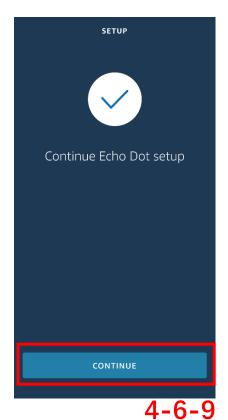

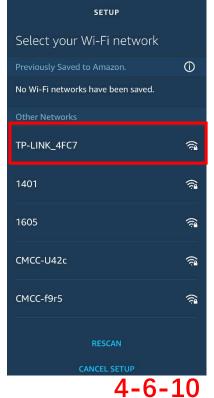

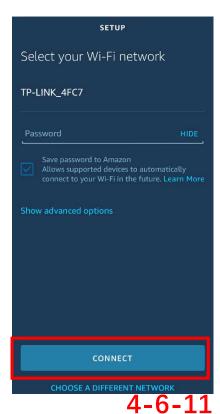

Preparing your Echo Dot
Please wait while we connect your Echo Dot to the Internet. This may take a few minutes.

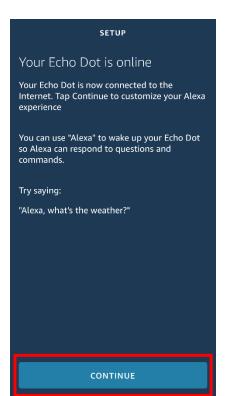





4-6-12

4-6-13

4-6-14



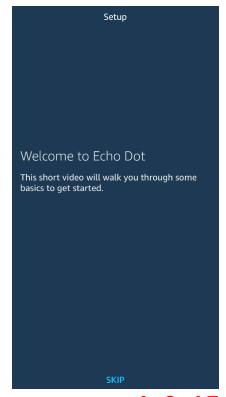

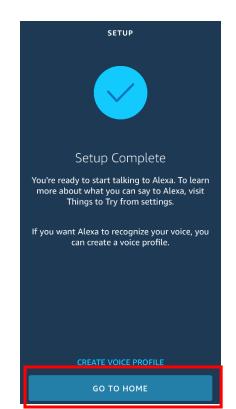



4-6-15


4-6-16



#### 4.7 Add lock to Alexa

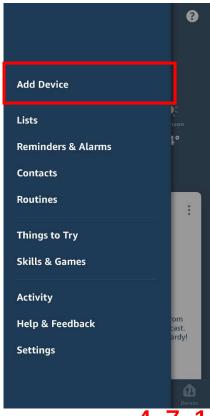

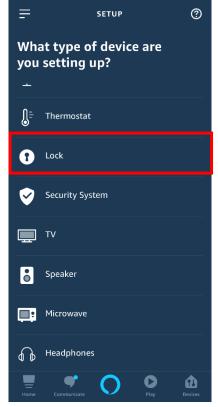


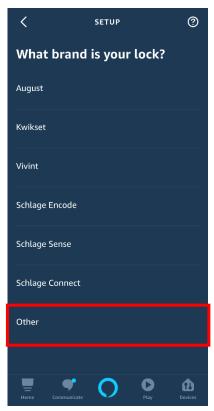



4-7-1

4-7-2

4-7-3

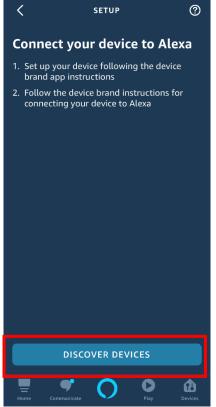

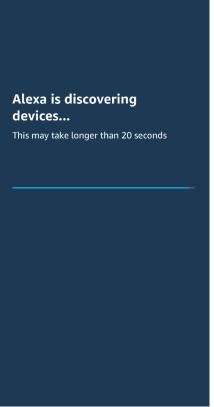

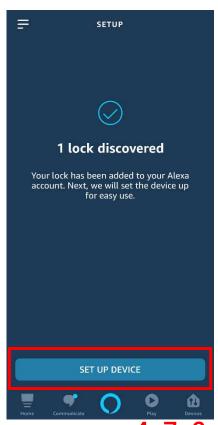


\_**7**\_/

4-7-5

4-/-6





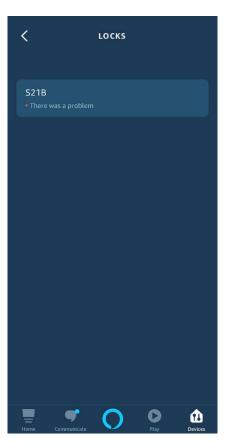


4-7-7


4-7-8


4-7-9



4.7 When the configuration is complete, please click the "HOME" door lock you just added click the three-point icon in the upper right corner, add click the "unlock by voice" button to enter the configuration page.

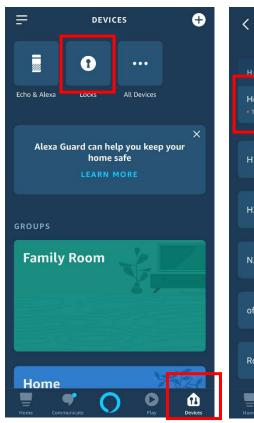

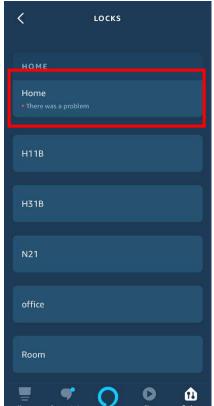

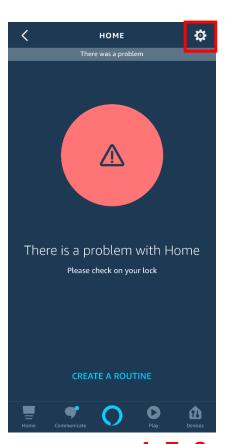

4-7-1

4-7-2

4-7-3




4.8 Set the voice confirmation code and then verify the account.


Then the function of "Unlock by voice" will be automatically enable and the configuration is finished!

You can start use it!

For example: Say to Alexa : Alexa, unlock Home!

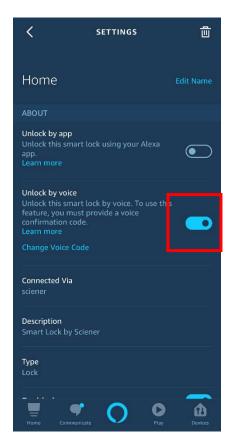



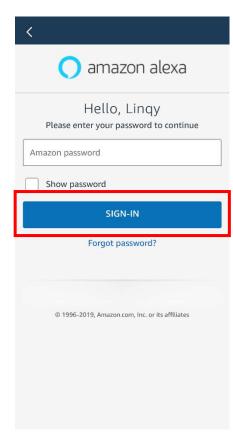

4-8-1

4-8-2

4-8-3

