



Lock Better. Live Better.

Smart Lock User Manual




Special Attention:




1. Please keep mechanical keys outdoor, just in case keys lock in doors.
2. Please change the batteries when notified by low wattage alarm.
3. Read this manual carefully before installation, and keep it for future reference (warranty).

1. Lock Structure


G11B- Glory series

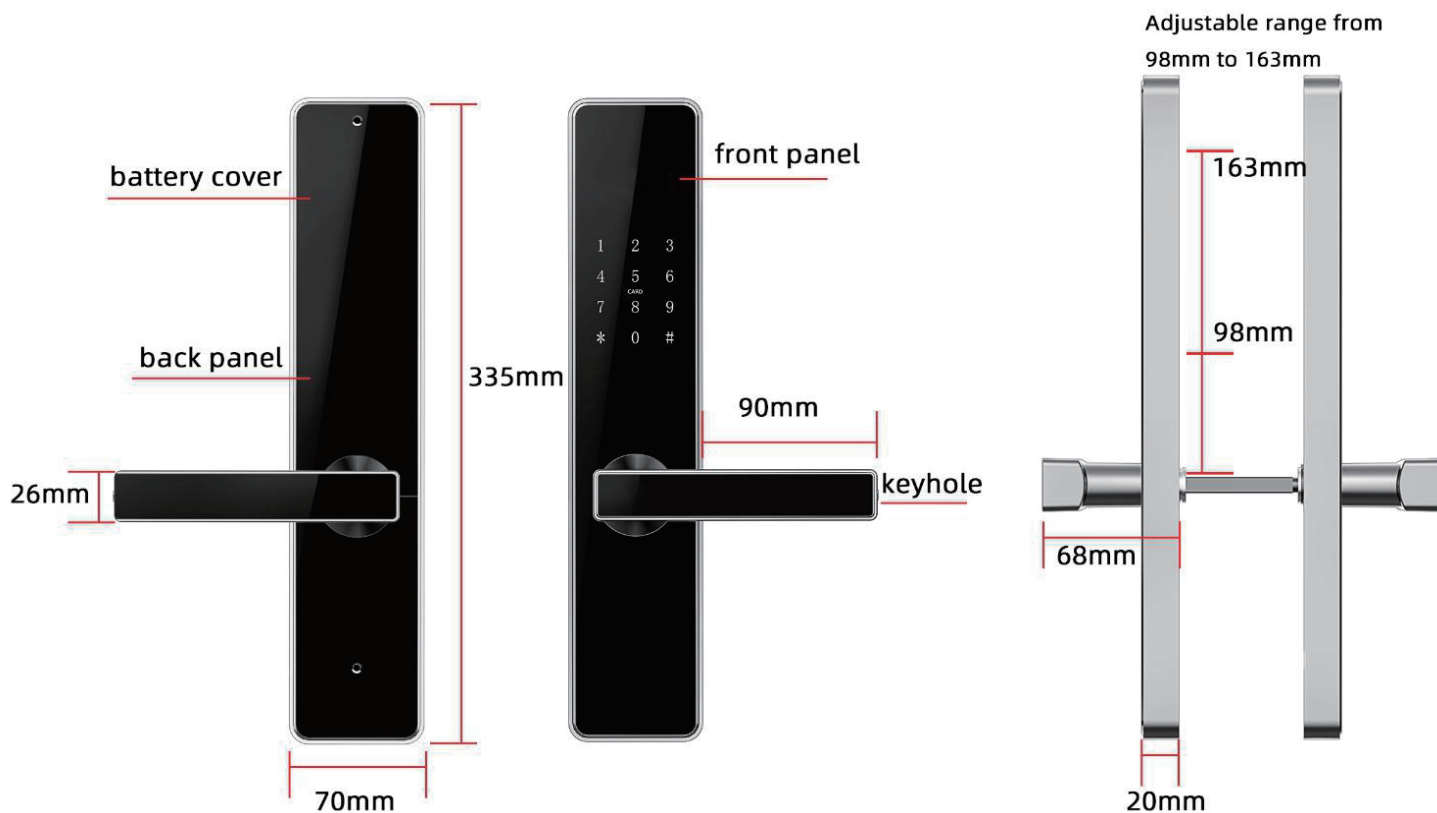

H31B- Handy series

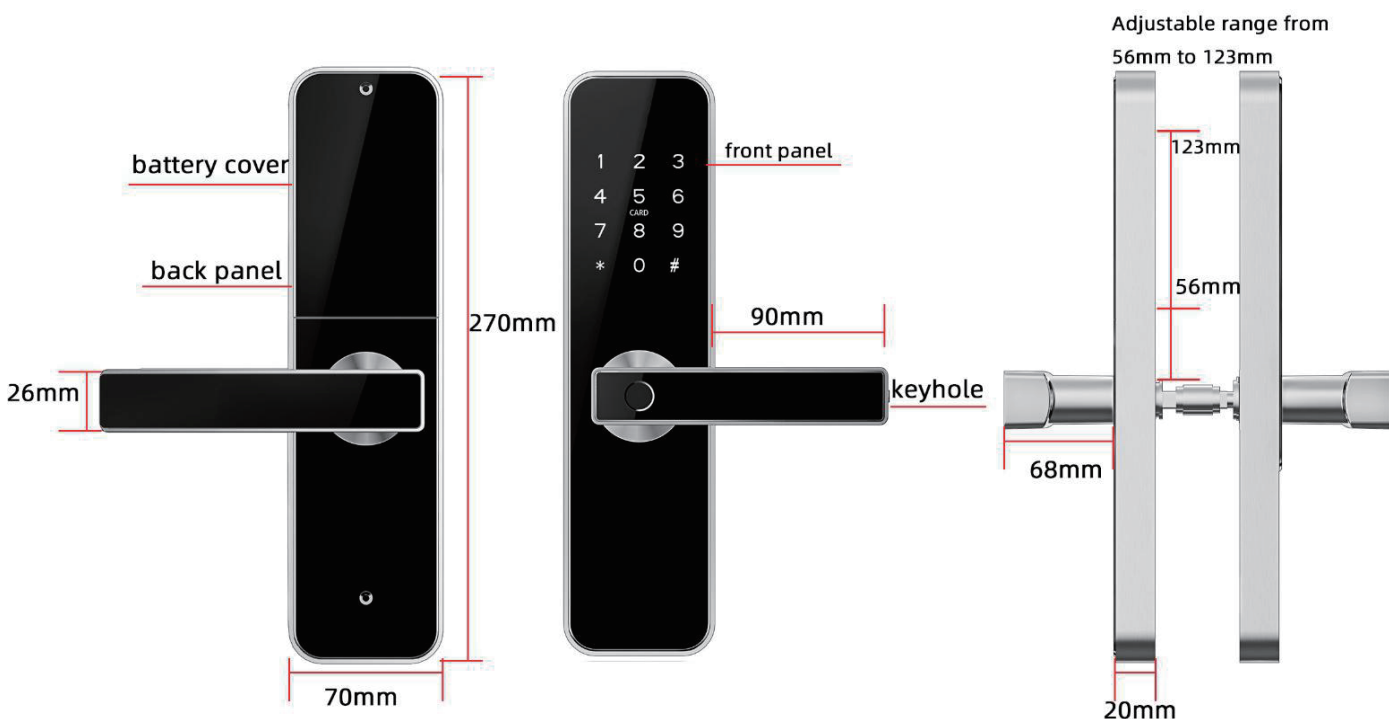


2. Mortise

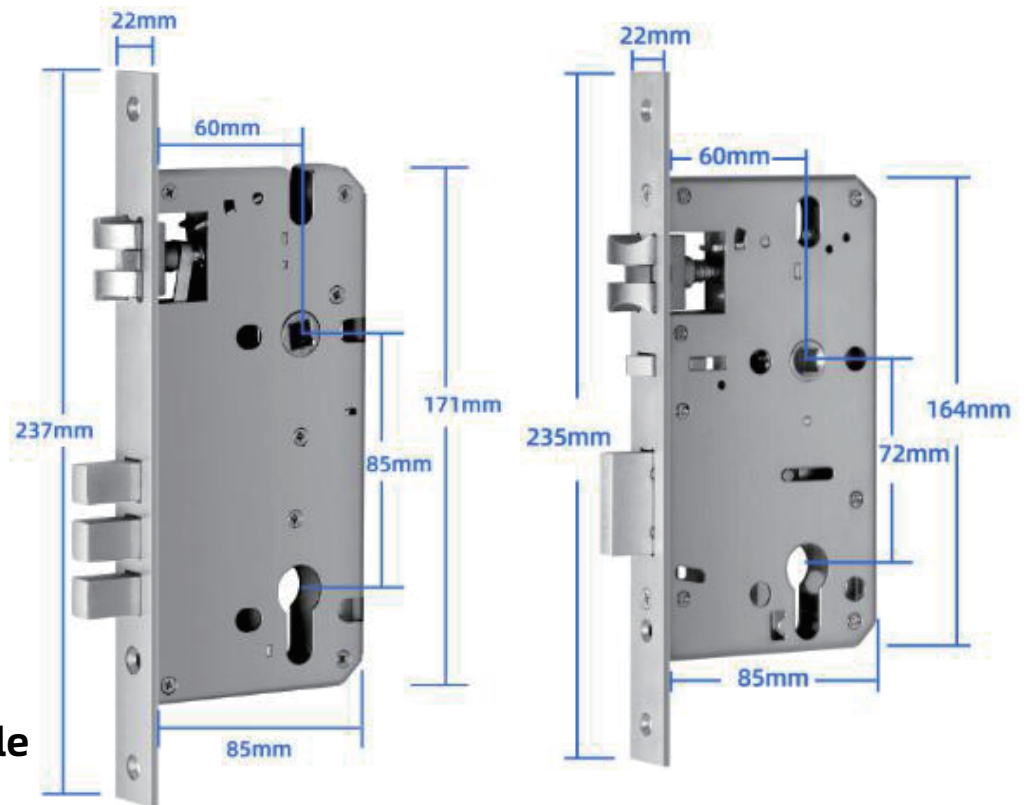


3. Installation

3.1 Turn the handle


Notice: Adjust the handle according to the direction you open the door

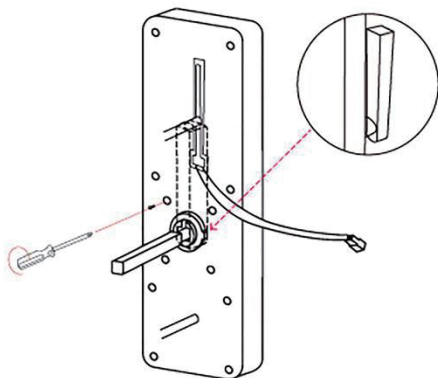


1. Loose Four Screws

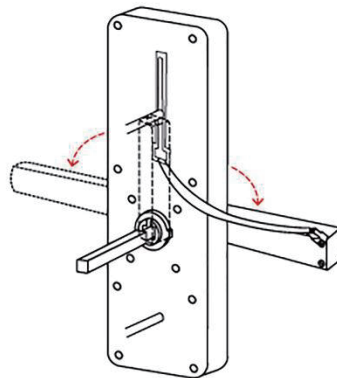


2. Left Open the Handle Toward the Left; Right Open the Handle Toward the Right.

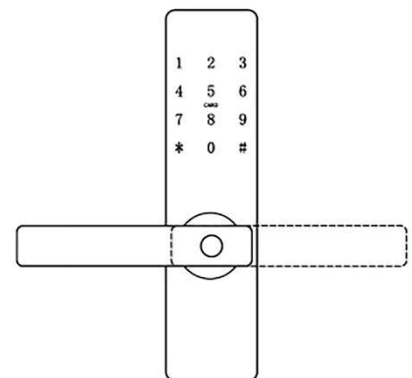


3. Reinstall the Screw After Adjusting the Direction

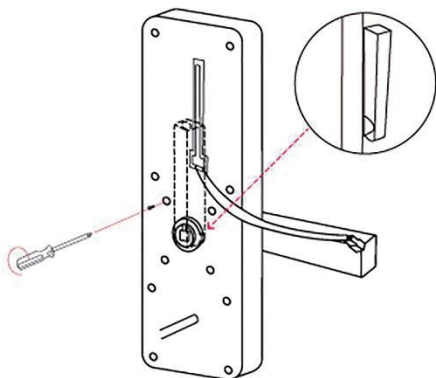

1. Loose Four Screws





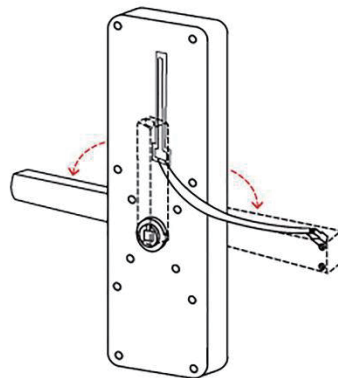


2. Left Open the Handle Toward the Left; Right Open the Handle Toward the Right.

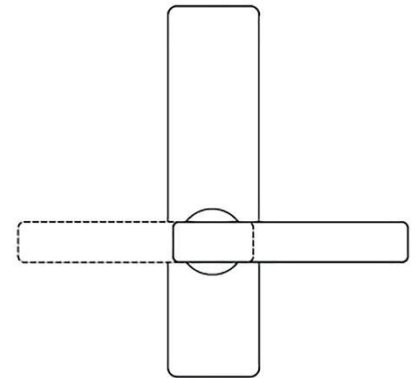

3. Reinstall the Screw After Adjusting the Direction

3.2 Installation Diagram
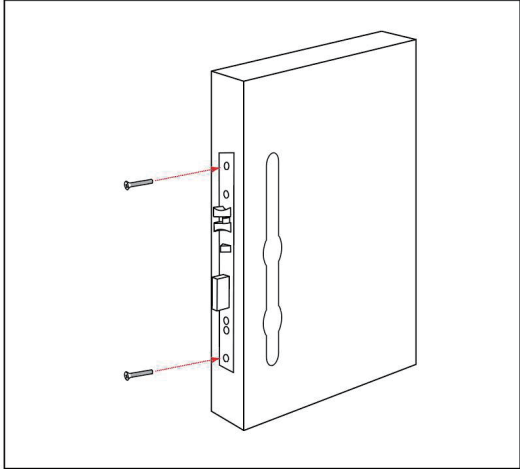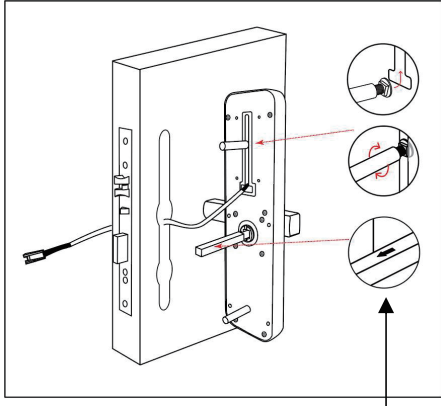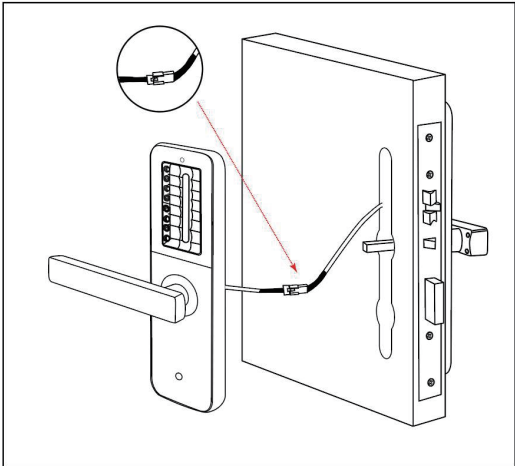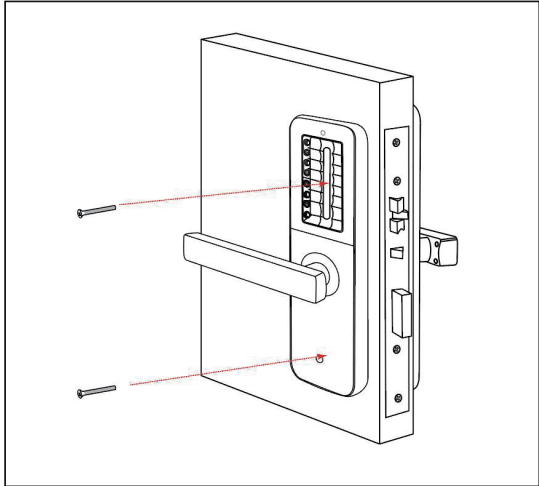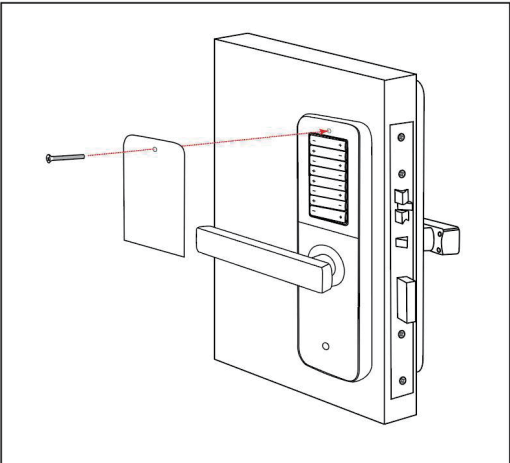
<p>Step 1 Install Mortise</p>	<p>Step 2 Install Sliding Screw Casing and Fixed Front Panel</p>
	 <p>The screw casing place is adjustable from 55mm to 100mm far from the square shaft.</p> <p>Depending on the location of the hole-drilling or the old door hole.</p> <p>Keep arrow direction (as shown in image) always upward.</p>
<p>Step 3 Connect Front and Back Panels</p>	<p>Step 4 Install Back Panel</p>
	
<p>Step 5 Install the Battery</p>	
	

4.Specifications

Suitable for Models	G11B/A & H31B/A
Materials	Zinc Alloy
Front Panel Lock Size	335*70*20mm(G11)- 270*70*20mm(H31)
Back Panel Lock Size	335*70*20mm(G11)- 270*70*20mm(H31)
Lock Weight	3KG
Unlock Methods	Bluetooth Wifi - Gateway(option) Fingerprint (G11B & H31B ONLY) Password Card Mechanical key
Colour	Silver Black
Doors Applicable	Aluminum door Wooden door Sliding door Swing door
Working Voltage	6V/ 4X AA Batteries
Door Thickness to Fit	30-80mm
Data Capacity	Unlimited
Working Temperature	-25°C-60°C
Working Humidity	20%-90%
Low Wattage Alarm	Less than 4.5V

System Initialization

Open the cover plate of the back panel, then long press the "Reset" button on the back panel for 5s, press "000#", and the initialization is complete



5.Registration



5.1 Connect lock to the phone

- 1) Android Devices, please scan the left QR code above
- 2) Apple Devices, please scan the right QR code above
- 3) You can also search for AUSLOCK in the APP store or Google play for download
- 4) Register a new account (phone number or email) or login with an existing account.
- 5) Touch the locks screen to light up the buttons, on App click "+ Add Lock"
- 6) The lock nearby will appear on the phone screen, Click "+"
- 7) Re-name the lock
- 8) The lock is added successfully

Login Register

Phone number/Email

Password

Login

Forgot Password?

1-1

Phone Email

Country/Region Australia+61

Enter your Phone number

Password between 6-20 chars

Confirm Password

Verification Code Get Code

Register

1-2

Login Register


18620518667

Password


Login

Forgot Password?


1-3

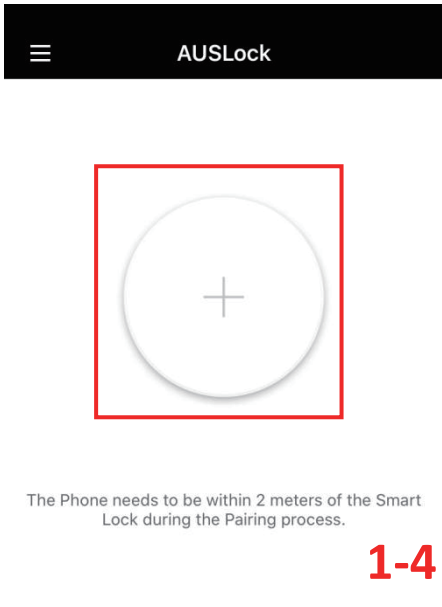


1-4

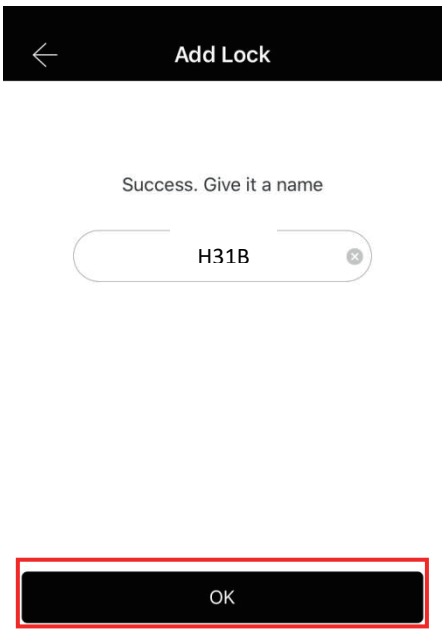


1-7

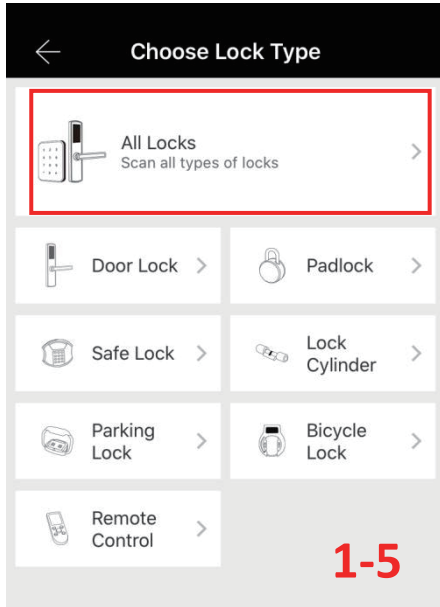

1-5

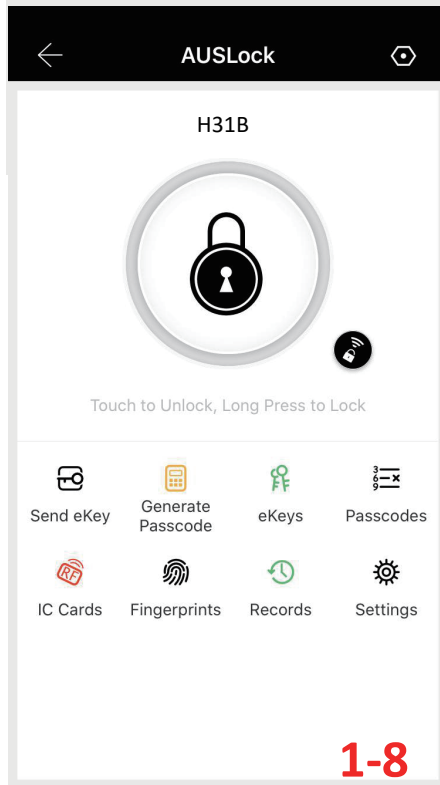


1-8

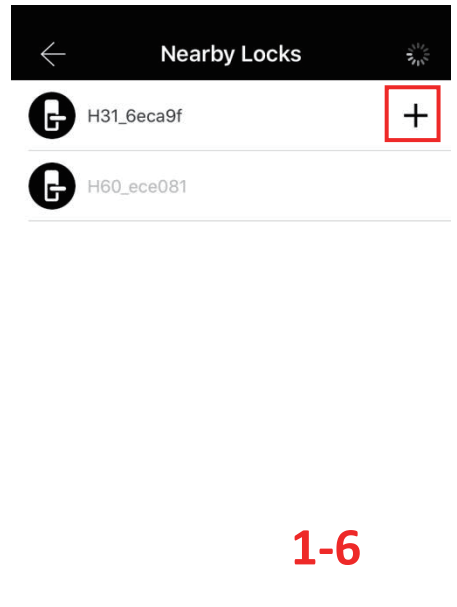 


1-6

5.2 User Management


5.2.1 Bluetooth management

After mobile phone and door lock connected, Click " " as shown in figure 2-1 to unlock. (Make sure the connected device is within 5 meters from the Smart lock)


5.2.2 Remote control management (Wi-Fi Option)

After confirming that your device and door lock are connected to the gateway, Click " " as shown in figure 2-1 to unlock. The lock can be unlocked and controlled remotely from any destination in the globe as long as a network connection is available. (How to set up the gateway to connect to your phone refer to step 5.3) Please make sure in the lock settings the "Unlock Remotely" is on, or else the symbol shown above will not appear.


5.2.3 e-Key management

Click on the " Send eKey " as shown in figure 2-1, you can send the eKey to other users of AUSLOCK APP to authorize Control (the receiver must download the APP and register an account) → Enter recipient's account of AUSLOCK, set the name and effective time of the eKey as shown in figure 2-2 → Send → The recipient's account has Bluetooth unlock permission.


5.2.4 The Admin password management

Click " Settings " as shown in figure 2-1 → See Basic → Admin Passcode as shown in figure 2-3 → input Passcode on the keypad of lock → "#" to unlock.



5.2.5 Dynamic password management

Click " Generate Passcode " as shown in figure 2-1 → figure 2-4 You can set the effective time and effective number of passwords → Generate password → Input password to unlock.

5.2.6 Unlock records






 
Click " Records " as shown in figure 2-1 → you can query your unlock record as shown in figure 2-5.

5.2.7 Fingerprint management (for G11B and H31B)

Click "  " as shown in finger 2-1 → Click "  " → Add Fingerprint → set the name and effective time of the fingerprint → Start → Place your finger on the sensor follow the instructions → Add fingerprint OK → Place your fingerprint on the sensor to unlock.

5.2.8 IC Cards management

Click "  " as shown in figure 2-1 → Click "  " → Add IC Cards as figure 2-6

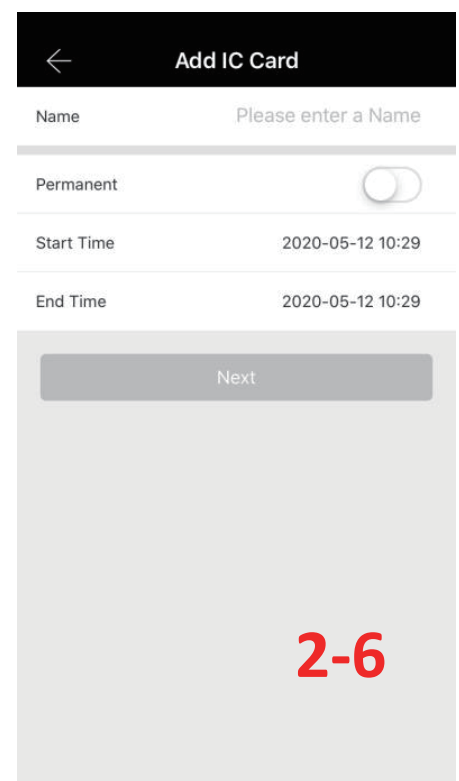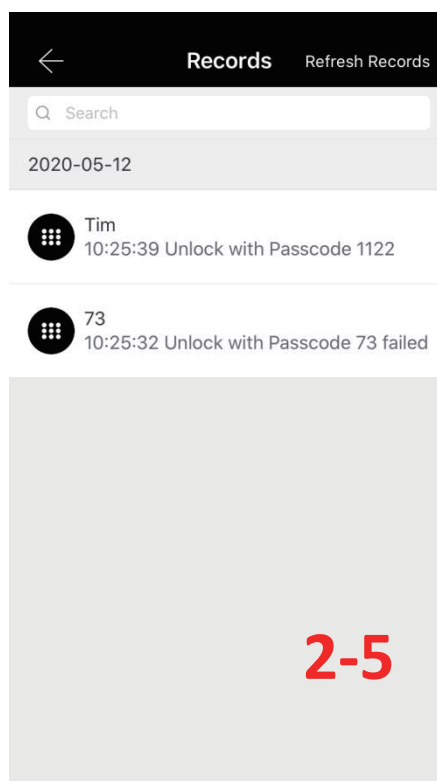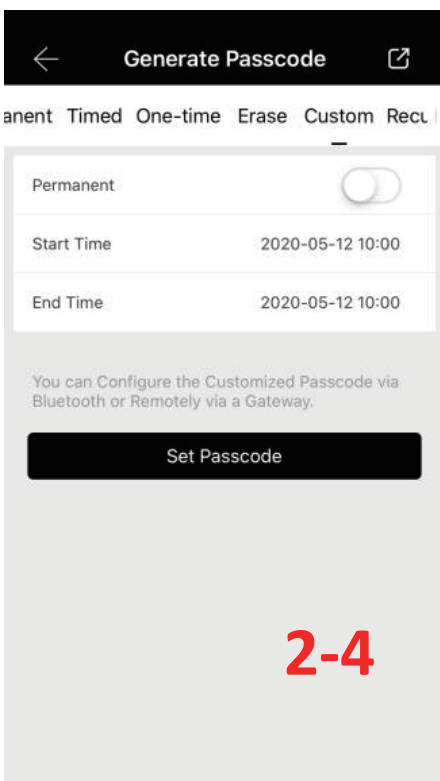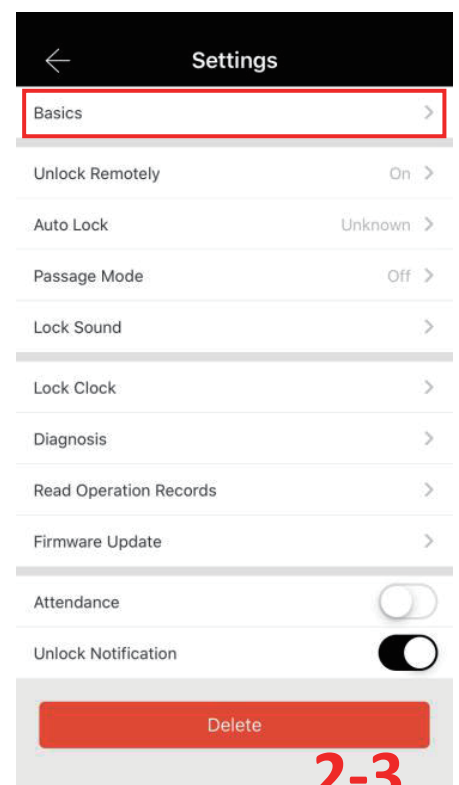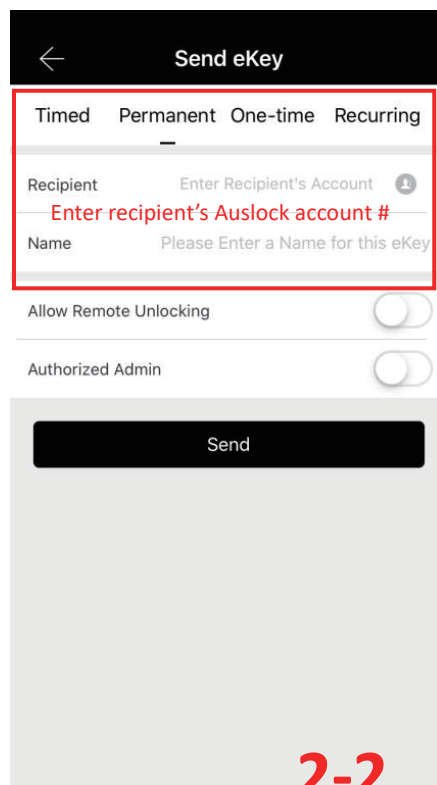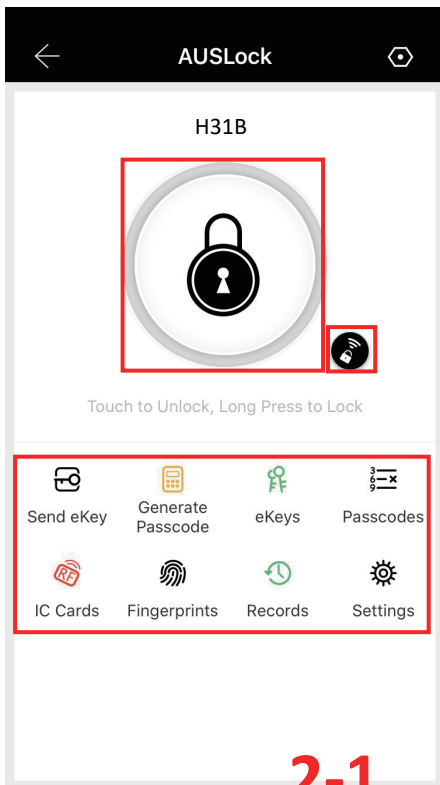




5.3 Add Gateway(Optional)

Light Status



When the gateway is powered on:

-  Light flashes alternately in red and blue:
Stand-by mode, ready for pairing
-  Blue light: Working mode
-  Red light: Network failure

Pair the Gateway with APP

1 Activate the APP




2 Press "☰"




3 Select [Gateway]



4 Select [G2]

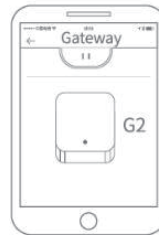

5 Plug in the gateway and power it on, while the light flashes alternately in red and blue

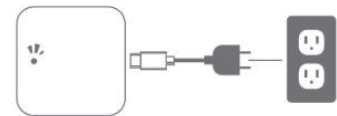

6 Press "+" sign



7 Add Gateway










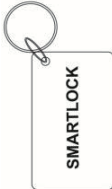




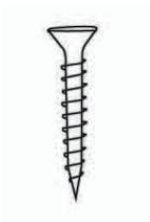


8 Select the network and fill in the password



9 Add complete

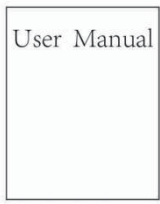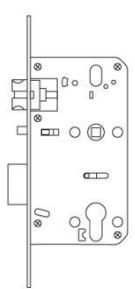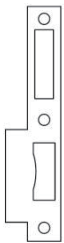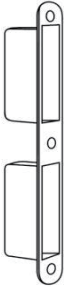⚠ Notice: If times out, please power off and try it again.

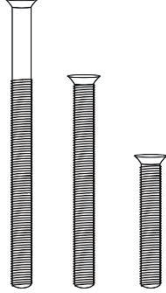6. Packing List

Picture				
Name	Front Panel	Back Panel	User Manual	Mortise
Quantity	1	1	1	1
Picture				
Name	Strike	Strike Box	Mechanical Key	Card
Quantity	1	1	2	3
Picture				
Name	Fixing screws 2	Sliding Screw	Fixing screws 1	Sliding Screw Casing
Quantity	4	2	3	2
Picture				
Name	Pointed screw	Waterproof rubber plate	Gateway (option)	
Quantity	4	2	1 (option)	

Guarantee



Lock Better. Live Better.

(To Validate warranty, below details must be filled by customer and emailed back to Auslock within 30 days or else Auslock may not offer full services (au@auslock.net))

Customer Full Name : _____

Customer Contact No. : _____

Place of Purchase (store) : _____

Purchase Date : _____

Product Name : _____

Product Model : _____

Note:

- 1) Please keep this card so that you can use it when you need warranty service.
- 2) We provide you with a one-year warranty from the date of purchase. Visit www.auslock.net
- 3) This warranty service is valid for customers in any country in the world.