



Lock Better. Live Better.

Models: A519 & A619

Door Lock Instruction ManualUSmart Go Version

 
Special Attention:

1. Please keep override keys out side of premises just in case you need to use them.
2. lock also has a power bank override on the front panel in case locks are inside.
3. Please replace batteries immediately once receiving any notification via lock or App

4.7.1 "Camera" sub-menu, Enter by press Door Bell or press ② button, view outside door status.

4.7.2 Enter the "File" sub-menu, to check pictures records.

4.7.3 Enter the "Settings" sub-menu for Camera system setting, press ①③ up and down to select the item need to be modified, then press ② to enter or confirm the modified item.
After the modification is completed, long press ② to exit the setting menu, and long press again to turn off the Camera.

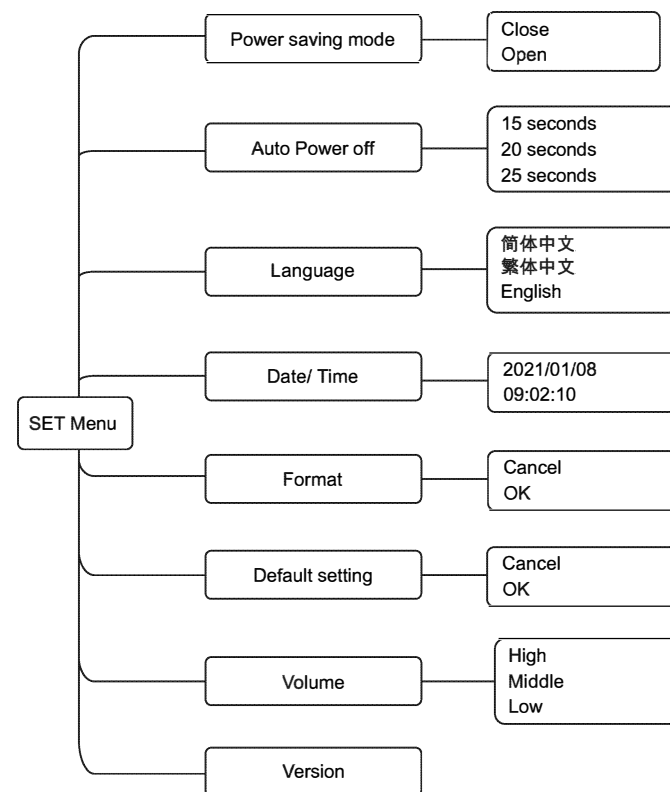

1. Advantages and specifications

- Space aluminum material.
- Support messy codes input.
- Bio-semiconductor fingerprint sensor.
- Unlocking ways: Face, palm vein, fingerprint, code, card, key and USmart Go APP.
- Continuously input 5 times wrong user, the system will alarm and lock 90 seconds.
- Please keep mechanical key outside room for emergency use.*

2. Technical parameters

Total Capacity	Max 300 users. No.001-009 are Admin users, No.010-300 are normal users.
Face & Palm Capacity	Max 100 users
Fingerprint Capacity	Max 100 users
Code & Card Capacity	Max 300 users
Power Supply	Lithium battery
Low Voltage Alarm	Voltage is below 6.5V
Back up power	Type C back up power interface

3. Functions and operations

3.1 Initial State

Any face, palm vein, fingerprint and card can unlock.

Initial unlock password is "123456".

Enter the setting system to add the first Admin password for your first time using.

3.2 Enter setting mode

Input "*" + "#" to enter setting mode. After that,

"#" will be regarded as "OK" or Function Key. "*" will be regarded as "Back".

3.3 Factory reset

*Note: The initial unlock password will be restored to "123456".

Way 1: Press the reset button on the back panel for 6 seconds, and press # to confirm.

Way 2: Press * + # + Admin# + 1 + 3 + 4 + 3 + # to confirm.

 
3.4 Lock functions setting

*Note: In the initial status, need to input Initial unlock password is "123456" and then add Admin password.

Input "*" + "#" or push the reset button on the back panel, input Admin code# to enter setting menu.

1. Local setting
2. Wireless setting
3. Motor setting

3.5 Below is the details of Functions Menu in different directories

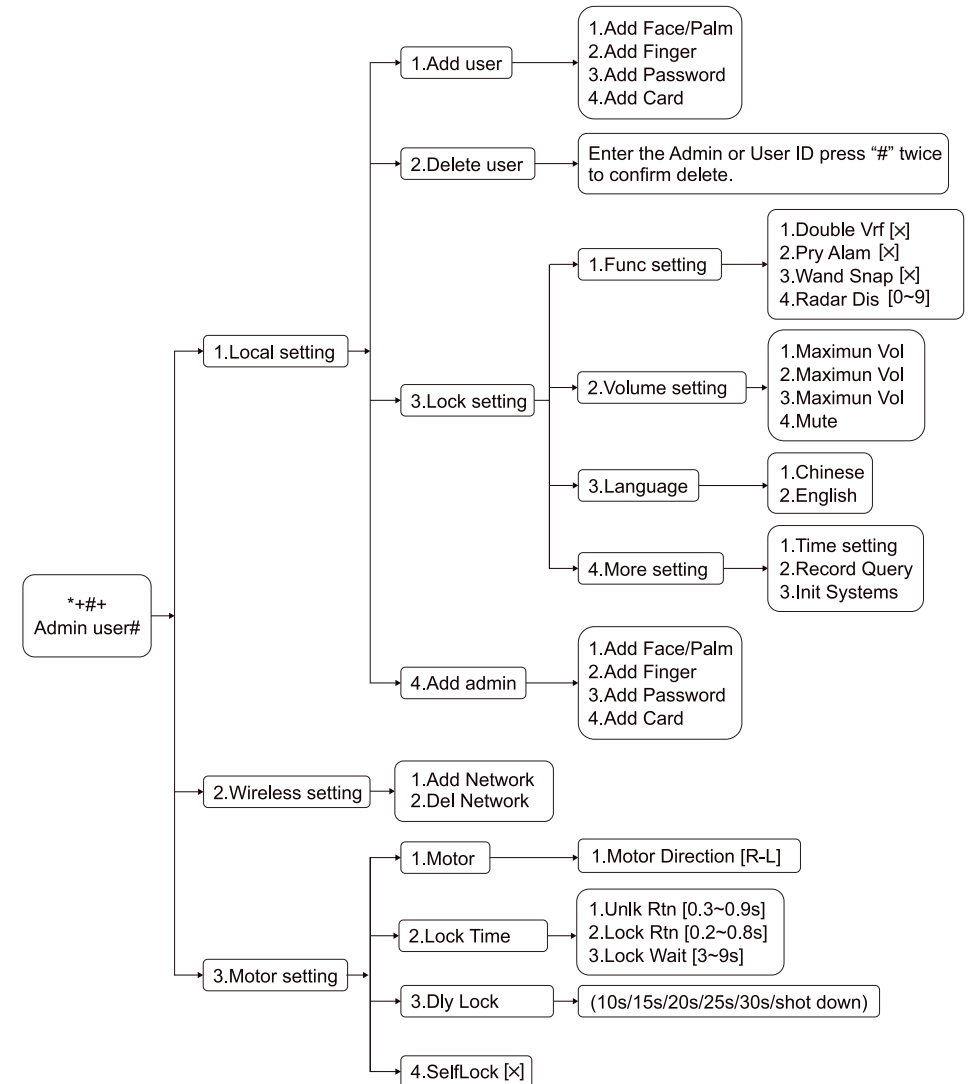


Remarks:

- There are up to 9 Admin users available in the lock.
- The password can be 6 to 12 digits.
- Register face user with different angle according to the voice prompt.
Add palm vein **1** time to register.
Place the fingerprint on the sensor for **4** times to register.
Input the password and press "#" to confirm for **2** times.
Read the card **1** time to add.

4. APP Instruction


4.1 Add door lock

 - 4.1.1 Download "Usmart Go" APP, regist and login.
- 4.1.2 Click "Add Device" or click "ADD" at top right corner to get into the adding page.
- 4.1.3 Choose "QR Code", connect via scanning the QR code includes Wi-Fi password.
- 4.1.4 Activate the lock, press "*"#+Admin user+2+1" to hear wireless pairing.
- 4.1.5 Tick "Confirm to hear the prompt tone for scanning the QR code", click "Start Connect".
- 4.1.6 Select a 2.4GHz Wi-Fi network, enter your Wi-Fi password.
- 4.1.7 Click "Next", put your phone 5-20cm from the camera and align the QR code and before you move away after hearing "Connecting network".
Wait for connection.
- 4.1.8 Device added successfully.

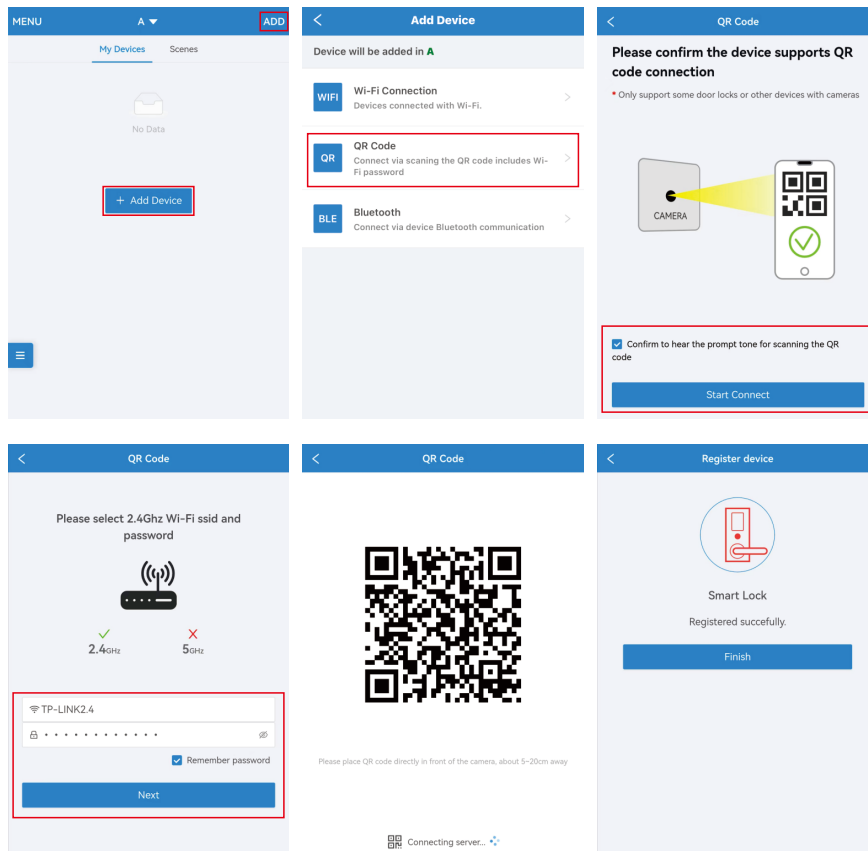


4.2 Remote unlock via APP

 - 4.2.1 Set remote unlock password.
Menu - My setting - Set security password

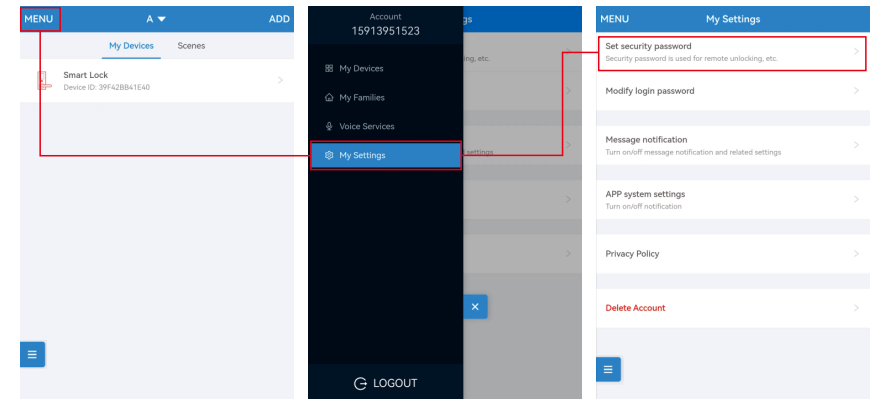


 - 4.2.2 Request remote unlock by press Door Bell on the lock, click "Pick up" to check the real time status in front of the door.
Switch the Camera on the mobile phone APP by click the Screen.
Active the Camera on the lock directly by click "Tap to view" on the phone.

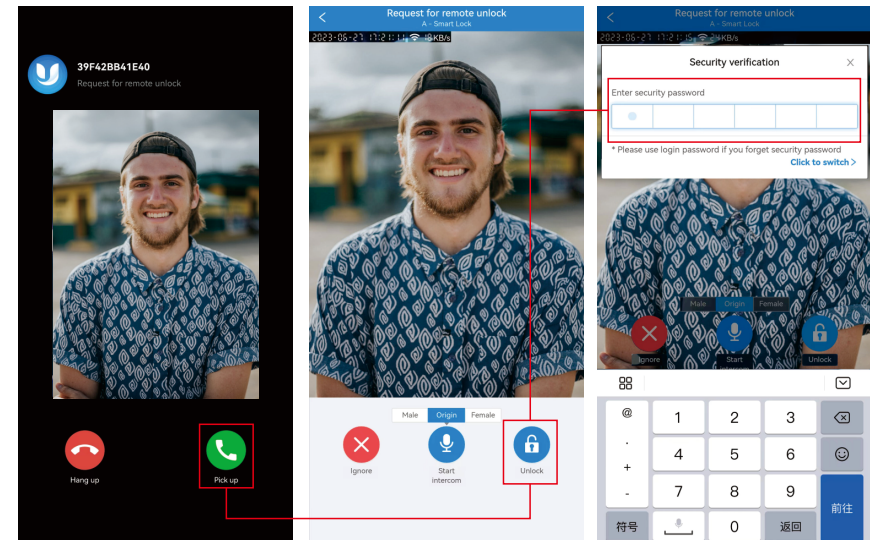


4.3 Human wandering alarm

 When the human body sensor recognizes 3 times invalid users, the APP will prompt human wandering alarm.

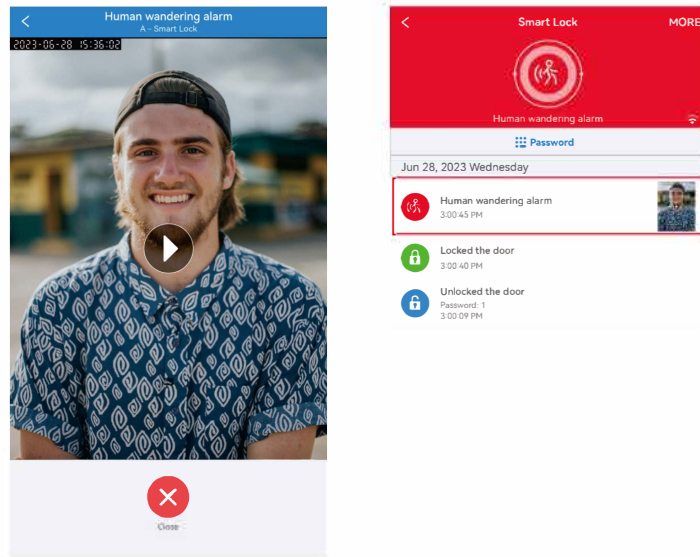

4.4 Member management

 
*Note: Add family member via USmart Go account.

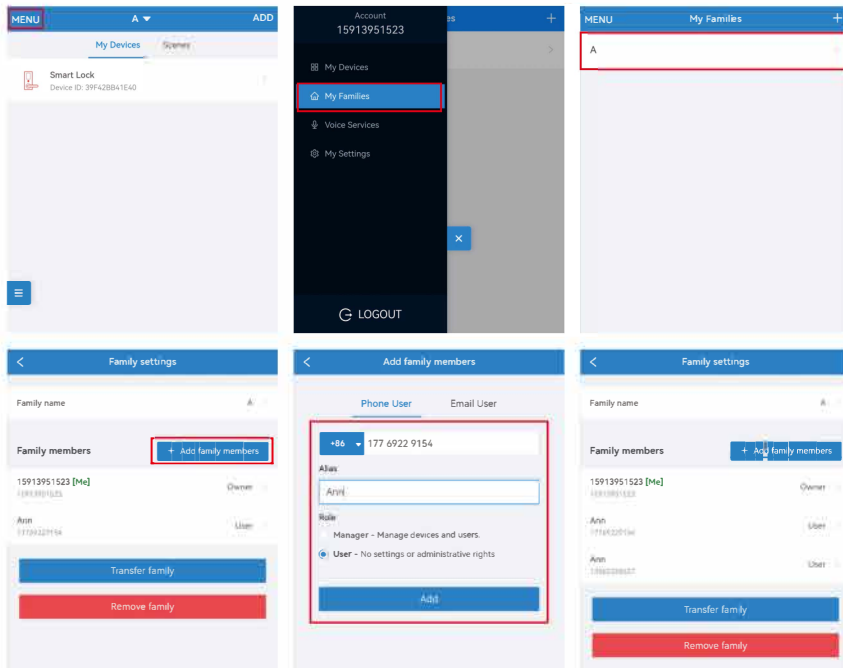

4.5 Camera Operating Instructions

Please insert memory card on the camera for recording function.

 There have 3 buttons on the back panel for Camera operation.

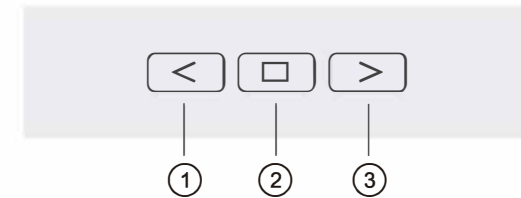

Remark:

- ① Left / Up
- ② Power button / Turn off / OK
- ③ Right / Down

4.6 Camera Operation

To switch the Camera

Activate the monitor by press ②


Press ② change to view front camera, back camera and both camera.

4.7 Function setting

To enter Menu

Way 1 : Press the doorbell on the front panel to turn on the Camera, press ③ to enter the Menu.

 Way 2 : Press ② on the back panel to turn on the Camera, press ③ to enter the Menu.

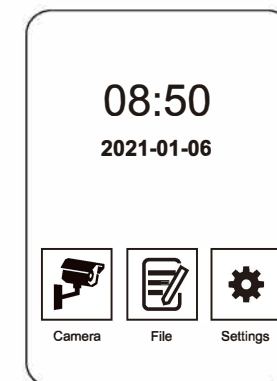

AUSLOCK

Lock Better. Live Better.