

visp

The Elixir Mixer

Rechargeable Whisk Bottle

Product Guide

How to use your Elixir Mixer:

1. FILL IT

Fill the bottle with liquid up to the top of the sleeve window / max fill indicator line. Then add the desired amount of powdered ingredients. Note that, for iced beverages, only add ice **after** mixing is complete.

2. WHISK IT

Screw on the lid. For cold beverages, close the flip cap. For hot beverages, leave the flip cap open. Press the power button and whisk away! For a more powerful mix, press the power button a second time. To cancel a mixing cycle, press the power button a third time.

If you added more than 2 tbsp or 30 g of powdered ingredients, your drink may require an additional mix. Do not use your Elixir Mixer for more than 24 consecutive cycles without a break as it may impact the life of the battery.

3. DRINK IT

In 15 seconds, your beverage will be ready. Pop open the flip cap, sip and enjoy. Use caution with hot beverages.

Warnings:

1. Do NOT use with carbonated liquids. Pressure build up can cause the bottle to burst, resulting in possible injury.

2. Do NOT use with liquids above 176°F.

3. Do NOT whisk hot beverages or ingredients that may cause pressure with the flip cap closed. The flip cap **must** be open when preparing hot beverages. Failure to open the flip cap can cause the bottle to burst, resulting in possible injury. Do NOT overfill the bottle in order to prevent spray or splatter that may cause injury.

4. Use caution mixing hot beverages. Keep hands away from hot glass and use the silicone sleeve and lid for carrying. Allow sufficient time for beverages to cool before drinking and enjoy hot beverages with caution.

5. Keep away from children and pets. Do not leave the product unattended when in use. Do not allow children to operate the product.

6. Do NOT tamper with the electrical components. Do NOT attempt to repair, replace, alter, disassemble or modify the components of the product, including the battery or internal circuitry. Incorrect reassembly or repair as well as tampering with electrical components could cause a risk of fire, electric shock or injury.

7. Do NOT use your Elixir Mixer with ice or large solids in the bottle. Damage to the Elixir Mixer may result. For iced beverages, mix the liquid and powdered ingredients, remove the whisk, and then add ice.

8. Do NOT microwave.

9. Do NOT use the product if the lid, flip cap, glass bottle or whisk are cracked or damaged in any way.

10. If the charging cord is damaged, do NOT attempt to charge the product.

Other Tips for Use:

- Wash and charge your Elixir Mixer before you use it the first time following the instructions in this booklet.
- Prior to each use, inspect the product for cracks or damage.
- For a smoother texture, try mixing the powdered ingredients with a small amount of liquid. Once the powdered ingredients have combined with the small amount of liquid, add the remaining liquid to the top of the sleeve window / max fill indicator line and whisk as usual.

- Our whisk is made of surgical grade stainless steel and designed to remain in the bottle while you drink.
- If you notice any cracks or damage to the lid, flip cap, glass bottle, whisk, or charging cable, do not use the product and contact customer care.
- Visit www.drinkvisp.com for the most up-to-date version of this instruction booklet.

**For questions or support,
please contact customer care
hello@drinkvisp.com**

Cleaning and Maintenance

Wash your Elixir Mixer before the first use and immediately after every use.

Part / Accessory	Cleaning Method
Lid	Hand Wash Only
Whisk	Dishwasher Safe & Hand Washable
Glass Bottle	
Silicone Sleeve	

Warning: Do not submerge Elixir Mixer cap in liquids.

Warning: Always remove the charging cable and make sure the USB-C port cover plug is securely in place before washing the lid.

Warning: Do not use abrasive cleaners or harsh scrubbers to clean the lid. This will damage the finish.

Warning: Do not allow liquids to enter the charging port. If liquids enter the charging port immediately dry the area and do not use the product or charge the product until fully dry.

QUICK CLEAN

Fill the bottle with warm water, add dish soap, secure the lid, and whisk. Discard soapy water. Rinse the bottle and lid with clean water. Ensure the charging port remains dry. Wipe all parts dry with a clean cloth.

DEEP CLEAN

Place bottle with sleeve and detached whisk on the top rack of your dishwasher. Run the dishwasher with a normal cycle. Hand wash lid and drinking area separately.

WHISK DETACHMENT

To detach the whisk from the lid, grasp the plastic whisk joint and pull to disconnect. Never yank the whisk head to detach. Handle with care.

STORAGE



The Elixir Mixer can be stored in a cupboard like any other bottle. Store it with the lid loose.




Scan for a Cleaning Demo!

The Elixir Mixer

PRODUCT FEATURES

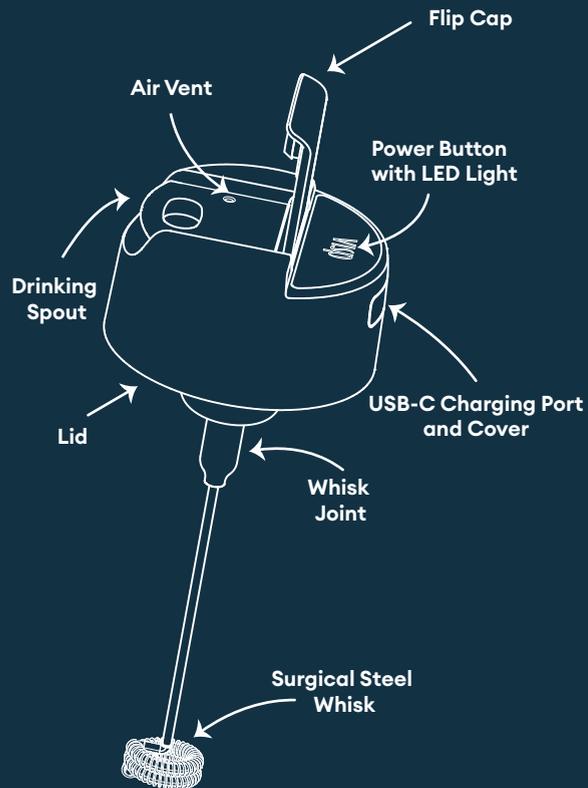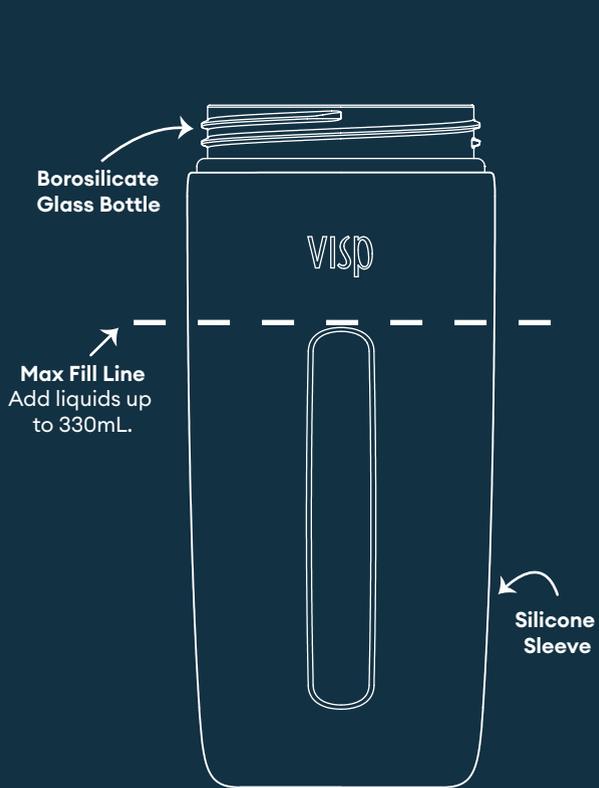

The Controls

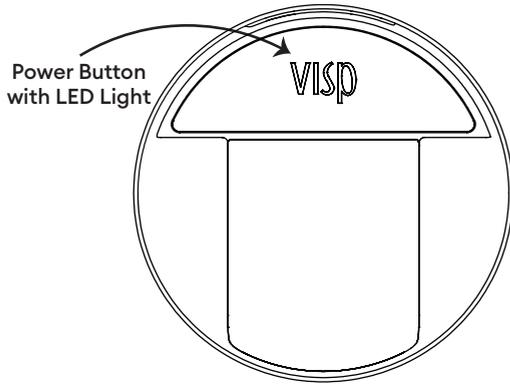

POWER

Press the power button to turn on. For more powerful whisking, press the power button a second time. The device will turn off automatically after 15 seconds. You may cancel a mixing cycle with a third press.

DEVICE MODES

The LED light will turn on to indicate the product is in use.



Normal Mode
Breathing White Light



Low Power Mode
Breathing Red Light

BATTERY STATUS

To check battery life status, press and hold the power button for 2 seconds.




Battery Above 25% Full
Blinking White Light



Battery Below 25% Full
Blinking Red Light

Charging Your Elixir Mixer:

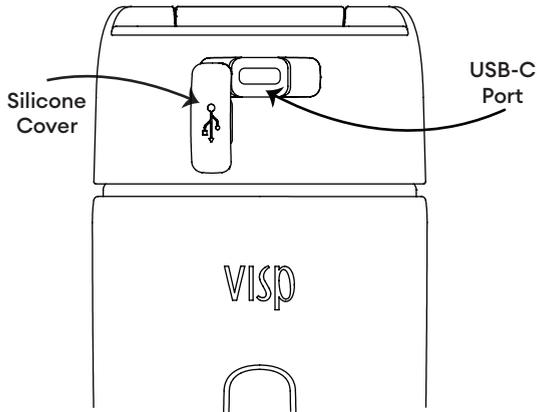

CHARGING MODES



Charging
Steady Red Light



Full Battery
Steady White Light



Safety Mode (Water in Port)
No light. Disconnect from power immediately.

Take the lid off your bottle and gently open the silicone USB-C cover. Then with your Visp charging cable, plug the USB-C connector into the lid. Plug the USB connector into a compatible USB wall charger or laptop USB socket until the battery is fully charged. A full charge takes about 1 hour.

It is recommended that you only use the charging cord provided by Visp to charge your Elixir Mixer. Do NOT use or drink out of the product while it is charging.

Warning: Do not attempt to charge the product unless it is fully dry. Do not charge the product near water or with a beverage inside the bottle.

Additional Safeguards

When using your Elixir Mixer, basic precautions should always be followed, including the following:

1. Please read all instructions.
2. Avoid contact with moving parts. Handle with care.
3. Use the product only for its intended use.
4. Do not use any accessories or attachments not authorized by Visp. The use of attachments not recommended by the manufacturer may result in damage and possible injury.
5. The Elixir Mixer lid is meant to be used exclusively with the bottle provided. Do not operate the lid in containers not authorized by Visp.
6. Always operate the product with the lid fully screwed on to the bottle. Do not operate the product with the lid disconnected from the bottle.
7. Always operate the product with the sleeve provided on the bottle.
8. Only operate this product with thin powders and liquids. Do not mix viscous, expanding mixtures such as cake or pancake batter.
9. If this product is not operating normally, do not continue use and contact us at hello@drinkvisp.com

**Save these instructions,
household use only.**

Disclaimer: Your use of this product is at your own risk. You have read this instruction booklet explaining these risks, and you assume and accept any and all risks that may be associated with the use of this product, including, but not limited to, the risk of property damage or loss, and/or serious injury (including electric shock or death).

Visp is not liable for any direct, indirect, incidental, or consequential damages incurred from use of this product.

Visp reserves the right to revise this instruction booklet from time to time without notifying any person of such revisions or changes. The current version of the instruction booklet will be available on the website at www.drinkvisp.com. The product model may be changed without notice at any time at the discretion of Visp.

Disposal (US based customer only): The Elixir Mixer lid contains a rechargeable lithium-polymer battery, and the lid containing the battery must be disposed of properly. Do not remove the battery. Do not dispose of the product or battery in fire or allow any contact with fire. Dispose of the battery in accordance with all applicable laws. Contact your local officials for information regarding the disposal of the product containing the battery.

HI! WE'RE **visp**

Questions? Let's Chat!
hello@drinkvisp.com