



# Creek

Magnetic Cable Cover

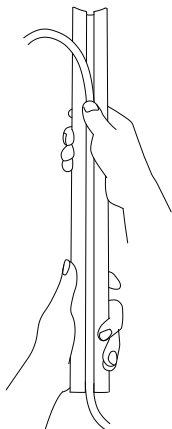

Press Tenon's power cord into the groove of Creek.

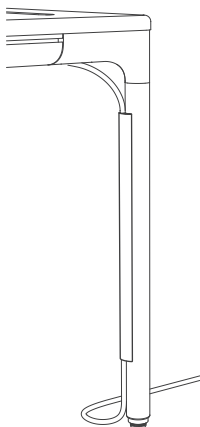

Creek can be magnetically attached to Tenon's leg. Up to three for each leg.