 




Gravity Fold Stroller Instruction Manual

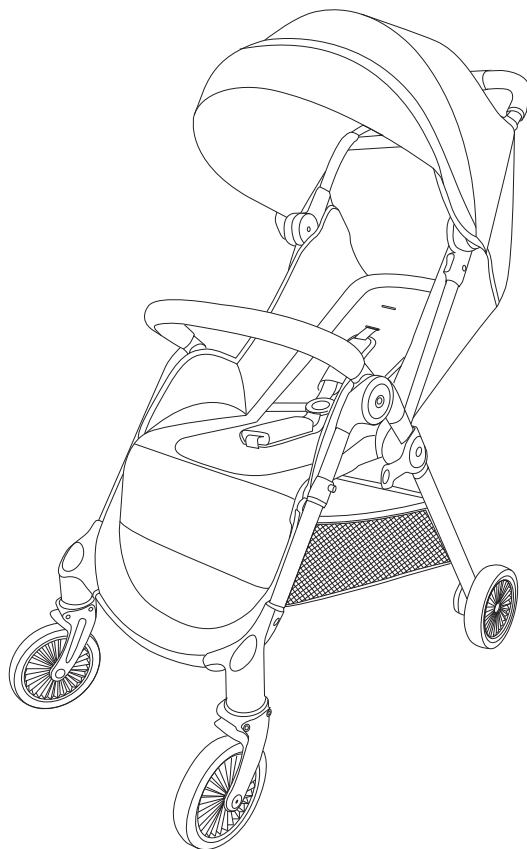

Model: BR-C760

IMPORTANT!

**Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTIONS FOR FUTURE USE.**

Contents

SPECIFICATIONS - - - - -	02
PARTS LIST - - - - -	03
ASSEMBLING THE STROLLER - - - - -	04
USING THE STROLLER - - - - -	07
FOLDING THE STROLLER - - - - -	13
UNFOLDING THE STROLLER - - - - -	15
MAINTENANCE - - - - -	16
CARE AND CLEANING - - - - -	18

WARNING

Please follow all of these instructions to ensure the safety of your child. Failure to follow these instructions and/or warnings could result in serious injury or death. Keep these instructions for future reference.

WARNING: To avoid serious injury from falling or sliding out, always use the safety harness and ensure that the child is properly positioned according to these instructions.

WARNING: Never leave a child unattended.

WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

CAUTION: This stroller is designed for one child only. Use with more than one child may cause an unbalanced condition which can injure/harm your child.

- This stroller's maximum weight capacity is 50 lb (22.7 kg), and it is recommended for a child above 6 months old or no taller than 40 in (101cm). Additional weight will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- Purses, shopping bags, parcels, diaper bags, or accessory items may change the balance of the stroller and cause a hazardous, unstable condition.
- Before putting the child in or taking the child out of the stroller, as well as when it is stopped, ensure that the brake is securely locked.
- The maximum weight that can be carried in the storage basket is 4.4 lb (2kg). Excessive weight may cause a hazardous unstable condition to exist.
- The maximum weight that can be carried in the backside pocket is 1 lb (0.5kg). Excessive weight may cause a hazardous unstable condition to exist.
- The maximum weight that can be carried in the cup holder is 1 lb (0.5kg). Excessive weight may cause a hazardous unstable condition to exist.
- NEVER use the stroller on stairways or escalators.
- NEVER use the stroller with roller skates, in-line skates, skateboards, or bicycles.
- NEVER allow your stroller to be used as a toy.
- To clean use ONLY MILD household soap or detergent and warm water on a sponge or clean cloth.
- Check your stroller for loose screws, worn parts, torn material, or stitching regularly. Replace or repair parts as needed.
- Discontinue use of stroller should it malfunction or become damaged.


IMPORTANT! To ensure the safe operation of your product, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts, or sharp edges. NEVER use if any parts are missing or broken.


IMPORTANT! Adult assembly is required.

SPECIFICATIONS


① Canopy	⑥ Fold Latch
② Fold Button	⑦ Storage Basket
③ Guardrail	⑧ Cup Holder
④ Safety Harness	⑨ Backside Pocket
⑤ Foot Support	⑩ Brake

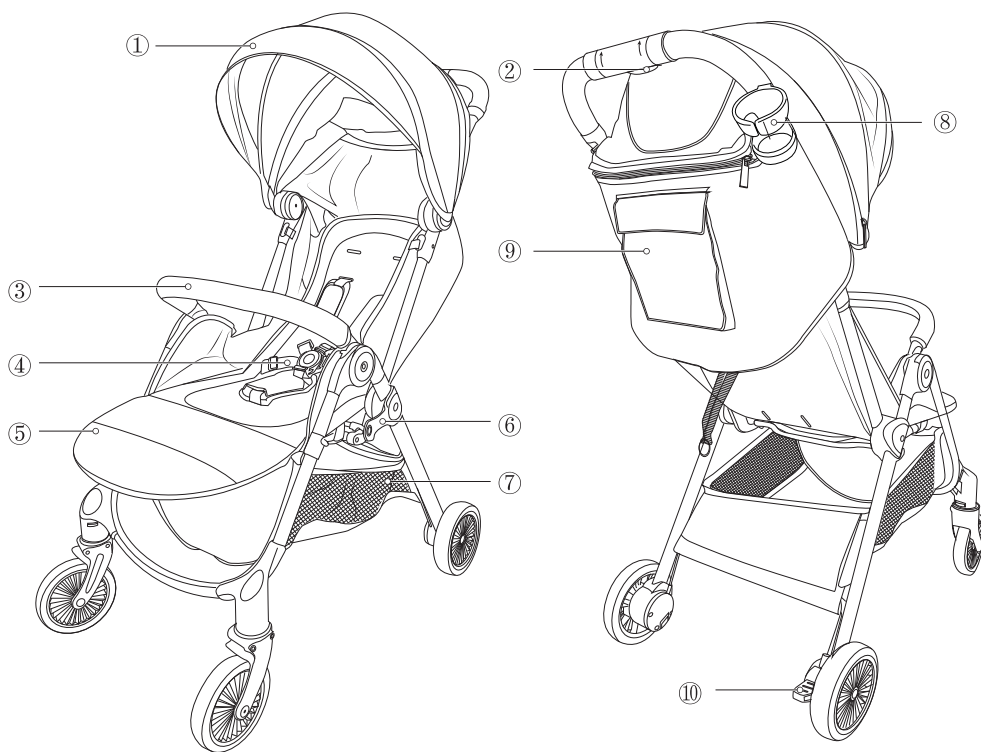


PARTS LIST

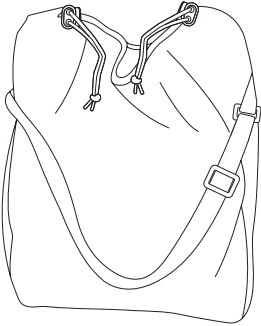


Carry Bag

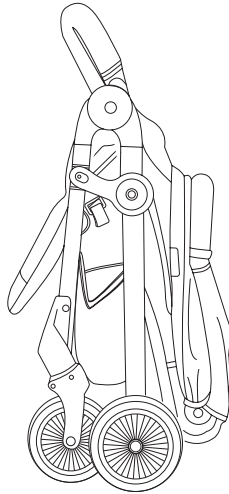 


Stroller

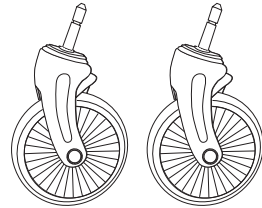 

Front Wheels

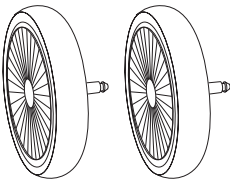

Rear Wheels

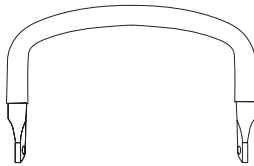

Guardrail



Cup Holder


⚠ The product includes the above parts, please check carefully before assembly, DO NOT use the product if any part is missing. ⚠

ASSEMBLING THE STROLLER


Step 1.

Unfold the stroller as depicted:


- A) Lay the stroller down. Unlock the fold latch by pulling it outward.
- B) Press the Fold Button on the top handle and rotate the top handle forward.
- C) Pull upward on the stroller's top handle to extend the frame.
- D) Release the handle to let it lock into position. You'll hear two "Clicks" when securely extended.

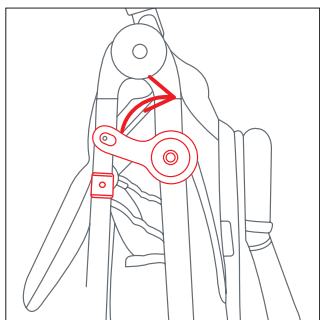

Step 1-A

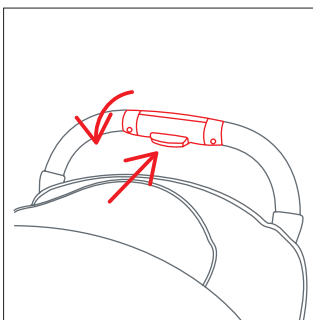


Step 1-B

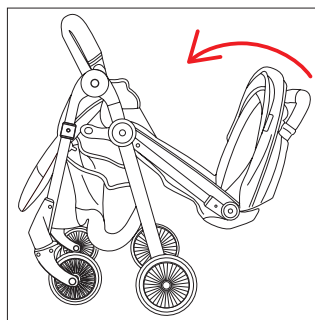

Step 1-C

⚠ WARNING: The stroller MUST be fully extended and locked into position before use.

⚠ WARNING: DO NOT unfold the stroller with children nearby. Take care when unfolding the stroller to prevent finger entrapment.

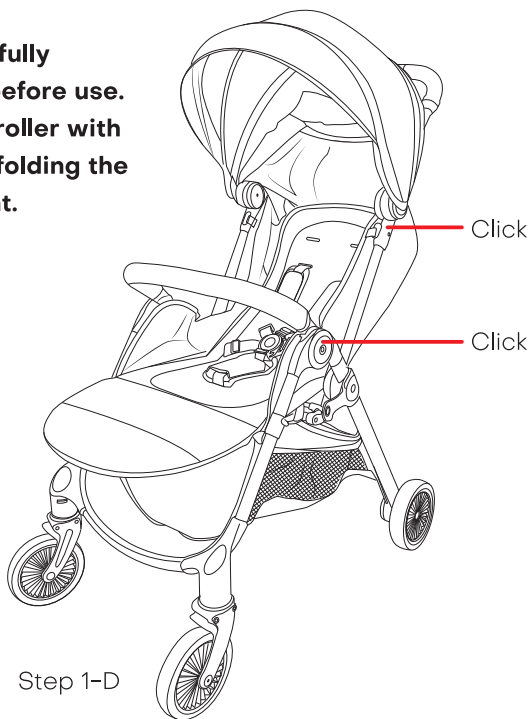


Step 1-D

Step 2.


Lean the stroller backwards, and assemble the wheels as depicted:

A) Push each Front Wheel into the front wheel housing until you hear a “Click”.

B) Push each Rear Wheel into the rear wheel housing until you hear a “Click”.

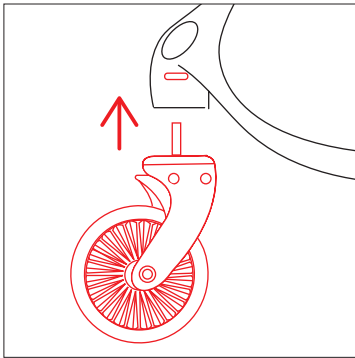

Step 2-A

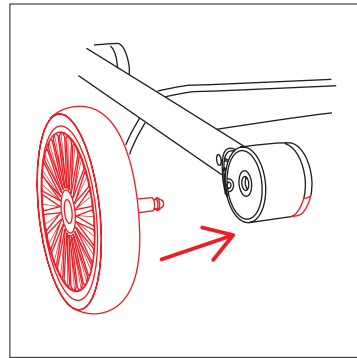


Step 2-B

⚠ WARNING: Pull on the wheels to ensure that they are securely attached to the stroller.

Step 3.

Line up the Guardrail anchors with the slots above the seat. Slide the Guardrail into place until you hear a “Click”.

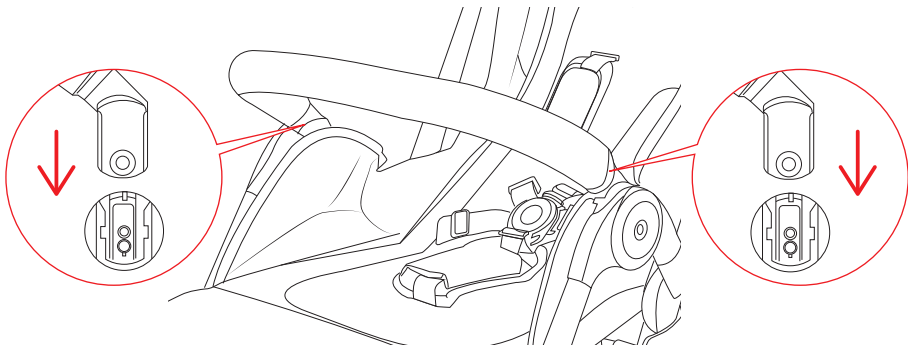


⚠ WARNING:

DO NOT put a child car seat inside the stroller.

The Guardrail must be securely attached before use.


DO NOT detach the Guardrail while the infant is inside.

DO NOT use the Guardrail to carry the stroller with a child inside.

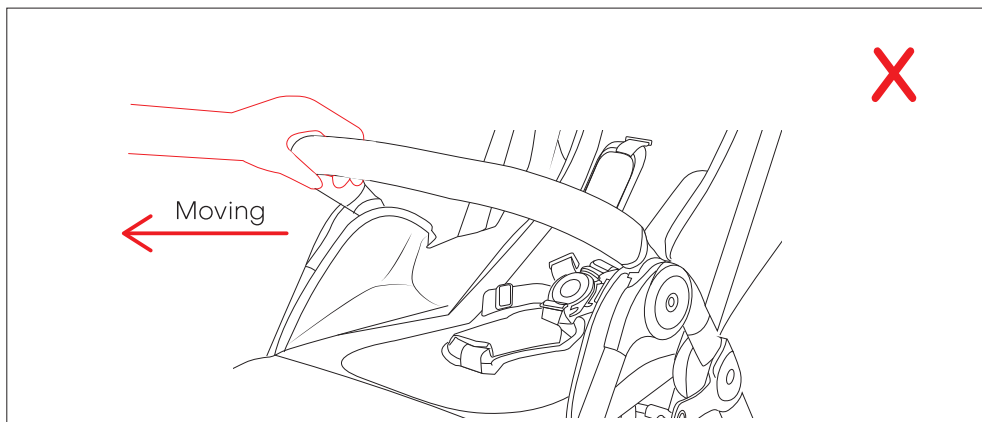

Step 4.

The product is ready for use.

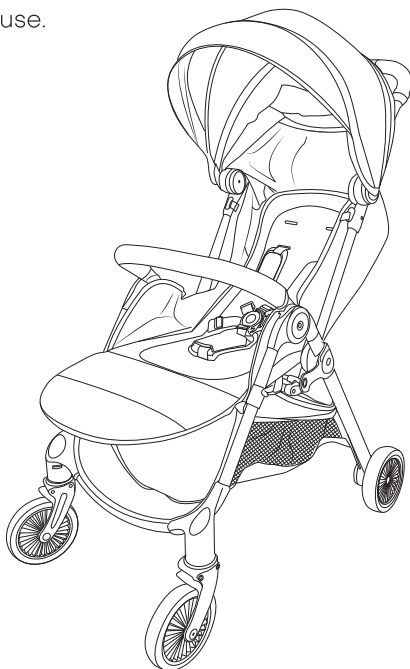


⚠ WARNING: Check every part is tight before use.

USING THE STROLLER



Using The Safety Harness:

The Safety Harness comprises 5 straps that secure the child from different angles.

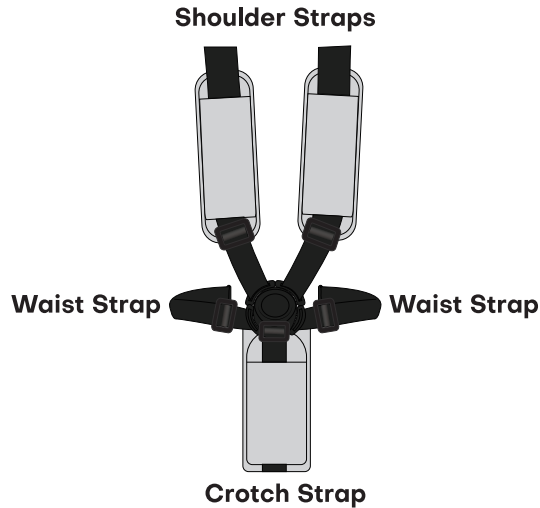


To secure the child, you should:


- A) Place the child in the stroller seat and bring the safety harness around the child's waist and over the child's shoulders.
- B) Connect the Shoulder Strap with the Waist Strap to the buckle on the Crotch Strap, and then repeat on the opposing side to fully join all the straps together.

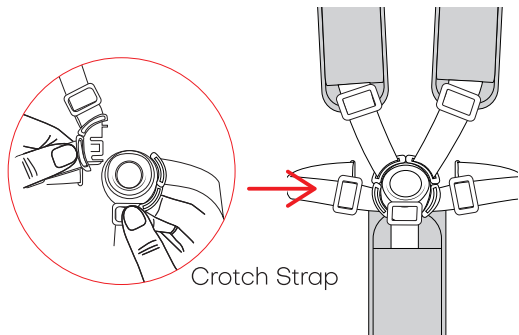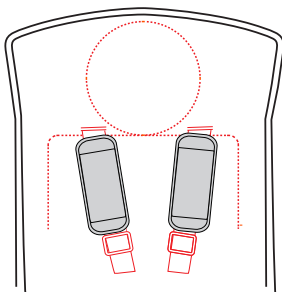

C) Use the adjustable buckle to ensure a snug fit.

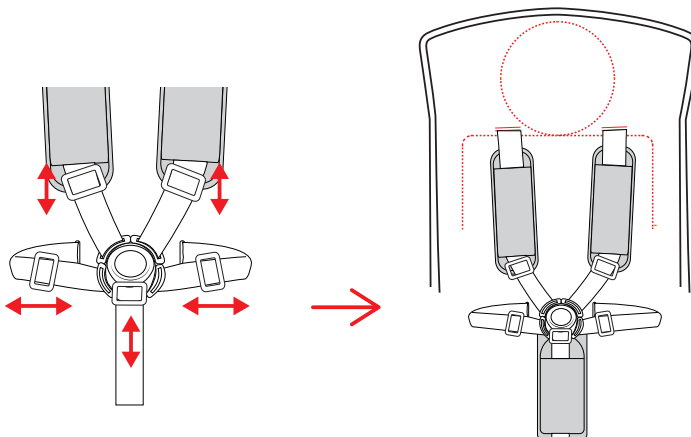

To release the harness, push on the center clasp to let the buckles pop free.

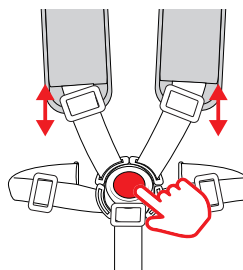


Center Clasp

⚠ WARNING: ALWAYS use the safety harness to avoid injury from falling or sliding out.

⚠ STRANGULATION HAZARD: Child can become strangled in loose straps. **NEVER** leave a child in the seat unattended when straps are loose or undone.

To adjust the harness height, you should:

Adjust to child's shoulder

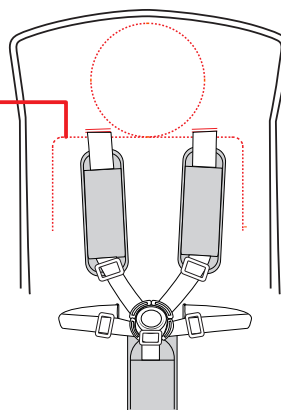


A) Place the Shoulder Straps level with the top of the child's shoulders.

B) If the height of the straps needs to change, remove the securing buckles from the seatback and re-secure them through another slot on the seatback.


C) Grip and pull the securing buckles through the slots and ensure they are flat against the seatback.

Front Side

Backside

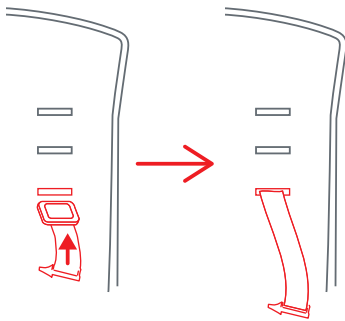



Backside

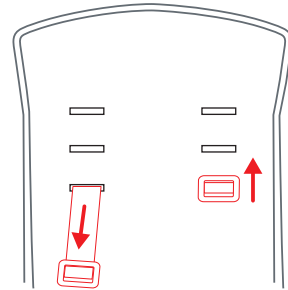


⚠ WARNING: ALWAYS ensure the securing buckles are fully through the seatback and sitting flat against the hard part of the seatback.

Seatback Adjustment:

A) To recline the seatback, press the clip on the strap behind the seatback, lower the clip down to the desired position, and then release the clip.

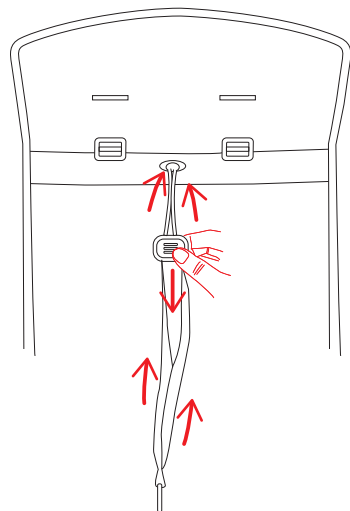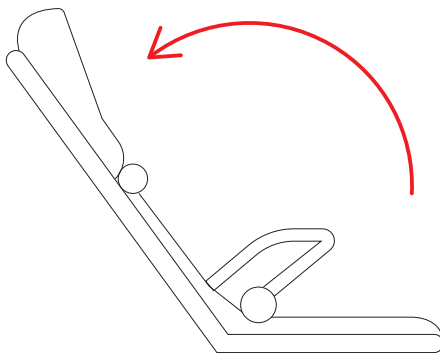

B) To lift the seatback, press the clip and raise it to the desired position, and then release the clip.

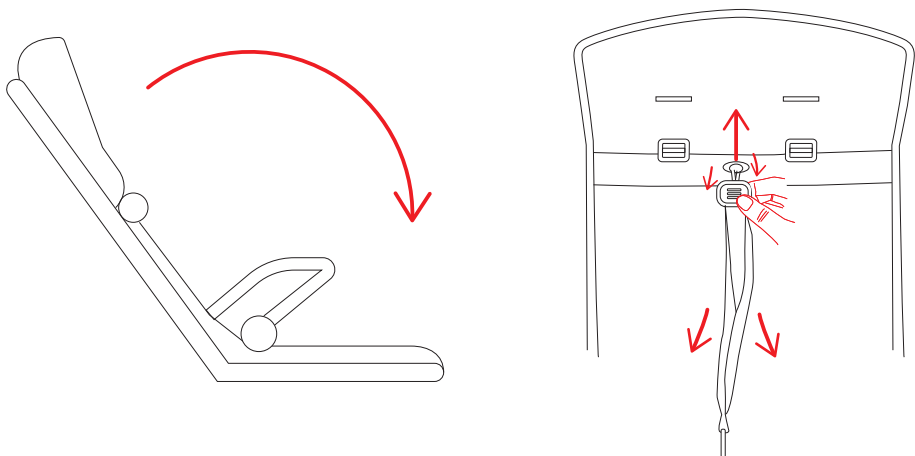


⚠ WARNING: The upright position should be used **ONLY** for a child that is at least **6 months** old.


⚠ WARNING: **ALWAYS** re-adjust the safety harness after adjusting the seatback.

The Brakes:

A) To lock the wheels, press down the brake pedal on the rear wheel (right-side).

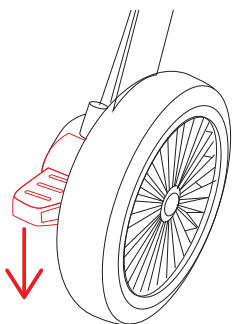

B) To release the brakes, lift the brake pedal.

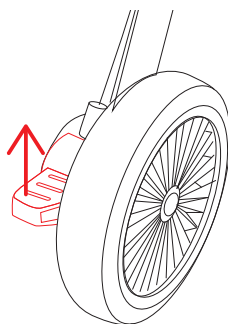

⚠ WARNING:


ALWAYS apply brakes when the stroller is not being pushed.

NEVER leave the stroller unattended in any situation.

Check that the stroller cannot roll after engaging the brakes.

Using the Storage Basket:

The storage basket is accessed from the rear of the stroller underneath the seat. Placing the seatback in the upright position may help better access the storage basket.

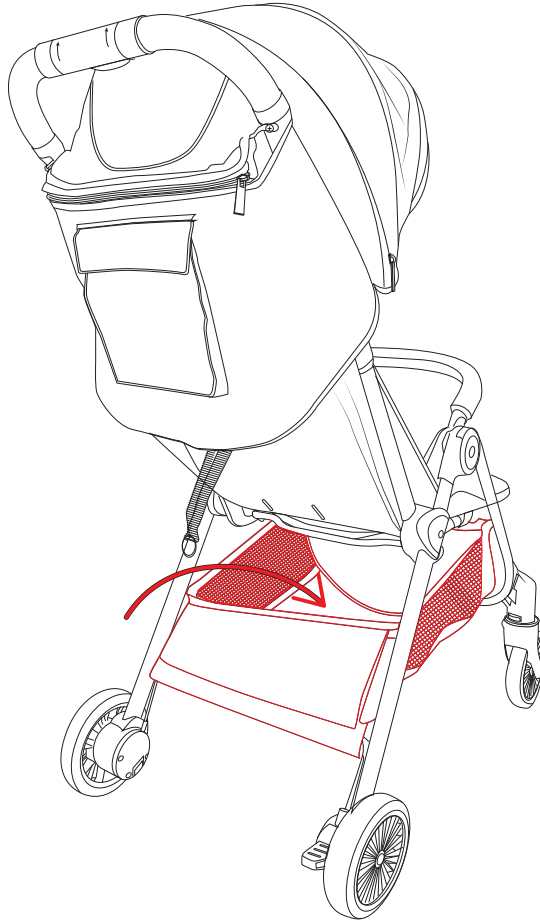


WARNING:


**The maximum bearing weight of the storage basket is 4.4lb (2kg).
NEVER put a child in the storage basket.**

Foot Support Adjustment:

A) Lift to raise the Foot Support until you hear a “Click”.


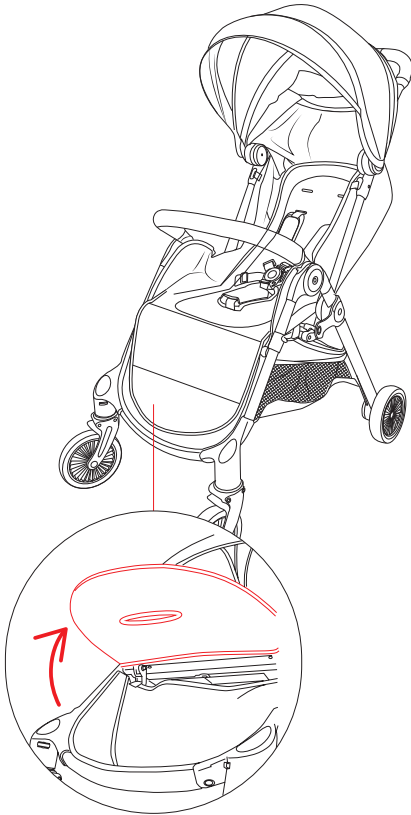


B) Pull the release handle underneath to lower the Foot Support.

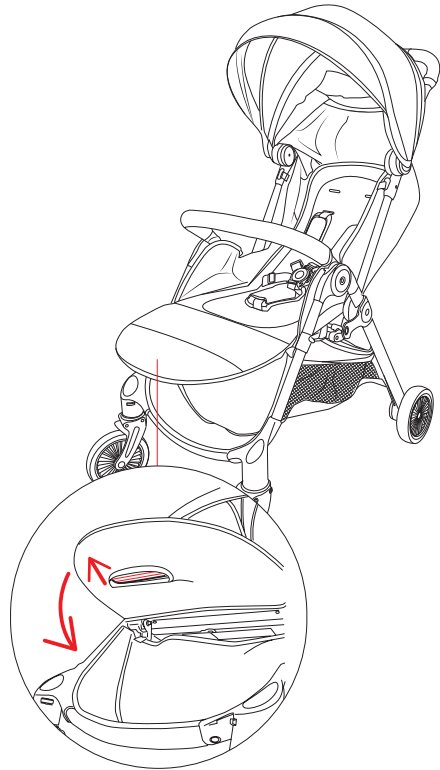


The Canopy:

A) Push forward on the front edge of the canopy to open it; the canopy may be extended further by unzipping the zipper.

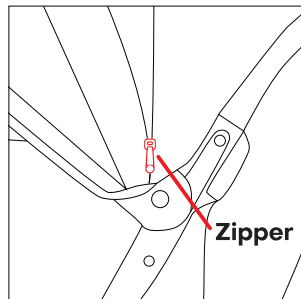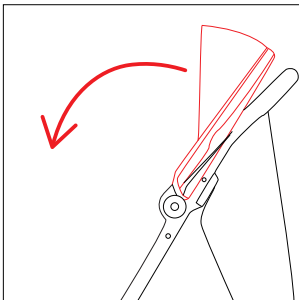


B) Pull backwards on the front edge of the canopy to fold it up.

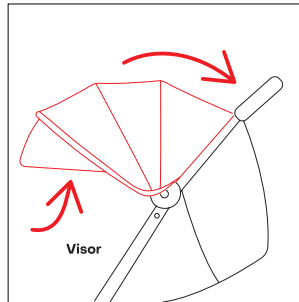

Using the Window:


Use the magnetic snap fasteners to open and close the view window at the top of the canopy.

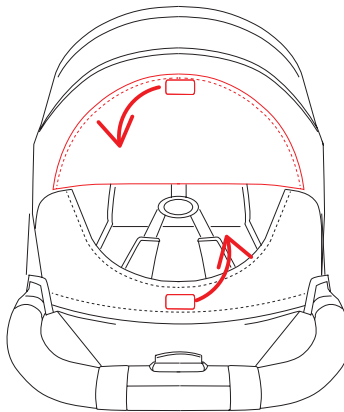

FOLDING THE STROLLER

Step 1.


Press the brake pedal to lock the wheels.

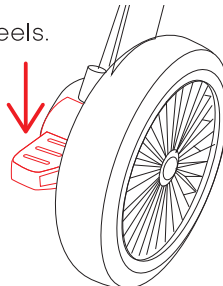

⚠ WARNING: DO NOT fold the stroller with a child nearby. Take care when unfolding the stroller to prevent finger entrapment.


Step 2.

Push in the Fold Button on the top handle and rotate the top handle forward.

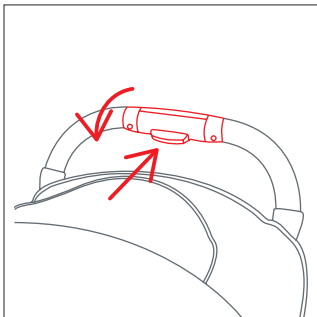



Step 3

Push forward and downward on the stroller. Then let go of the handle to allow gravity to fold the stroller frame.

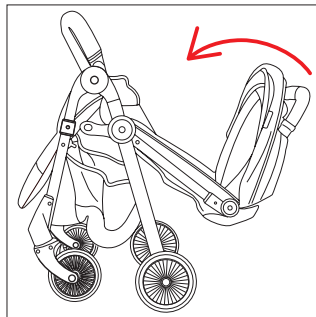

Step 4.


Ensure the Fold Latch is secured in position when the frame is fully folded. May require lifting the sliding tab.

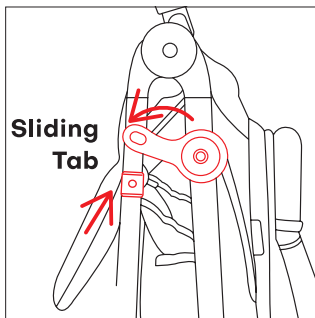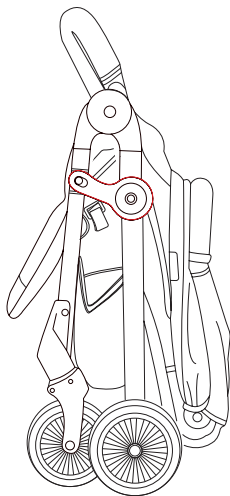

UNFOLDING THE STROLLER


Step 1.

Unlock the Fold Latch by pulling it outward.

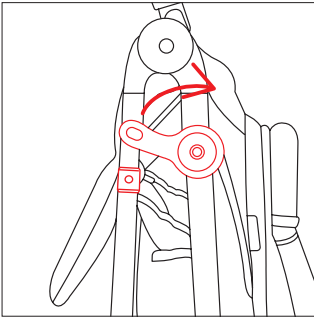


Step 2.

Press in the Fold Button on the top handle and rotate the top handle forward.

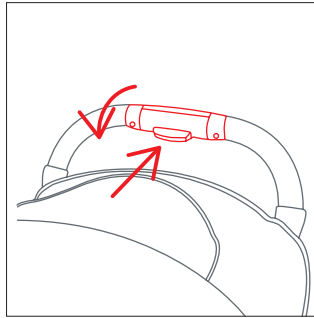


Step 3.

Pull upward on the stroller's top handle to extend the frame.

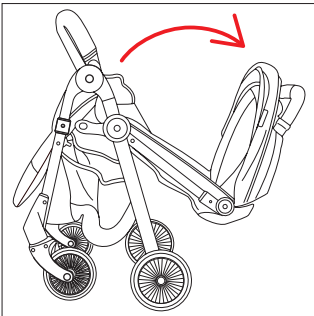

Step 4.

Release the handle to let it lock into position. You'll hear two "Clicks" when the stroller is fully extended.

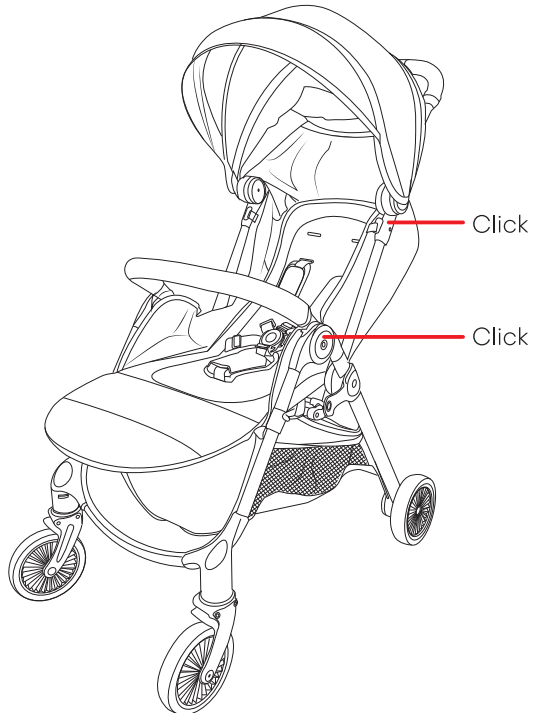

⚠ WARNING: The stroller MUST be fully extended before use.


⚠ WARNING: DO NOT unfold the stroller with a child nearby. Take care when unfolding the stroller to prevent finger entrapment.

MAINTENANCE

This product requires regular maintenance. The cleaning and maintenance of the crib MUST ONLY be carried out by an adult.


To Release Front Wheels:

Press the release latch and pull the front wheels out.

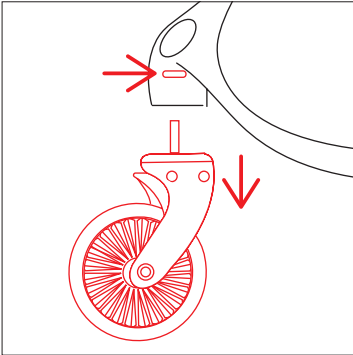


To Release Rear Wheels:

Press the release latch and pull the rear wheels out.

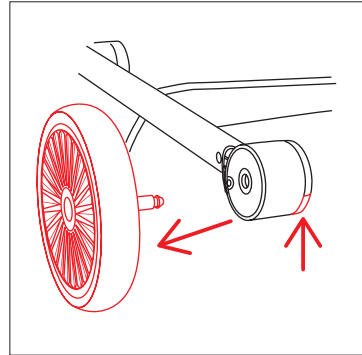


Guardrail Release:

Press buttons on both sides and pull to remove the Guardrail.

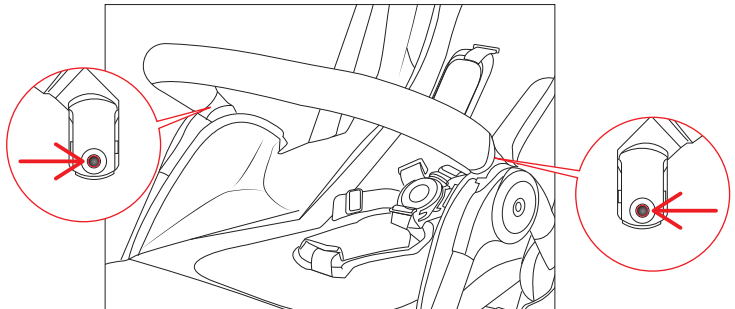


Seat Snap Buttons:

Check both sides of the seat fabric to ensure it is properly attached.

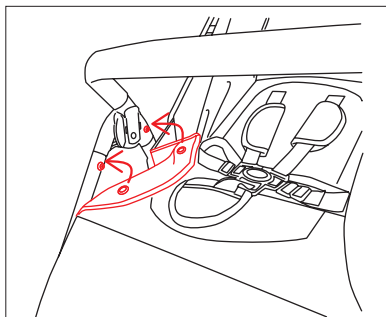


Seat Fabric Support:

Check the straps underneath the seat are both pulled tightly and are properly attached with the Velcro fasteners.

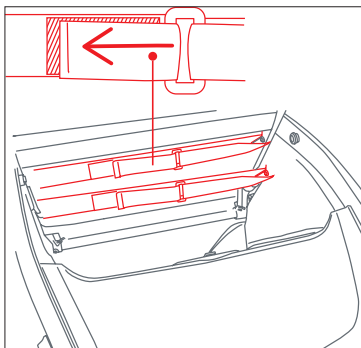

Canopy Fabric:

Check the canopy is securely attached to the seatback with the Velcro fasteners.

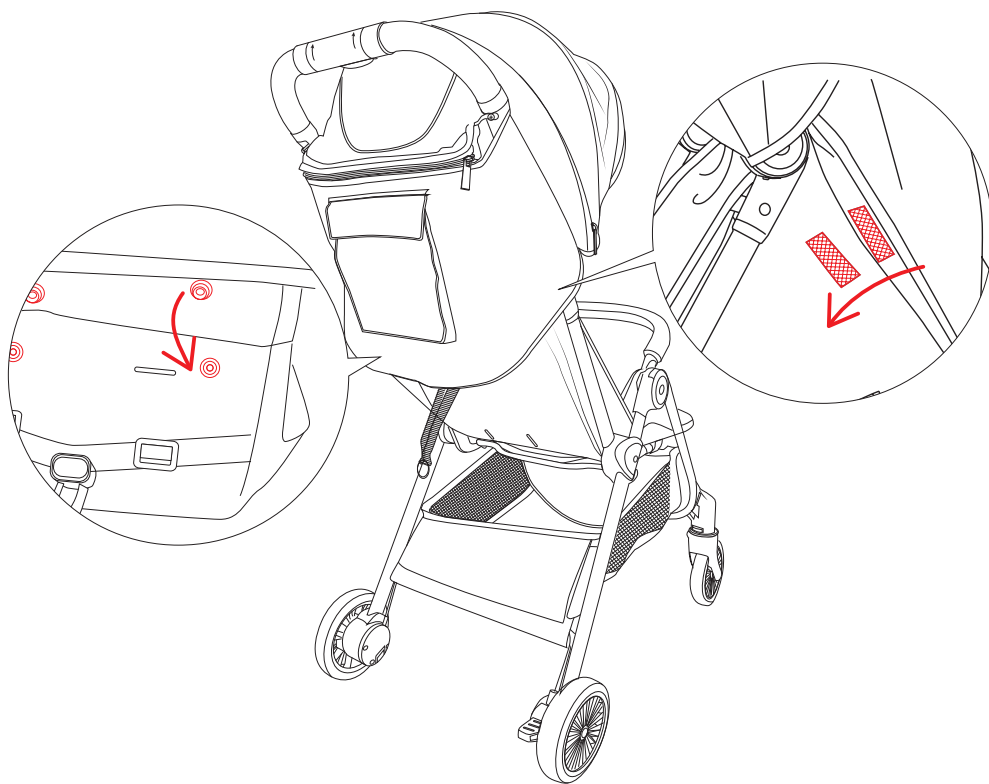

⚠ WARNING:

DO NOT use the product if there is any irreparable damage.

Use replacement parts provided **ONLY** by Besrey.

Regularly check your stroller for loose screws, worn parts, torn material or stitching.

CARE AND CLEANING

Cleaning Seat Pad:

- Spot clean ONLY
- Surface wash small spots with a mild solution of soap and water
- Rinse with water to remove the soap solution
- Wipe or air dry

Cleaning Stroller:

- Wipe or air dry
- Wipe surfaces with water to remove the soap solution
- Surface wash stroller frame, plastic parts, and fabric with a mild solution of soap and water

besrey

www.besrey.com

support@besrey.com

Mon-Fri, 8 am – 6 pm PST

FUJIAN BESREY BABY PRODUCTS CO., LTD.

Made in China

Importer: STIGER, INC.

Address: 1370 VALLEY VISTA DR. STE 200-208 DIAMOND BAR,
CALIFORNIA 91765-0208, UNITED STATES OF AMERICA